

MICRO-C MIGHTY-1C • MIGHTY-5C SERIES B OWNERS MANUAL



ELECTRO-NUMERICS, INC.

TABLE OF CONTENTS

SECT.	PAGE
1. TABLE OF CONTENTS.....	3
2. PRODUCT INTRODUCTION.....	4
3. RECEIVING & UNPACKING.....	5
4. SAFETY CONSIDERATIONS.....	5
5. CONNECTOR WIRING INFORMATION	6
6. FRONT PANEL SETUP KEYS, MICRO-C & MIGHTY-1C.....	8
7. FRONT PANEL SETUP KEYS, MIGHTY-5C.....	10
8. ENABLING & LOCKING OUT MENU ITEMS	11
9. DUAL-CHANNEL PULSE OR AC INPUT SIGNAL CONDITIONER (FR)	12
10. PROCESS RECEIVER & TOTALIZER SIGNAL CONDITIONER (VF)	29
11. QUADRATURE SIGNAL CONDITIONER (QD)	37
12. SERIAL INPUT METER / REMOTE DISPLAY OPERATION.....	46
13. DUAL RELAY OUTPUT OPTIONS	48
14. ANALOG OUTPUT OPTION.....	51
15. SERIAL COMMUNICATION OPTIONS	53
16. EXCITATION OUTPUTS & POWER SUPPLIES	57
17. DIGITAL CONTROL INPUTS	59
18. INSTRUMENT SETUP VIA PC.....	60
19. CUSTOM CURVE LINEARIZATION.....	63
20. METER CALIBRATION	64
21. MECHANICAL ASSEMBLY & PANEL MOUNTING, MICRO-C.....	65
22. MECHANICAL ASSEMBLY & PANEL MOUNTING, MIGHTY-1C.....	67
23. MECHANICAL ASSEMBLY & PANEL MOUNTING, MIGHTY-5C.....	69
24. SPECIFICATIONS, MICRO-C, MIGHTY-1C, MIGHTY-5C	71
25. GLOSSARY OF TERMS.....	74
26. WARRANTY	79
27. REPAIR POLICY	79
28. ELECTRO-NUMERICS, INC. PRODUCTS	79

Owners Manual
500-253 Revision P
January, 2011

2. PRODUCT INTRODUCTION

The Micro-C Series digital displays are versatile, cost effective solution to a wide range of monitoring and control applications including frequency, rate, total, period, time, phase, position, flow, and serial input display. Setup can be via front panel pushbuttons or a PC, and allows the user to customize the meter for a specific application, with direct readout in engineering units. Selective security lockout of front panel setup protects against accidental or unauthorized setup changes, and simplifies meter use.

Choice of digit & case sizes: **Micro-C** .56" red or green digits & 1/8 DIN case; **Mighty-1C** 1" digits; **Mighty-5C**, 5" super-bright indoor/outdoor digits in a NEMA-4X designed case.

A dual-channel pulse or AC input signal conditioner and powerful firmware accommodate a wide range of applications, including rate/frequency, totalizing, timing, phase angle, and duty cycle. Frequency and rate are determined by taking the inverse of period. Fast read rate provides an accurate display of peak or valley signals, and quick response for control applications. Adaptive filtering ensures stable displayed readings and outputs while responding rapidly to actual changes of the input signal. A high stability quartz crystal and digital calibration of all ranges are used for rate and analog measurements.

A process receiver & totalizer signal conditioner accepts 4-20 mA, 0-1 mA or 0-10V analog signals for display of rate or position. Square root is selectable for use with differential pressure flow transducers.

A quadrature signal conditioner provides a highly accurate display of position, angle, or rate.

Alarm and control can be provided by two optional Form C (8A @ 250 Vac) contact relays or two solid state relays. The relays can be configured to be latching or non-latching, and to be energized above or below the setpoint, or in a fail-safe mode.

An analog transmitter output scaled to the display can be provided by an optional isolated analog output board with selectable 0-20 mA, 4-20 mA and 0-10V ranges.

Five communication options (RS232/USB RS485/USB or R485-Modbus) can convert the meter from stand-alone to system use, with interface with computers, PLC's or other meters. PC-compatible Instrument Setup software is available at no charge to set up the units via the serial interface.

Operation as a 6-digit serial input meter is achieved with a serial interface and no signal conditioner. The unit can serve as a remote display with serial data from a computer, PLC or other meter. With a dual relay board, it can provide local alarm or On/Off control. With an analog output board, it can also serve as a local transmitter.

The Micro-C & Mighty-1C power supplies use a lightweight, high-efficiency switching type that can operate from either AC or DC voltages and complies with safety regulations. The standard supply allows these meters to be powered worldwide from 95 to 240 Vac $\pm 10\%$. An optional supply operates from batteries or low voltage sources such as 8-34 Vac. A built-in isolated excitation supply with jumper-selectable 5, 10 or 24 Vdc output levels can eliminate the need for an external sensor power supply. The Micro-C & Mighty-1C cases are sealed to NEMA-4X (IP65) when panel mounted. Model Mighty-5C features an aluminum NEMA-4X case for surface or bracket mounting suitable for mounting outdoors. All wiring is via removable plugs conforming to IEC950 safety standards. All output options are isolated from meter and power ground to 250 Vac.

3. RECEIVING & UNPACKING

Your meter was carefully tested and inspected prior to shipment. Should the meter be damaged in shipment, notify the freight carrier immediately. In the event the meter is not configured as ordered or the unit is inoperable, return it to the place of purchase for repair or replacement. Please include a detailed description of the problem.

4. SAFETY CONSIDERATIONS



Warning: Use of this equipment in a manner other than specified may impair the protection of the device and subject the user to a hazard. Visually inspect the unit for signs of damage. If the unit is damaged, do not attempt to operate.

Caution:

- Your meter can be powered with AC (mains) from 95-240 Vac $\pm 10\%$ (90-300 Vdc) with the high voltage power supply option, or 10-34 Vac $\pm 10\%$ (10-48 Vdc) with the low voltage power supply option (Micro-C and Might-1C only). Verify that the proper power option is installed for the power to be used. Your meter has no AC (mains) switch. It will be in operation as soon as power is connected.
- The 95-240 Vac (95-300 Vdc) mains connector (P1 Pins 1-3) is colored Green to differentiate it from other input and output connectors. The 10-34 Vac (10-48 Vdc) mains connector is colored Black.
- Do not make signal wiring changes or connections when power is applied to the meter. Make signal connections before power is applied. If reconnection is required, disconnect the AC (mains) power before such wiring is attempted.
- To prevent electrical or fire hazard, do not expose the meter to excessive moisture.
- Do not operate the meter in the presence of flammable gases or fumes; such an environment constitutes a definite safety hazard.
- This meter is designed to be mounted in a metal panel. Verify the panel cutout dimensions, and mount according to instructions.

Symbols used



Caution (refer to accompanying documents)



Caution, risk of electric shock.



Equipment protected throughout by double insulation or reinforced insulation.



Earth (ground) terminal.




Both direct and alternating current.

Operating environment: Model Micro-C meters are Class II (double insulated) equipment designed for use in Pollution Degree 2 and Installation Category II (over-voltage category) environments. Models Mighty-1C and Mighty-5C do not meet this requirement.


5. CONNECTOR WIRING INFORMATION

CONNECTORS

Connectors for signal and power are U/L rated screw-clamp terminal blocks that plug into mating jacks on the printed circuit board. Communication connectors are a single RJ11 plug for RS232, dual RJ11 plugs for RS485 and dual RJ45 plugs for RS485-Modbus.

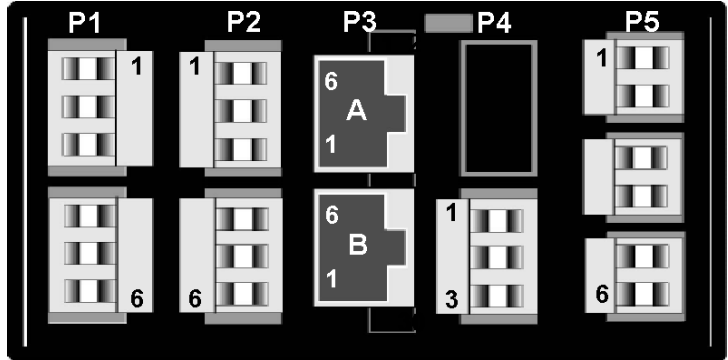

P1 - POWER AND DIGITAL CONTROLS

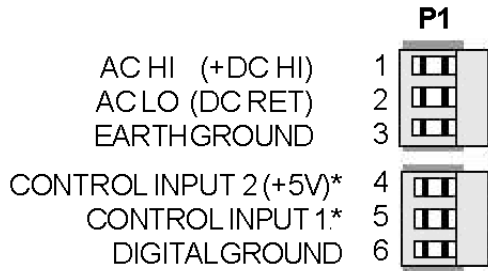


* Note: external control inputs 1 and 2 are menu selectable.




Caution: P1, pins 4, 5, and 6 may have hazardous voltages present.

P5 - SIGNAL INPUT

DUAL CHANNEL PULSE INPUT

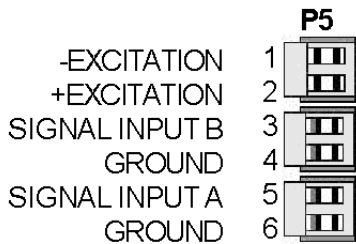


QUADRATURE INPUT (DIFFERENTIAL)

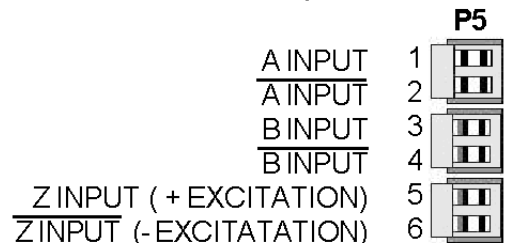


Note: Z input or excitation is jumper selectable

VOLTAGE-TO-FREQUENCY CONVERTER

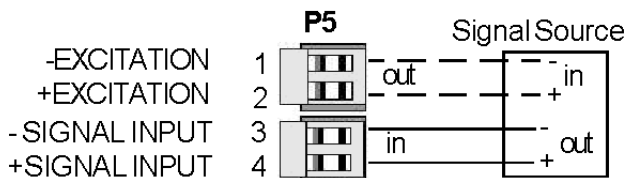

QUADRATURE INPUT (SINGLE-ENDED)

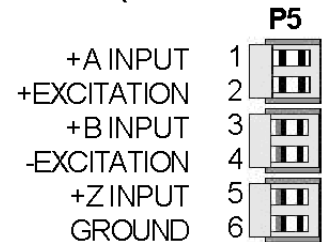


P2 - SETPOINT CONTROLLER


DUAL MECHANICAL RELAY OUTPUTS




DUAL SOLID STATE RELAY OUTPUTS

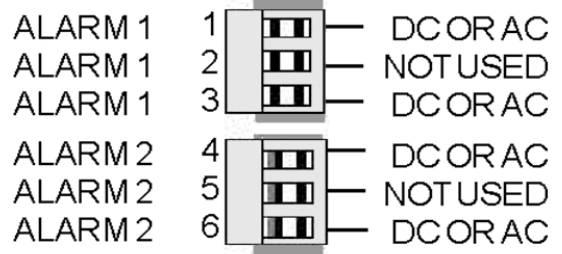

QUAD MECHANICAL RELAY OUTPUTS

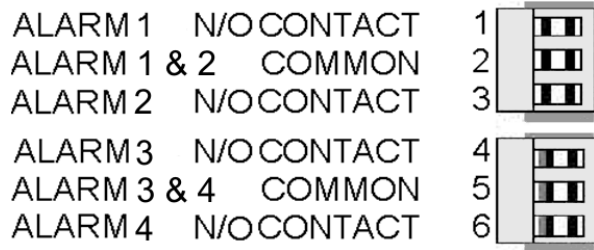


QUAD SOLID STATE RELAY OUTPUTS

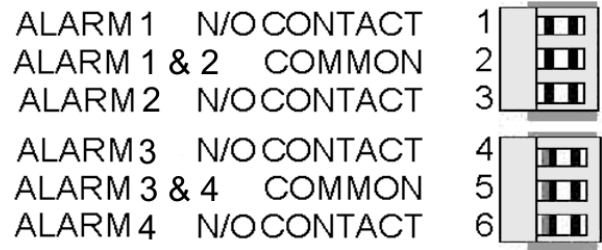

P3 - SERIAL COMMUNICATIONS

RS232 INTERFACE

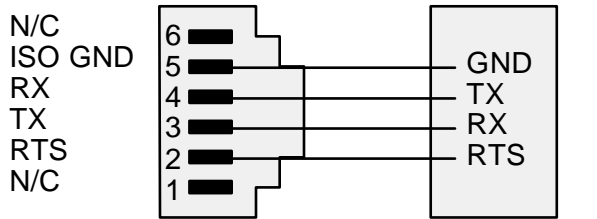


P4 - ANALOG OUTPUT


UNIPOLAR (SINGLE OR DUAL) AO1 AO2



 
BIPOLAR (SINGLE ONLY)




RS485 INTERFACE - FULL DUPLEX

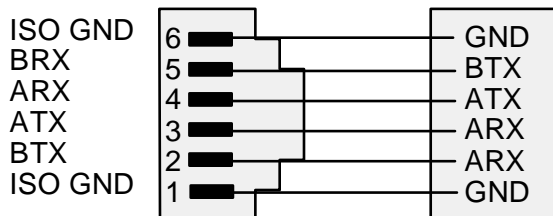


RS485 INTERFACE - HALF DUPLEX

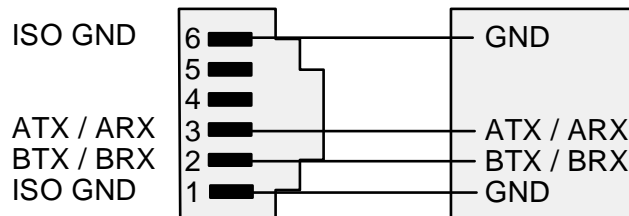


RS485-MODBUS - FULL DUPLEX

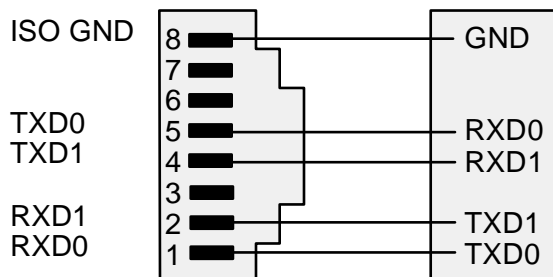

RS485-MODBUS - HALF DUPLEX

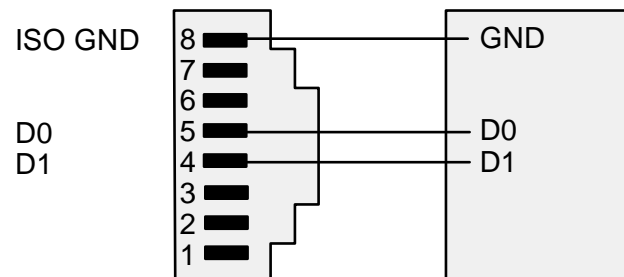

6. FRONT PANEL SETUP KEYS, MICRO-C & MIGHTY-1C

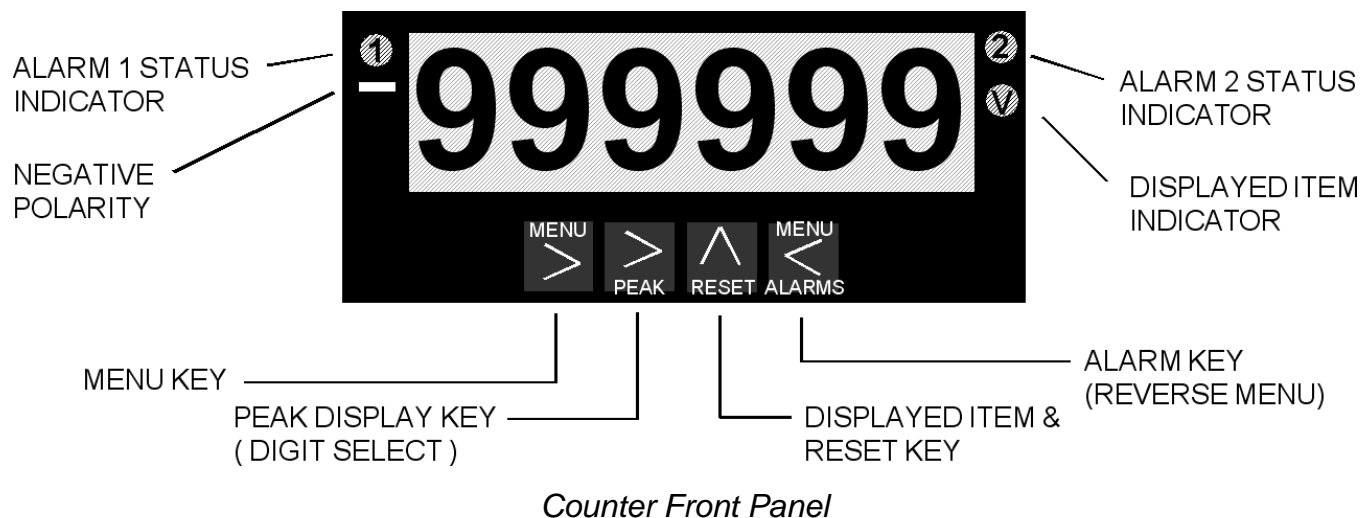

There are four front panel keys, which change function for the **Run Mode** and **Menu Mode**, effectively becoming eight keys. The keys are labeled with alphanumeric captions (MENU, PEAK, RESET, ALARMS) for the Run Mode and with symbols (> right arrow, ^ up arrow, < left arrow) for the Menu Mode.


FRONT PANEL LOCKOUT


The Menu Mode will not work with most meters shipped from the factory, since all menu items have been disabled in software and a lockout jumper is in place. This jumper needs to be removed for the Menu Mode to work, and values under **Loc 1** through **Loc 4** need to be set to "0" via the front panel for these menu items to be available. See Section 9. The paragraphs below assume that all lockout features have been removed.


MENU MODE KEY ACTION

In the Menu Mode, pressing a key momentarily advances to the next menu item. Holding down a key automatically advances through multiple menu items for fast menu navigation.

KEYS IN RUN MODE

 **MENU Key.** Pressing *MENU* from the Run Mode enters the Menu Mode. Pressing *MENU* repeatedly will step the meter through the various menu items (if these have not been locked out) and then back to the Run Mode.

 **PEAK Key.** Pressing *PEAK* causes the peak value of the input signal to be displayed. The peak display blinks to differentiate it from the normal present value display. Pressing *PEAK* again will return the display to the present value.

 **RESET Key.** Pressing *RESET* with *PEAK* resets peak and valley values. Pressing *RESET* with *ALARMS* resets latched alarms. Pressing *RESET* with *MENU* performs a

meter reset (same as power on). Pressing and releasing *RESET* without pressing another key, changes the displayed item if the mode has multiple items. For Item 1, the V LED is out. For Item 2, the V LED is on. For Item 3, the V LED is flashing.



ALARMS Key. Pressing *ALARMS* once displays the setpoint for Alarm 1. Pressing it again displays the setpoint for Alarm 2. Pressing it again returns to the present value. After 30 seconds, the meter automatically returns to the present value. Timing is automatically reset whenever the *ALARMS* key is pressed.

KEYS IN MENU MODE



Right Arrow Key (MENU). Pressing \gt steps the meter through all menu items that have been enabled and then back to the Run Mode. With the dual-channel pulse input signal conditioner board and no option boards, available menu items will be **InPut**, **SEtUP**, **ConFiG**, **dSPYno**, etc. Actual menu items will vary depending on the *Input* selection and boards detected in the meter. If a change has been made to a menu item, that change is saved to non-volatile memory when the \gt key is pressed next, and **StoreE** is displayed briefly.



Right Arrow Key (Digit Select).

- Pressing \gt from the *InPut* menu brings up all meter functions available with the meter's signal conditioner. For the dual-channel pulse input signal conditioner, these are **rAtE**, **PERiod**, **totAL**, **ti_Int**, **Stop t**, **PHASE**, **duty C**.
- Pressing \gt from most menus sequentially selects digit positions 1 - 6, as indicated by a flashing digit: **000000**, **000000**, **000000**, **000000**, **000000**, **000000**.
- Pressing \gt from *dEC.Pt1* brings up a decimal point display of type **11.1111**. Pressing \gt from *dEC.Pt2* brings up a decimal point display of type **22.2222**.




Up Arrow Key (Value Select).

- Pressing \wedge from a selected meter function, such as **rAtE**, will select the a specific operating mode within that function, such as **A_OnLy**. Always press the MENU key to save your selection. Do not press the \wedge key to the right, or your selection will be lost.
- Pressing \wedge for a flashing digit position or decimal point position will increment that item. Pressing the MENU key will save any changes.



Left Arrow Key (Reverse Menu). Pressing \lt has the same effect as the MENU key, except that menu items are brought up in reverse order.


7. SETUP KEYS, MIGHTY-5C

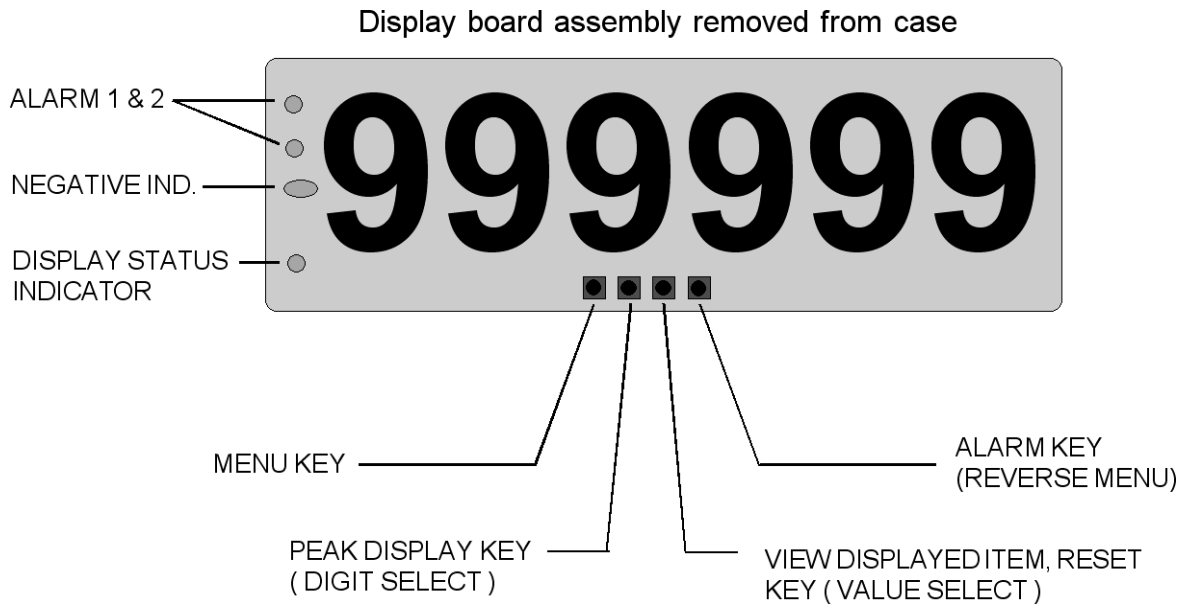

Mighty-5C Front Panel

8. ENABLING & LOCKING OUT MENU ITEMS

For security reasons and ease of operation, any and all menu items may be disabled or "locked out" so that they are no longer directly accessible from the front panel. Each function to be enabled is set to "0" and each function to be disabled is set to "1" in menu items *Loc 1-4*. These menu items can in turn be locked out by installing an internal hardware jumper. With the jumper installed, the operator only has access to enabled menu items. With the jumper removed, the operator also has access to the *Loc 1-4* menu items.

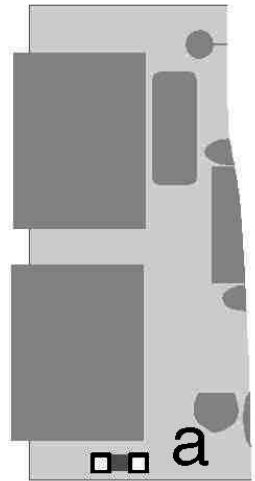

SETTING HARDWARE LOCKOUT JUMPER

To access the lockout jumper, remove the rear panel per Sections 21, 22 & 23 and locate jumper "a" in the lower portion of the power supply board next to the input connectors (see figure at right).

SETTING SOFTWARE LOCKOUTS

When setting up the meter, it may be necessary to enable specific menu items by setting the corresponding lockout digit to 0. Be sure to reset the lockout digit to "1" if you do not want the menu item to be changed by an operator.

Loc 1 **Loc 2** **Loc 3** **Loc 4**

Press the > MENU key until *Loc 1*, *Loc 2*, *Loc 3* or *Loc 4* is displayed, as desired. **Note:** the lockout jumper must be removed (see above).

111111

Press > to display the lockout status, consisting of 0's and 1's. The left digit will flash. Press > again to step to the next digit, which will flash.

000000 123456

Press ^ to set the flashing digit to "0" to enable the menu item or to "1" to disable. Press *MENU* to enter. See the table to the right for list of menu items that can be enabled or disabled.

Enabled / Disabled Menu Items

Loc 1

- 3 - Input type selection
- 4 - Setup, Config, Dspyno
- 5 - Gate time, timeout, batch setup
- 6 - Filter setup

Loc 2

- 3 - Slope, decimal points
- 4 - Scale, offset, resolution, 2-coord.
- 5 - Alarm config, DevHy
- 6 - Alarm setpoint programming

Loc 3


- 3 - Analog output setup & scaling
- 4 - Serial communications configuration
- 5 - Calibration
- 6 - Change displayed Item #

Loc 4

- 3 - View peak value
- 4 - View alarm setpoints
- 5 - Front panel resets (peak & latched alarms)
- 6 - Front panel reset (cold reset only)

9 DUAL CHANNEL PULSE OR AC INPUT SIGNAL CONDITIONER

The dual channel signal conditioner board is used for the frequency, rate, period, timing, batch control, phase and duty cycle meter functions. The board needs to be configured via jumpers for the input signal type and level. It is recognized by the meter software, which will bring up the applicable menu items. The dual channel pulse input signal conditioner does not require calibration, since the quartz crystal oscillator used for frequency and timing applications is located on the counter main board.

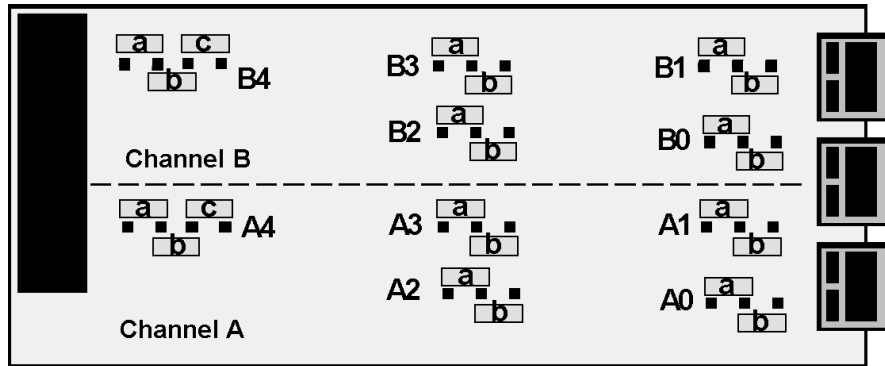

Jumper Settings for Expected Signal Levels

The jumper settings for Channel A (A2 & A3) and Channel B (B2 & B3) need to be set for the expected signal voltage. This voltage must be outside of the high and low thresholds per the following table, or the meter will not operate properly. The larger the difference between the high and low thresholds, the more immune the meter is to input signal noise.

A3	A2	Input must be		A3	A2	Input must be		A3	A2	Input must be	
		below	above			below	above			below	above
-	a	-12 mV	+12 mV	a	a	+30 mV	+60 mV	b	a	-60 mV	-30 mV
-	b	-150 mV	+150 mV	a	b	+350 mV	+600 mV	b	b	-600 mV	-350 mV
-	-	-1.15V	+1.15V	a	-	+1.25V	+2.1V	b	-	-2.1V	-1.25V

Jumper Settings for Frequency Response, Bias Resistor, Debounce Time

Pull-up or pull-down resistors are used with open collector devices and dry contact closures to provide input signal bias. They should not be connected for other inputs. Debounce circuitry keeps the meter from counting extra pulses due to contact bounce.

Function	Block	Jumper	Setting
Frequency Response	A0 & B0	-	1 MHz max
		b	30 kHz max
		a	250 Hz max
Bias Resistor	A1 & B1	a	10 kOhm pull-up to 5V
		b	10 kOhm pull-down to -5V
Contact Debounce	A4 & B4	b	None
		a, c	3 msec
		c	50 msec

Common Jumper Settings

Input Type	Vmax	A0 & B0	A1 & B1	A2 & B2	A3 & B3	A4 & B4
Logic levels	250V	-	-	-	a	b
NPN open collector	NA	b	a	-	a	b
PNP open collector	NA	b	b	-	b	b
Contact closures	NA	a or b	a	-	a	a, c
Line frequency	250V	b	-	-	-	a, c
Turbine flow meter	250V	b	-	a	-	b

OVERVIEW OF OPERATING MODES

RATE & FREQUENCY MODES

Frequency in Hz is determined by timing an integral number of pulses over a user-specified *gate time* from 0 to 199.99 sec and taking the inverse of average period. The typical display update rate of the meter is gate time + 1 period + 30 ms. Selecting a longer gate time produces a more stable reading as more cycles are averaged, but slows down the update rate. At very low frequencies, the update rate is controlled by the period. A *time-out* from 0 to 199.99 sec is also selectable. This is the time the meter waits for a signal to start or end a conversion. If the signal is not received before the *time-out* ends, the meter reads zero. The longer the time-out, the lower the minimum frequency the meter can display.

With a *scale factor* of 1 and *multiplier* of 1, frequency is displayed in Hz with no decimal point. Applying a multiplier from 1 to 100000 (in decade steps) and setting the decimal point increases resolution (0.1 to 0.00001 Hz). Decreasing the multiplier from 1 to 0.00001 (in decade steps) and setting the decimal point allows display in kHz or MHz. Note that the same 100 kHz frequency can be displayed as 100000 Hz or 100.000 kHz simply by moving the decimal point.

DISPLAY FREQUENCY IN Hz WITH 1 Hz RESOLUTION

Dig. No.	S	1	2	3	4	5	6
InPut				r	A	t	E
SEtuP		0	0	0	0	0	0
ConFIG				1	0	0	0
dSPyno						0	1
GAtE t		0	0	0.	2	2	
ti Out		0	0	1.	0	0	
FiLteR		0	0	1	0	5	
SLOPE						0	1
DecPt1		1	1	1	1	1	1.
SCALE1		1.	0	0	0	0	0
OFFSt1		0	0	0	0	0	0
CALib	-	0	0	0	0	0	0

A O n L y

1

Do Not Change Calib

Application: Display frequency from 1 Hz to 999999 Hz with no decimal, display update rate of 4/sec, and adaptive moving average filter for 6 readings.

Solution: Set Input to "Rate A Only." Set Config to display to 999999 counts. Set Gate Time to .22 sec so that the display update rate becomes .22 sec +30 ms +1 period. Set Time-out to 1 sec, so that frequencies under 1 Hz are displayed as 0. Set filter for adaptive moving average with a 1.6 sec time constant. Apply a scale value of 1.00000 and multiplier of 1 for direct readout in Hz.

DISPLAY 0-50.00 RATE FROM 1-10 kHz INPUT, COORDINATES OF 2 POINTS METHOD

Dig. No.	S	1	2	3	4	5	6
InPut				r	A	t	E
SEtuP			0	0	1	0	0
ConFiG				1	0	0	0
dSPyno						0	1
GAte t			0	0	0.	2	2
ti Out			0	0	1.	0	0
FILtEr			0	0	1	0	5
SLOPE						0	1
DecPt1		1	1	1	1.	1	1
Lo In1		0	0	1	0	0	0
Lo rd1		0	0	0	0.	0	0
Hi In1		0	1	0	0	0	0
Hi rd1		0	0	5	0.	0	0
CALib	-		0	0	0	0	0

Do Not Change Calib

Application: Display 0-50.00 (with two decimal places) for 1-10 kHz input. Use coordinates of 2 points scaling method.

Solution: Set Input to “Rate A Only.” Select “coordinates of 2 points” scaling method under Setup. This is easier than scale and offset. Set DecPt1 to two places. Then enter the low input and desired low reading, and high input and desired high reading, as shown.

DISPLAY RATE IN GPM FROM 36.67 PULSE/GALLON TURBINE FLOW METER

Dig. No.	S	1	2	3	4	5	6
InPut				r	A	t	E
SEtuP			0	0	1	0	0
ConFiG				1	0	0	0
dSPyno						0	1
GAte t			0	0	0.	2	2
ti Out			0	0	0.	1	0
FILtEr			0	0	1	0	5
SLOPE						0	1
DecPt1		1	1	1	1.	1	1
Lo In1		0	0	0	0	0	0
Lo rd1		0	0	0	0.	0	0
Hi In1		0	0	3	6.	6	7
Hi rd1		0	0	6	0.	0	0
CALib	-		0	0	1	0	0

Do Not Change Calib

Application: Display rate in GPM to two decimal places from flow meter calibrated to 36.67 pulses/gallon.

Solution: Set Input to “Rate A Only. Under Setup, select “coordinates of 2 points” scaling method. Set DecPt1 to two places. Then enter the low input and desired low reading, and high input and desired high reading, as shown. In this example, we want to display 60.00 (GPM) from an input of 36.67 Hz. Note that the meter’s native rate measurements are in Hz. There will be 60 times more gallons per minute than per second.

Rate in engineering units is displayed from measured frequency by applying an appropriate *scale factor* and setting the decimal point. The *scale factor* consists of a *scale value* from 0.00000 to 9.99999 (fixed decimal point and settable digits) and a *scale multiplier* from 0.00001 to 100000 (in decade steps). When using the *coordinates of 2 points method* to scale the meter, the low input and high input frequencies are entered in Hz.

- **RATE A ONLY (A_OnLy)** displays rate or frequency for Channel A. The latter utilizes *SCALE1*, *OFFSt1* and *dECPt1*. Channel B is not used.
- **RATE A B (A__b__)** displays rate or frequency for Channel A as Item #1 or for Channel B as Item #2. The latter utilizes *SCALE2*, *OFFSt2* and *dECPt2*.
- **RATE A, TOTAL A (A_Atot)** (Extended counter) displays Rate for Channel A as Item #1 and Total for Channel A as Item #2 since last reset. Total may count down from an offset by entering a negative scale factor. Only used for non-linear inputs.

- **RATE A, TOTAL B (A_btot)** (Extended counter) displays Rate for Channel A as Item #1 and Total for Channel B as Item #2.
- **RATES A+B, A-B, AxB, A/B, A/B-1** (Extended counter) display arithmetic combinations of Rates A and B as Item #1, Rate A as Item #2, and Rate B as Item #3. With rates A and B scaled to produce a ratio close to 1 and an offset of -1, the special combination A/B-1, called “Draw,” can display percentage changes, such as elongation of material as it passes between rollers.

TOTAL MODES

DISPLAY TOTAL IN GALLONS FROM 36.67 PULSE/GALLON TURBINE FLOW METER

Dig. No.	S	1	2	3	4	5	6										
InPut				t	o	t	A	L	A					O	n	L	y
SEtuP			1	0	1	0	0	0									
ConFIG				1	0	0	0	0									
dSPyno							0	1									
GAtEt			0	0	0.	0	0	1									
SLOPE							0	1									
DecPt1		1	1	1	1.	1	1	1									
Lo In1		0	0	0	0	0	0	0									
Lo rd1		0	0	0	0.	0	0	0									
Hi In1		0	0	3	6.	6	7										
Hi rd1		0	0	0	1.	0	0										
CALib	-		0	0	0	0	0	0	Do Not Change Calib								

Application: Display total in gallons with two decimal places for flow meter calibrated to 36.67 pulses/gallon.

Solution: Set Input to “Total A Only.” Under Setup, select “Restore totals at power-on” and coordinates of 2 points method. This is the preferred scaling method. Set gate time to its minimum of 0.01 sec for smooth display updates. Set DecPt1 to two places. Then enter low input and desired low reading, and high input and desired high reading for display of 1.00 for 36.67 pulses, as shown.

DISPLAY SIMULTANEOUS RATE & TOTAL FROM 36.67 PULSE/GALLON FLOW METER

Dig. No.	S	1	2	3	4	5	6										
InPut				r	A	t	E	A	A	t	o	t					
SEtuP			1	0	1	1	0										
ConFIG				1	1	0	0										
dSPyno							0	1									
GAtEt			0	0	0.	1	0										
ti Out			0	0	1.	0	0										
FiLteR			0	0	1	0	5										
SLOPE							0	1									
DecPt1		1	1	1	1.	1	1										
DecPt2		2	2	2	2	2	2.										
Lo In1		0	0	0	0	0	0										
Lo rd1		0	0	0	0.	0	0										
Hi In1		0	0	3	6.	6	7										
Hi rd1		0	0	6	0.	0	0										
Lo In2		0	0	0	0	0	0										
Lo rd2		0	0	0	0	0	0										
Hi In2		0	0	3	6.	6	7										
Hi rd2		0	0	0	0	0	1										
CALib	-		0	0	0	0	0	Do Not Change Calib									

Application: Display flow rate in GPM with two decimal places and total gallons with no decimal places from the same flow meter signal calibrated to 36.36 pulses/gallon, applied to Channel A

Solution: Use an Extended counter, as required for simultaneous rate and total. Set Input to “Rate A A Total.” For flow rate in GPM (Item #1), set DecPt1 to two decimals, and scale the display by entering Lo In1, Lo rd1, Hi In1, Hi rd1 as shown. For total in Gallons (Item #2), set DecPt2 to no decimals, and scale the display by entering Lo In2, Lo rd2, Hi In2, Hi rd2 as shown. Enter a Gate Time, such as 0.1 sec, which is long enough to produce stable rate readings, but is short enough to produce rapid updates of total.

DISPLAY TOTAL VOLUME BY ADDING TWO TURBINE FLOW METER CHANNELS

Dig. No.	S	1	2	3	4	5	6				
InPut			t	o	t	A	L	A		+	b
SEtuP			1	0	1	1	0				
ConFiG				1	1	0	0				
dSPyno						0	1				
GAtE t			0	0	0.	0	1				
SLOPE						0	0				
DecPt1		1	1	1	1.	1	1				
DecPt2		2	2	2	2.	2	2				
Lo In1		0	0	0	0	0	0				
Lo rd1		0	0	0	0.	0	0				
Hi In1		0	0	3	6.	6	7				
Hi rd1		0	0	0	1.	0	0				
Lo In2		0	0	0	0	0	0				
Lo rd2		0	0	0	0.	0	0				
Hi In2		0	0	5	8.	1	2				
Hi rd2		0	0	0	1.	0	0				
rESoLn							1				
CALib	-		0	0	0	0	0	Do Not Change Calib			

Application: Display total liquid volume in gallons to two decimal places from 2 pipes dispensing liquids into the same tank. Flow meter A is calibrated to 36.67 pulses/gallon, flow meter B to 58.12 pulses/gallon.

Solution: Arithmetic operations require the Extended counter. Apply flow meter output A output to Channel A, flow meter output B to Channel B. Set Input to "Total A+B." Set Gate Time to 0.01 sec for fast display updates. Select a positive trigger slope for A and B. Set DecPt2, which applies to Grand Total, and DecPt1, which applies to Totals A and B, both to two decimal places. Under Setup, select the coordinates of 2 points scaling method for A and B. To scale A, enter 36.67 (pulses) for Hi In1 and 1.00 (gallons) for Hi Rd1. To scale B, enter 58.12 (pulses) for Hi In2 and 1.00 (gallons) for Hi Rd2. The normal display will be Item #1 (Grand Total). Press the \wedge key to view Item #2 (Total A) and Item #3 (Total B).

TOTAL A ONLY (A_OnLy) displays the number of pulses applied to Channel A as Item #1. If scientific notation is not selected, overflows beyond 999,999 are recorded in units of 1,000,000 as Item #2. For example, a total of 17,345,676 would be displayed as 345,675 in Item #1 and 17 in Item #2. This capability gives the counter 12-digit capability. Items #1-2 can also be retrieved via serial communications.

- **TOTAL A B (A__b__)** displays Total A as Item #1 or Total B as Item #2.
- **TOTALS A+B, A-B, AxB, A/B** (Extended counter) display arithmetic combinations of Totals A and B as Item #1, Total A as Item #2, and Total B as Item #3.
- **TOTAL A-B UD (A-b_Ud)** is the same as TOTAL A-B, except that counts are subtracted on an ongoing basis, instead of subtracting totals. This avoids round-off errors with large totals.
- **BURST (_burST)** (Extended counter) displays the total number of signal bursts applied to Channel A as Item #1 and signal frequency within a burst as Item #2. Gate time must be greater than the period of the lowest signal frequency and less than the minimum time between bursts. Time-out must be greater than the maximum time between bursts.
- **TOTAL A B U/D (A_bU/d)** (Extended counter) displays Total A as Item #1, where the up or down count direction is determined by an input on Channel B. If the menu item *SLOPE* is set to 0 for Channel B, (digit 6), an input level on B below the jumper set Low Threshold B causes the count to go up, and an input level above the jumper set High Threshold causes the count to go down. If *SLOPE* for Channel B is set to 1, the opposite occurs. The maximum frequency on A that can be counted is 250 kHz, or a minimum of 4

µs between pulses.

- **TOTAL A B INHIBIT (A_bInH)** (Extended counter) displays Total A as Item #1, where counting may be inhibited by a control input on Channel B. If the menu item *SLOPE* is set to 0 for Channel B (digit 6), a low input level on B allows counting, and a high input level inhibits counting. If the *SLOPE* for Channel B is set to 1, the opposite occurs. The maximum frequency on A that can be counted is 1 MHz.

BATCH CONTROL MODE (_bAtCH)

BATCH CONTROL WITH A 36.67 PULSE/GALLON TURBINE FLOW METER

Dig. No.	S	1	2	3	4	5	6							
InPut				r	A	t	E	b A t C H						
SEtuP		1	0	0	1	0								
ConFiG			1	1	0	0								
dSPyno						0	1							
GATe t		0	2	0.	0	0								
bAtCH		1	0	0	1	0								
FILtEr		0	0	1	0	5								
SLOPE						0	0							
DecPt1		1	1	1	1.	1	1							
DecPt2		2	2	2	2.	2	2							
SCALE1		2.	7	2	7	0	2							1
OFFSt1		0	0	0	0	0	0							
Lo In2		0	0	0	0	0	0							
Lo rd2		0	0	0	0.	0	0							
Hi In2		0	0	3	6.	6	7							
Hi rd2		0	0	6	0.	0	0							
rESoLn							1							
Source				1	1									
AL SET			0	0	2	4	0							
dEUn1b		0	0	0	0.	0	0							
dEUn2b		0	0	0	0.	0	0							
CALib	-		0	0	0	0	0	Do Not Change Calib						

Application: Fill 55 gallon tanks, measuring flow with a 36.67 pulses/gallon flow meter. Slow down filling at 54 gallons. Cycle batches automatically with 20 sec between cycles. Display batch total & fill rate to 2 places. Track number of batches.

Solution: Use an Extended counter with a dual relay output board. Apply the flow meter signal to Channels A & B. Set Input to "Rate Batch." Set Batch to count up to Setpoint1. Use Gate Time as delay between batches. Make Item #2 the number of batches. Set Gate Time to 20 sec. Set an adaptive moving average filter, which will apply to rate only, not totals. Set DecPt1 and DecPt2 to two decimal places for Items #1 and #3 (Batch Total and Rate). Scale Item #1 (Batch Total) by entering a Scale1 of 2.72702 (counts per pulse) and a Setpoint1 of 55.00, which will serve as the batch setpoint in gallons. Scale Item #3 (Rate) using the coordinates of 2 points method so that 36.67 pulses/sec will be displayed as 60.00 GPM. Set Setpoint2 to 54.00 to activate Relay 2 to slow the fill rate at 54.00 gallons.

ALARM KEY	S	1	2	3	4	5	6
SETPT1	0	0	5	4.	0	0	
SETPT2	0	0	5	5.	0	0	

Batch control (Extended counter) uses the meter with a dual relay controller board to control repetitive fill operations. Relay #1 is used as the batch relay. Relay #2 (or Setpoint #2) can be assigned to another limit, such as pre-warn to slow filling near the setpoint, end-of-process, or rate alarm. The same signal is applied to Channels A and B. When digit 6 of *bAtCH* (Action after Meter Reset) is set to zero, the following applies:

- **In batch control mode without external resets**, the meter waits until the *RESET* key is pushed. It then energizes Relay #1 and displays the changing Batch Total. When the preset value is reached, Relay #1 de-energizes for the duration of the gate time setting. Relay #1 then re-energizes, the Batch Total resets, and the fill cycle repeats.

- **In batch control mode with external resets**, pushing the *RESET* key initiates cycling. Grounding an external *Gate* input for a minimum of 3.33 ms then starts each new fill cycle by energizing Relay #1 and resetting the Batch Total. *Gate time* is not used.

Three values are tracked and can be separately displayed by pressing the *RESET* key: Item #1, the Batch Total; Item #2, the Grand Total of all batches or Number of Batches (selectable during setup); and Item #3, the Fill Rate.

- **Item #1, Batch Total**, is the total for that batch. It may be configured to count up from 0 to a preset, or to count down from a preset to 0. The preset value is placed in *SETPT1*. *SCALE1* is positive whether counting up or down.
- **Item #2, Grand Total**, is the sum of previous Batch Totals and the current Batch Total. It can overflow to exponential format.
- **Item #2 (alternate), Number of Batches**, is the current count of batches. *SCALE1* does not apply. *dECpt1* is set to 1.
- **Item #3, Fill Rate**, is calculated with a fixed 20 ms (or 1 cycle min) *gate time*. It may be displayed as Item #3.

PERIOD MODES

- **PERIOD A ONLY (A_OnLy)** displays period of Channel A as Item #1.
- **PERIODS A+B, A-B, AxB, A-B, A/B** (Extended counter) display arithmetic combinations of Periods A and B as Item #1, Period A as Item #2, and Period B as Item #3.

TIMING MODES

STOPWATCH TIMING, “ON” TIME OF A MACHINE WITH 0.00 HOUR RESOLUTION

Dig. No.	S	1	2	3	4	5	6						
InPut		S	t	o	P		t	A	t	o	b		
SEtuP			1	0	1	1	0						
ConFIG				4	0	0	0						
dSPyno						0	1						
GAtEt			0	0	0.	0	1						
SLOPE						1	0						
DecPt1		1	1	1	1.	1	1						
DecPt2		2	2	2	2	2	2.						
LoIn1		0	0	0	0	0	0						
LoRd1		0	0	0	0.	0	0						
HiIn1		0	0	3	6	0	0						
HiRd1		0	0	0	1.	0	0						
LoIn2		0	0	0	0	0	0						
LoRd2		0	0	0	0	0	0						
HiIn2		0	0	3	6	0	0						
HiRd2		0	0	0	0	0	1						
CALib	-		0	0	0	0	0					Do Not Change Calib	

Application: Display daily “on” time of a machine in hours with 2 decimals. For machine maintenance, also track accumulated hours since last reset.

Solution: Tie a relay across the AC input to the machine so that the relay closes to ground when power is applied. Apply the relay output across both the A & B inputs so that the voltage is 5V when the contacts are open and 0V when they are closed. Set Input to “Stopwatch A to B.” Select negative trigger slope for A and positive for B. Under Config, set Display Mode to sec. Set Gate Time to 0.01 sec. Select the coordinates of 2 points scaling method for Item #1 (daily time) and Item #1 (accumulated time). For Item #1, set DecPt1 to 2 places, set Hi In1 to 3600 (sec) and Hi Rd1 to 1.00 (hrs). For Item #2, set DecPt2 to 0 places, set Hi In2 to 3600 and Hi Rd2 to 1 (hr).

STOPWATCH TIMING, CLOSING TIME OF A RELAY TO 0.001 MSEC RESOLUTION

Dig. No.	S	1	2	3	4	5	6						
InPut		S	t	o	P		t	A		t	o		b
SEtuP			1	0	1	1	0						
ConFIG				4	0	0	0						
dSPyno						0	1						
GAtE t			0	0	0.	0	1						
SLOPE						0	0						
DecPt1		1	1	1.	1	1	1						
DecPt2		2	2	2	2	2	2.						
Lo In1		0	0	0	0	0	0						
Lo rd1		0	0	0.	0	0	0						
Hi In1		1.	0	0	0	0	0						
Hi rd1		9	9	9.	9	9	9						
Lo In2		0	0	0	0	0	0						
Lo rd2		0	0	0	0	0	0						
Hi In2		0	0	0	0	0	0						
Hi rd2		0	0	0	0	0	0						
CALib	-		0	0	1	0	0	Do Not Change Calib					

Application: Measure the closing time of a relay in msec to 0.001 msec resolution.

Solution: To close the relay, apply the same positive voltage to the relay coil and to meter Channel A. Wire the relay so that 0V is applied across Channel B when the contacts are closed. Set Input to “Stopwatch A to B.” Select a positive trigger slope for A and a negative trigger slope for B. Under Config, set Display Mode to sec. Set Gate Time to 0.01 sec. Select the coordinates of 2 points scaling method for Item #1. Set DecPt1 to 3 places. Set Hi In1 to 1.00000 (sec) and Hi Rd1 to 999.999 (msec). Ignore Item #2, which is not used.

- TIME INTERVAL A TO B (A_to_b)** measures time between periodic inputs on Channels A and B. Timing starts when a pulse is applied to Channel A (positive edge if slope A is 0, negative edge if slope A is 1), and ends when a pulse is applied to Channel B (positive edge if slope B is 0, negative edge if slope B is 1). Pulse width may be measured by tying inputs A and B together and selecting a positive or negative edge to start (Slope A) and the opposite polarity edge to stop (Slope B). If multiple start and stop pulses occur during the *gate time*, the displayed value is the average of pulse widths. The value is updated at the end of each *gate time*. With a scale factor of 1, one count is one microsecond.
- INVERSE TIME INTERVAL (__1/Ab)** (Extended counter)
 Takes the inverse of time interval for a reading in /second. For example, if the average time interval for object to travel from point A to point B is 5 seconds, the inverse time interval would be 0.2/sec. For the average speed of the objects, simply apply a scale factor equal to the distance separating the two points, such as 7 (inches). Speed would then be displayed as $7 \times 0.2 = 1.4$ (inches/sec). For a 6-digit reading, apply a scale multiplier of 10,000 and move the decimal point.
- STOPWATCH A TO A (A_to_A)** measures time between the same positive (or negative) edge of start and stop pulses applied to Channel A. Single event times may be displayed as Item #1 in decimal seconds, minutes or hours, or in HH:MM:SS clock format. Time is reset to 0 when a new start pulse occurs. Accumulated total time may be displayed as Item #2. With a scale factor of 1, one count is one microsecond.
- STOPWATCH A TO B (A_to_B)** measures time between a start pulse on Channel A and a stop pulse on Channel B. Timing is the same as for A to A, except that positive or negative edges may be selected separately for Channels A and B. This allows the pulse width measurement of single pulses by tying Channels A and B together. One slope is selected to start timing, and the opposite slope to stop timing.

- **INVERSE STOPWATCH TIME A TO A & A TO B ($\frac{1}{AA}$ & $\frac{1}{AB}$)** (Extended counter)
 Takes the inverse of stopwatch time for a reading in /second. For example, if the travel time for an object to travel from point A to point B is 5 seconds, the inverse stopwatch time interval would be 0.2/sec. For the speed of that object, simply multiply by a scale factor equal to the distance separating the two points, such as 7 (inches). Speed would then be displayed as $7 \times 0.2 = 1.4$ (inches/sec). For a 6-digit reading, apply a scale multiplier of 10,000 and move the decimal point.

DUTY CYCLE MODE (duty_C) (Extended counter)

Measures ON or OFF period of periodic square waves as a percentage of total period over a *gate time* which is selectable from 10 ms to 199.99 s. The same signal is applied to Channels A and B. ON or OFF time is measured between positive and negative edges of the signal, with averaging over multiple integral periods over the selected gate time. Apply a scale factor of 1 for readings in percent. Apply a 10 or 100 multiplier and move the decimal point by 1 or 2 positions for 0.1% or 0.01% resolution.

PHASE ANGLE MODE (PHASE) (Extended counter)

Measures the phase relationship in degrees between two signals with the same period over a *gate time* which is selectable from 10 ms to 199.99 s, with averaging over multiple integral periods over the selected gate time. The two signals are applied to Channels A and B. For best accuracy, both signals should have the same amplitude. The amplitude of sinusoidal signals should be larger than 1V, and the trigger level should be set at 12 mV (no jumper at A3 or B3, jumper at A2 and B2).

PHASE ANGLE MEASUREMENT TO 0.01° RESOLUTION

Dig. No.	S	1	2	3	4	5	6							
InPut			P	H	A	S	E	-	1	8	0	+		
SEtUP			0	0	1	0	0							
ConFIG				1	1	0	0							
dSPYno						0	1							
GATe t			0	0	0.	2	2							
ti Out			0	0	1.	0	0							
bAtCH			0	0	0	0	0							
FILtEr			0	0	1	0	5							
SLOPE						0	0							
DecPt1		1	1	1	1.	1	1							
Lo In1		0	0	0	0	0	0							
Lo rd1		0	0	0	0.	0	0							
Hi In1		1.	0	0	0	0	0							
Hi rd1		0	0	0	1.	0	0							
rESoLn							1							
CALib	-		0	0	0	0	0	Do Not Change Calib						

Application: Measure phase angle difference to 0.01° resolution between two AC signals centered around 0°.

Solution: Use an Extended counter, as required for phase angle measurement. Jumper the signal conditioner for maximum sensitivity to catch zero voltage crossings and minimize the effects of amplitude jitter. Apply one AC signal to Channel A and one to Channel B. Set Input to “PHASE +/- 180°.” The display will be in degrees. Set a gate time of 0.22 sec for 4 display updates per sec. Set both trigger slopes to positive. Set two decimal places. Select the coordinates of 2 points scaling method. Set Hi In1 to 1.00000 (degrees) and Hi Rd1 to 1.00 (degrees). As an alternative, select the scale and offset scaling method. Then simply select a scale value of 1.00000 and a multiplier of 100.

DUTY CYCLE MEASUREMENT TO 0.01% RESOLUTION

Dig. No.	S	1	2	3	4	5	6
InPut		d	u	t	y		C
SEtUP			0	0	1	0	0
ConFiG				1	1	0	0
dSPyno						0	1
GAtEt			1	0	0.	0	0
ti Out			1	9	9.	9	9
FILtEr			0	0	1	0	5
SLOPE						0	0
DecPt1		1	1	1	1.	1	1
Lo In1		0	0	0	0	0	0
Lo rd1		0	0	0	0.	0	0
Hi In1		1.	0	0	0	0	0
Hi rd1		0	0	0	1.	0	0
CALib	-		0	0	0	0	0




Do Not Change Calib




Application: Measure “on” period of periodic pulses as a % of total period with .01% resolution over a time interval of 100 sec.




Solution: Phase angle measurement requires the Extended counter. Apply the same signal to Channels A & B. Set Input to “Duty Cycle (A to B) / A.” The native counts will be in percent. For a positive “on” pulse, set trigger slope to positive for A and negative for B. Select the coordinates of 2 points scaling method. Set Hi In1 to 1.00000 (percent) and Hi Rd1 to 1.00 (percent). As an alternative, select the scale and offset scaling method. Then simply select a scale value of 1.00000 and a multiplier of 100.




SETUP OF COUNTERS WITH DUAL CHANNEL PULSE OR AC SIGNAL CONDITIONER




If the *MENU* > key does not work, see Section 9 “Enabling & Locking Out Menu Items.” Menus are dynamic. Menu items will only appear if appropriate for previously made menu selections. For example, Batch menu items will only appear if “Batch” was selected under “Rate.” Extended counter items will only appear if “Extended” was selected under “Config.”




 Press Menu	 Press Digit Select Key	 Press Value Select Key	
InPut Input	rAtE Rate modes	Basic A_b Rate for Channel A (Item #1). Rate for Channel B (Item #2).	
		A_OnLy Rate for Channel A only (Item #1).	
		Extended meter only bAtCH Batch control mode. Batch total (Item #1). Grand total or number of batches (Item #2). Fill rate (Item #3).	
		A_Atot Rate for Channel A (Item #1). Total for Channel A (Item #2).	
		A_btot Rate for Channel A (Item #1). Total for Channel B (Item #2).	
		A_+_b Sum of rates A & B (Item #1). Rate A (Item #2). Rate B (Item #3).	
		A_-_b Difference of rates A and B (Item #1). Rate A (Item #2). Rate B (Item #3).	
		A_.b Product of rates A and B (Item #1). Rate A (Item #2). Rate B (Item #3).	
		A/_b Rate A divided by rate B (Item #1). Rate A (Item #2). Rate B (Item #3).	
		A/b-1 Draw, rate A / rate B - 1 (Item #1). Rate A (Item #2). Rate B (Item #3).	
		Period Period modes	Basic A_b Period Channel A (Item #1). Period for Channel B (Item #2).
			A_OnLy Period for Channel A only (Item #1).
			Extended meter only A_+_b Sum of periods A and B (Item #1). Period A (Item #2). Period B (Item #3).
			A_-_b Difference of periods A and B (Item #1). Period A (Item #2). Period B (Item #3).
A_.b Product of periods A and B (Item #1). Period A (Item #2). Period B (Item #3).			
A/_b Ratio, period A divided by period B (Item #1). Period A (Item #2). Period B (Item #3).			

 Press Menu	 Press Digit Select Key	 Press Value Select Key		
InPut (continued)	totAL Total modes	Basic A_b Total for Channel A (Item #1). Total for Channel B (Item #2).		
		A_OnLy Total for Channel A only (Item #1).		
		A-b_Ud Running total (Item #1) of counts on Channel A minus counts on Channel B.		
		burSt Count of bursts (Item #1). Burst frequency (Item #2).		
		b_ArAt Total for Channel B (Item #1). Rate for Channel A (Item #2)		
		A_bU/d Total for Channel A (Item #1) with up/down control via Channel B.		
		A_b InH Total for Channel A (Item #1) with count inhibit control via Channel B.		
		A + b Sum of totals A and B (Item #1). Total A (item #2). Total B (Item #3).		
		A - b Difference of totals A and B (Item #1). Total A (item #2). Total B (Item #3).		
		A . b Product of totals A and B (Item #1). Total A (item #2). Total B (Item #3).		
		A / b Ratio of totals A and B (Item #1). Total A (item #2). Total B (Item #3).		
		ti Int Time interval mode	Time interval mode	Basic A to b Time interval (Item #1) for periodic events with pulse signals applied to Channels A & B.
				Ext. 1/Ab Inverse of time interval (/sec) (Item #1) for periodic events with pulse signals applied to A & B.
StoP_t Stopwatch modes	Stopwatch modes	Basic A to A Single event time (Item #1) between pulses on Channel A, or accumulated total time (Item #2).		
		A to b Single event time (Item #1) with pulses on Channels A &B, or accumulated total time (Item #2).		
		Extended 1/AA Inverse of stopwatch time (/sec) (Item #1) for single events with pulse signals applied to A & A.		
		1/Ab Inverse of stopwatch time (/sec) (Item #1) for single events with pulse signals applied to A & B.		

 Press Menu	 Press Digit Select Key	 Press Value Select Key																															
InPut (continued)	PHASE Phase angle modes	Extended 0-360 Span from 0° to 360°. Select for phase angles centered around 180° (Item #1). -180+ Span from -180° to +180°. Select for phase angles centered around 0° (Item #1).																															
	duty_C Duty cycle mode	Ext. A to b On or Off period of square waves as a percentage of total period (Item #1).																															
SEtuP Setup	00000 Stored totals	0 Zero totals at power-on. 1 Restore totals at power-on.																															
	00000 Leading zeros	0 Blank leading zeros. 1 Display leading zeros.																															
	00000 Scaling method 1	0 Input scale factor 1 and offset 1. 1 Use coordinates of 2 points method.																															
	00000 Scaling method 2	0 Input scale factor 2 and offset 2. 1 Use coordinates of 2 points method.																															
	00000 Operation of rear connector control inputs 1 & 2. True = logic 1 (0V or tied to digital ground). False = 0 (5V or open).	<table border="0"> <tr><td>0</td><td>1 = Meter Reset*, 2 = Function Reset*</td></tr> <tr><td>1</td><td>1 = Meter Reset*, 2 = Meter Hold*</td></tr> <tr><td>2</td><td>1 = Meter Reset*, 2 = Peak or Valley Display*</td></tr> <tr><td>3</td><td>1 = Meter Reset*, 2 = External Gate*</td></tr> <tr><td>4</td><td>1 = Function Reset*, 2 = Meter Hold*</td></tr> <tr><td>5</td><td>1 = Valley Only Display, 2 = Peak Only Display</td></tr> <tr><td>6</td><td>1 = Function Reset*, 2 = External Gate*</td></tr> <tr><td>7</td><td>1 = Meter Hold*, Peak or Valley Display*</td></tr> <tr><td>8</td><td>1 = Meter Hold*, 2 = External Gate*</td></tr> <tr><td>9</td><td>1 = Peak or Valley Display, 2 = External Gate*</td></tr> <tr><td>A</td><td>1 = Meter Reset*, 2 = Display Blank*</td></tr> <tr><td>B</td><td>1 = Function Reset*, 2 = Display Blank*</td></tr> <tr><td>C</td><td>1 = Meter Hold*, 2 = Display Blank*</td></tr> <tr><td>D</td><td>1 = Peak or Valley Display, 2 = Display Blank*</td></tr> <tr><td>E</td><td>1 = Display Blank, 2 = External Gate*</td></tr> <tr><td>F</td><td>1 = Display Item #2*, 2 = Display Item #3*</td></tr> </table> <p>-----</p> With neither 1 nor 2, or both 1 & 2, display Item #1. 1 & 2 both at 0V for selections 5 , 7 , D = Function Reset* (erases all totals). 1 & 2 both at 0V for selections 0 , 1 , 2 , 3 , 4 , 6 , 8 , A , B , C , E = Meter Reset* (can restore totals).	0	1 = Meter Reset*, 2 = Function Reset*	1	1 = Meter Reset*, 2 = Meter Hold*	2	1 = Meter Reset*, 2 = Peak or Valley Display*	3	1 = Meter Reset*, 2 = External Gate*	4	1 = Function Reset*, 2 = Meter Hold*	5	1 = Valley Only Display, 2 = Peak Only Display	6	1 = Function Reset*, 2 = External Gate*	7	1 = Meter Hold*, Peak or Valley Display*	8	1 = Meter Hold*, 2 = External Gate*	9	1 = Peak or Valley Display, 2 = External Gate*	A	1 = Meter Reset*, 2 = Display Blank*	B	1 = Function Reset*, 2 = Display Blank*	C	1 = Meter Hold*, 2 = Display Blank*	D	1 = Peak or Valley Display, 2 = Display Blank*	E	1 = Display Blank, 2 = External Gate*	F
0	1 = Meter Reset*, 2 = Function Reset*																																
1	1 = Meter Reset*, 2 = Meter Hold*																																
2	1 = Meter Reset*, 2 = Peak or Valley Display*																																
3	1 = Meter Reset*, 2 = External Gate*																																
4	1 = Function Reset*, 2 = Meter Hold*																																
5	1 = Valley Only Display, 2 = Peak Only Display																																
6	1 = Function Reset*, 2 = External Gate*																																
7	1 = Meter Hold*, Peak or Valley Display*																																
8	1 = Meter Hold*, 2 = External Gate*																																
9	1 = Peak or Valley Display, 2 = External Gate*																																
A	1 = Meter Reset*, 2 = Display Blank*																																
B	1 = Function Reset*, 2 = Display Blank*																																
C	1 = Meter Hold*, 2 = Display Blank*																																
D	1 = Peak or Valley Display, 2 = Display Blank*																																
E	1 = Display Blank, 2 = External Gate*																																
F	1 = Display Item #2*, 2 = Display Item #3*																																

 Press Menu	 Press Digit Select Key	 Press Value Select Key
ConFIG Configuration	<u> </u> <u> </u> <u> </u> <u> </u> Display mode	<u>0</u> Normal, overload to exponential format <u>1</u> Normal, overload to 999999 <u>2</u> 1 right-hand dummy zero <u>3</u> 2 right-hand dummy zeros <u>4</u> Time display in seconds <u>5</u> Time display in HH.MM.SS format <u>6</u> Remote display (H, K, L commands) <u>7</u> Single-value remote display <u>8</u> Show 1 st string value, slaved to another meter <u>9</u> Show 2 nd string value, slaved to another meter <u>A</u> Show 3 rd string value, slaved to another meter <u>B</u> Show 4 th string value, slaved to another meter <u>C</u> Custom Start, Stop, Skip, Show
	<u> </u> <u> </u> <u> </u> <u> </u> Counter mode	<u>0</u> Basic counter <u>1</u> Extended counter <u>2</u> Extended counter, custom curve linearization
	<u> </u> <u> </u> <u> </u> <u> </u> Square root	<u>0</u> Linear rate input. <u>1</u> Square root rate input.
	<u> </u> <u> </u> <u> </u> <u> </u> Not applicable	<u>0</u> Set to 0.
dSPyno Display #	<u> </u> <u> </u> <u> </u> <u> </u> PEAK key action	<u>0</u> Display Peak <u>1</u> Display Valley <u>2</u> Peak (1 st push), Valley (2 nd push)
	<u> </u> <u> </u> <u> </u> <u> </u> Item to display after Meter Reset*	<u>1</u> Item #1* <u>2</u> Item #2* <u>3</u> Item #3*
GAte t Gate time*	<u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> Select digit to flash.	Select <u>0</u> thru <u>9</u> for flashing digit to set gate time* in seconds. Decimal point location is fixed for 10 ms resolution.
ti_Out Time-out*	<u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> Select digit to flash.	Select <u>0</u> thru <u>9</u> for flashing digit to set time-out* in seconds. Decimal point location is fixed for 10 ms resolution.
bAtCH Batch setup	<u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> Handling of overshoot count at end of batch.	<u>0</u> Do not count extra pulses after Preset. Add Preset values to Grand Total. <u>1</u> Count all pulses. Add Preset values to Grand Total. <u>2</u> Do not count extra pulses after Preset. Add actual Batch Totals to Grand Total. <u>3</u> Count extra pulses after Preset. Add actual Batch Totals to Grand Total.
	<u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> Count direction	<u>0</u> Reset batch to 0 and count up to Setpoint 1. <u>1</u> Reset batch to Setpoint 1 and count down.
	<u> </u> <u> </u> <u> </u> <u> </u> <u> </u> <u> </u> Batch triggering	<u>0</u> Use internal gate time as delay between batches <u>1</u> Use External Input B to trigger each new batch.

 Press Menu	 Press Digit Select Key	 Press Value Select Key
bAtCH (continued)	<u>00000</u> Definition of Item #2	<u>0</u> Make Item #2 the Grand Total of all batches. <u>1</u> Make Item #2 the Total Number of batches.
	<u>00000</u> Action after Meter Reset	<u>0</u> Display "rEAdy." <i>RESET</i> key starts batching. <u>1</u> Start batching upon Meter Reset.
FiLteR Filtering	<u>00000</u> Filter type	<u>0</u> Adaptive moving average filter. Restarts filter for high actual changes in signal. <u>1</u> Conventional moving average filter without reset.
	<u>00000</u> Peak & Valley filtering	<u>0</u> Peak* or Valley* value from unfiltered signal. <u>1</u> Peak* or Valley* value from filtered signal.
	<u>00000</u> Display filtering	<u>0</u> Display value of unfiltered signal. <u>1</u> Display value of filtered signal.
	<u>00000</u> Adaptive filter threshold	<u>0</u> Set adaptive filter for normal noise. <u>1</u> Set adaptive filter for presence of high transients.
	<u>00000</u> Filter time constant	<u>0</u> No filter <u>1</u> 0.1 sec <u>2</u> 0.2 sec <u>3</u> 0.4 sec <u>4</u> 0.8 sec <u>5</u> 1.6 sec <u>6</u> 3.2 sec <u>7</u> 6.4 sec
SLOPE Triggering	<u>00</u> Trigger slope, Channel A	<u>0</u> Positive slope <u>1</u> Negative slope
	<u>00</u> Trigger slope, Channel B	<u>0</u> Positive slope <u>1</u> Negative slope
dEC.Pt1 Decimal pt1	<u>1.11111</u> Decimal point flashes.	<u>1.11111</u> <u>11.1111</u> <u>111.111</u> <u>1111.11</u> <u>11111.1</u> <u>111111.</u> Press \wedge to shift the decimal point.
dEC.Pt2 Decimal pt2	<u>2.22222</u> Decimal point flashes.	<u>2.22222</u> <u>22.2222</u> <u>222.222</u> <u>2222.22</u> <u>22222.2</u> <u>222222.</u> Press \wedge to shift the decimal point.
Scale and Offset scaling method if selected under SEtUP		
SCALE1 Scale Factor 1	<u>0.00000</u> <u>0.00000</u> <u>0.00000</u> <u>0.00000</u> <u>0.00000</u> <u>0.00000</u> Select digit to flash for Scale Value. When right digit flashes, press \gt one more time for the Scale Multiplier.	Select <u>9</u> thru <u>9</u> for flashing first digit and <u>0</u> thru <u>9</u> for other flashing digits. This will set the Scale Value* from -9.99999 to 9.99999 with a fixed decimal point. Then press \wedge to select a value from <u>0.00001</u> to <u>100000</u> in decade steps for the Scale Multiplier. Scale Factor = Scale Value x Scale Multiplier.
OFFSt1 Offset 1	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select <u>9</u> thru <u>9</u> for flashing first digit and <u>0</u> thru <u>9</u> for other flashing digits. Use dEC.Pt1 to set the decimal point.
SCALE2	Scale Factor 2. Same setup process as for Scale Factor 1.	
OFFSt2	Offset 2. Same setup process as for Offset 1.	

 Press Menu	 Press Digit Select Key	 Press Value Select Key
Coordinates of 2 points scaling method if selected under SEtuP		
Lo_In1 Low signal input 1.	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. Move decimal point location when flashing.
Lo_rd1 Reading at Lo In1.	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. Decimal point is fixed by dEC.Pt1 .
Hi_In1 High signal input 1.	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. Move decimal point location when flashing.
Hi_rd1 Reading at Hi In1.	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. Decimal point is fixed by dEC.Pt1 .
Lo_In2 Low signal input 2.	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. Move decimal point location when flashing.
Lo_rd Reading at Lo In2.	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. Decimal point is fixed by dEC.Pt1 .
Hi_In2 High signal input 1.	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. Move decimal point location when flashing.
Hi_rd2 Reading at Hi In1.	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. Decimal point is fixed by dEC.Pt1 .
Preset function. Displayed for Total modes A-b_Ud or A_bU/d		
PrESet Preset*	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. dEC.Pt1 is used. When the meter counts up and reaches the Preset, it reverts to Offset1. When the meter counts down and reaches Offset1, it reverts to Preset. Set to 0 for no Preset.
Special curve offset for square root or custom curve linearization if selected under ConFiG		
rd0_In	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. Decimal point is fixed by dEC.Pt1 .

Scale multiplier for combinations of two channels (e.g., Ax/B) if selected under InPut		
rESoLn Resolution	Flashing 6-digit number in decade steps from 0.00001 to 100000	Press \wedge to select. This is a multiplier R to avoid overflow or underflow of arithmetic combinations of Channels A and B.
Quartz crystal time base calibration		
_CALib	Time base calibration.	Do not change. See Calibration section of manual.
Option dependent menu items		
Source AL_SEt dEUn1b dEUn2b dEUn1h dEUn2h Menu items related to alarms . These will only appear if a relay board is detected. If so, please see Section 13.		
An_SEt An_Lo An_Hi Menu items related to analog output . These will only appear if an analog output board is detected. If so, please see Section 14.		
SEr_1 SEr_2 SEr_3 SEr_4 Menu items related to serial communications . These will only appear if an RS232 or RS485 I/O board is detected. If so, please see Section 15.		
Menu lockout items		
Loc_1 Loc_2 Loc_3 Loc_4 Menu items used to enable or lock out (hide) other menu items. Loc menu items may be locked out by a hardware jumper. Please see Section 9.		


* See Glossary for explanation of item.

10. PROCESS RECEIVER & TOTALIZER SIGNAL CONDITIONER

This signal conditioner board converts 0-1 mA, 4-20 mA or 0-10 V analog process signals to a frequency signal, which is then read by the counter main board and processed mathematically for display of rate, total (time x rate), time based on rate, or batch control. The board needs to be configured via jumpers for the input signal range. The meter software recognizes the board and brings up the applicable menu items for it.

Please see further manual pages for the following features: relay output (48), analog output (51), serial communications (53), and transducer excitation output (57).

JUMPER SETTINGS

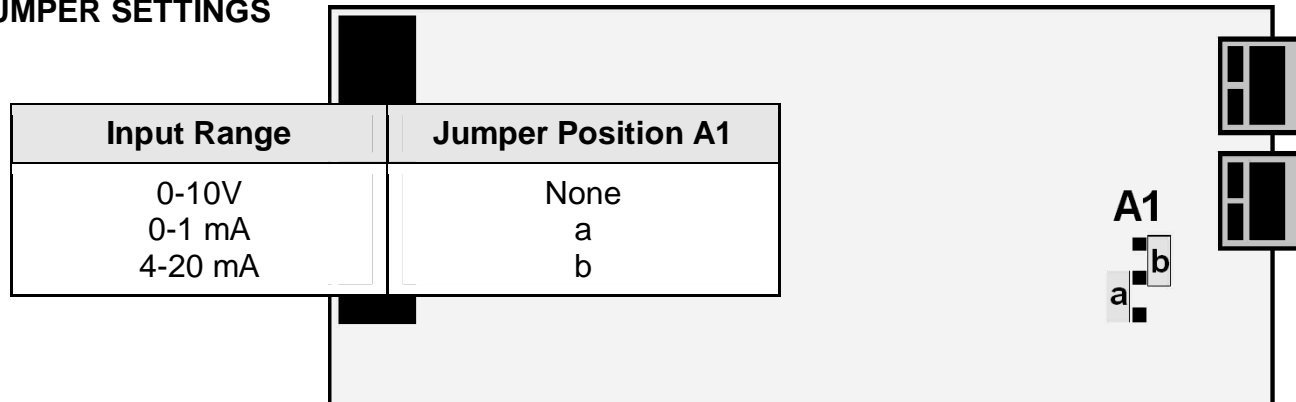

OPERATING MODES

RATE FROM A 4-20 mA OUTPUT FLOW METER

Dig. No.	S	1	2	3	4	5	6						
InPut		U	F	4	-	2	0	A		O	n	L	y
SEtuP			0	0	1		0						
ConFiG				1	0	0	0						
dSPyno						0	1						
GAtEt			0	0	0.	2	2						
FILtEr			0	0	1	0	5						
DecPt1		1	1	1.	1	1	1						
Lo In1		0	4.	0	0	0	0						
Lo rd1		0	0	0.	0	0	0						
Hi In1		2	0.	0	0	0	0						
Hi rd1		0	0	5.	8	2	0						
CALib	-		0	0	0	0	0	Do Not Change Calib					

Application: Display rate in GPM with 3 decimal places from a 4-20 mA flow meter where 4 mA = 0 GPM and 20 mA = 5.820 GPM.

Solution: Set Input to “VF420 A only.” Under Setup, select the coordinates of 2 points scaling method. Under Config, select a display of 999999 and filtering. Set the decimal point to 3 places. For scaling, set Hi In1 to 20.0000 and Hi Rd1 to 5.820. Set Gate Time to 0.22 sec, which will provide noise averaging at a display update rate of 4/sec. Also set a 1.6 sec adaptive moving average filter, which will process the equivalent of 6 readings.

RATE MODE (Basic Counter)

Rate A accepts 0-1 mA, 4-20 mA or 0-10 V analog process signals for a process display scaled to engineering units. Scaling is normally done using the coordinates of 2 points method, where low and high input signals and the corresponding desired low and high displayed values are entered. Scaling can also be done by entering scale and offset directly. With Scale1 set to 1 and Offset1 set to 0, the full analog input range is displayed as 0

to100000. Measurements are averaged over a gate time, which is programmable from 10 ms to 199.99 sec. Selecting a long gate time provides a slower display update rate but superior noise filtering. Moving average filtering is also available. Square root extraction is selectable for use with differential pressure flow transducers. Custom curve linearization is available with the Extended counter.

RATE & TOTAL MODE (Basic Counter)

TOTAL FROM A 4-20 mA OUTPUT FLOW METER

Application: Display Total from a 4-20 mA flow meter where 4 mA = 0 and 20 mA = 5.820 GPM.

Solution: Use Extended counter. Set Input to "VF420 A A Total," which displays Rate as Item #1 & Total as Item #2. Under dSPyno, select Item #2 to be displayed after meter reset. Set Gate Time to 0.1 sec to provide fast display updates with noise averaging. Set DecPt1 to 3 places for Rate and DecPt2 to 2 places for Total. Under Setup, select the coordinates of 2 points scaling method for Rate. Set Hi In1 to 20.0000 and Hi Rd1 to 5.820. You will need to use scale & offset to scale Total. Enter 1.66667 for Scale2 and a multiplier of 0.001. That is because totalizing sums rate readings every second. Since our rate is in units per minute, we have to divide by 60, then multiply by 0.1 for two decimal places. You may also enter a Cutoff such as 0.010 GPM, below which zero offset errors and negative values will not be totalized.

Dig. No.	S	1	2	3	4	5	6						
InPut		U	F	4	-	2	0	A		A	t	o	t
SEtuP			0	0	1		0						
ConFiG				1	1	0	0						
dSPyno						0	1						
CutoFF			0	0.	0	1	0						
GAtE t			0	0	0.	1	0						
FILtEr			0	0	1	0	3						
DecPt1		1	1	1.	1	1	1						
DecPt2		2	2	2	2.	2	2						
Lo In1		0	4.	0	0	0	0						
Lo rd1		0	0	0.	0	0	0						
Hi In1		2	0.	0	0	0	0						
Hi rd1		0	0	5.	8	2	0						
SCALE2		1.	6	6	6	6	7		0.	0	0	1	
OFFSt2		0	0	0	0.	0	0						
CALib	-		0	0	0	0	0	Do Not Change Calib					

Rate A, Total A allows rate to be displayed as Item #1 and total as Item #2. Scale2 and Offset2 apply to total. Total is calculated as the product of displayed rate and time in seconds. Since rate may be displayed in units per second, units per minute, units per hour or other units, the total must be scaled appropriately. If rate is in units per minute, multiply the total by 1/60. This is achieved by setting Scale2 to a scale factor of 1.66666 and a multiplier of 0.01. If rate is in units per hour, multiply the total by 1/3600. This is achieved by setting Scale2 to a scale factor of 2.77778 and a multiplier of 0.0001. If square root extraction or custom curve linearization (available with Extended counter) have been selected, totalizing will be of the linearized rate readings.

BATCH CONTROL MODE (_bAtCH) (Extended Counter)

Batch control uses the meter with a dual relay controller board to control repetitive fill operations. Relay #1 (or Setpoint #1) is used as the batch relay. Relay #2 (or Setpoint #2) can be assigned to another limit, such as pre-warn to slow filling near the setpoint, end-of-process, or rate alarm. The same signal is applied to Channels A and B.

- **In batch control mode without external resets**, the meter waits until the *RESET* key is pushed. It then energizes Relay #1 and displays the changing Batch Total. When the preset value is reached, Relay #1 de-energizes for the duration of the gate time setting. Relay #1 then re-energizes, the Batch Total resets, and the fill cycle repeats.
- **In batch control mode with external resets**, the meter waits a the end of every cycle

until an external *Function Reset* input is grounded for a minimum of 3.33 ms. This starts a new fill cycle by energizing Relay #1 and resetting the Batch Total. *Gate time* is not used.

Three values are tracked and can be separately displayed by pressing the *RESET* key: Item #1, the Batch Total; Item #2, the Grand Total of all batches or Number of Batches (selectable during setup); and Item #3, the Fill Rate.

- **Item #1, Batch Total**, is the total of input pulses for that batch. It may be configured to count up from 0 to a preset, or to count down from a preset to 0. The preset value is placed in *ALARM1*. *SCALE1* is positive whether counting up or down.
- **Item #2, Grand Total**, is the sum of previous Batch Totals and the current Batch Total. It can overflow to exponential format.
- **Item #2 (alternate), Number of Batches**, is the current count of batches. *SCALE1* does not apply. *dECPt1* is set to 1.
- **Item #3, Fill Rate**, is calculated with a fixed 20 ms (or 1 cycle min) *gate time*. It may be displayed as Item #3.

BATCH CONTROL WITH A 4-20 mA OUTPUT FLOW METER

Dig. No.	S	1	2	3	4	5	6
InPut				r	A	t	E
SEtUP			1	0	0	1	0
ConFiG				1	1	0	0
dSPyno						0	1
CutoFF	0	0	0	0	0.		
GAtE t			0	2	0.	0	0
bAtCH			1	0	0	1	0
FILtEr			0	0	1	0	5
SLOPE						0	0
DecPt1		1	1	1	1.	1	1
DecPt2		2	2	2	2.	2	2
SCALE1		1.	6	6	6	6	7
OFFSt1		0	0	5	5.	0	0
Lo In2		0	4.	0	0	0	0
Lo rd2		0	0	0	0.	0	0
Hi In2		2	0.	0	0	0	0
Hi rd2		0	0	3	9.	2	0
rESoLn							1
SourcE				1	1		
AL SET			0	0	2	4	0
dEUn1b		0	0	0	0.	0	0
dEUn2b		0	0	0	0.	0	0
CALib	-		0	0	0	0	0

Do Not Change Calib

ALARM KEY	S	1	2	3	4	5	6
SETPT2	0	0	5	4.	0	0	

Application: Fill 55 gallon tanks. Use a 4-20 mA flow meter where 4 mA = 0 and 20 mA = 39.20 GPM. Slow down filling at 54 gallons. Cycle batches automatically with 20 sec between cycles. Display batch total & fill rate to 2 places. Also track number of batches.

Solution: Use an Extended counter with a dual relay output board. Set Input to “Rate Batch.” Set Batch to count up to ALARM1, to use Gate Time as delay between batches, and to make Item #2 the number of batches. Set Gate Time to 20 sec. Set DecPt1 and DecPt 2 to two decimal places for Items #1 and #3 (Batch Total and Rate). Scale Item #3 (Rate) using the coordinates of 2 points method so that 20.0000 mA will be displayed as 39.20 GPM. Scale Item #1 (Batch Total) by entering a Scale1 of 1.66667 and a multiplier of 0.01. That is because totalizing sums readings in gallons every second. Since our rate is in GPM, we have to divide by 60. Enter an Offset1 of 55.00 to serve as the batch setpoint in gallons. Set Setpoint2 to 54.00 to activate Relay 2 to slow the fill rate.




1/RATE MODE (Extended Counter)




An example of 1/Rate is the time it takes an item takes to travel through an oven at a measured rate. Like Rate, 1/Rate can be scaled using Scale1 and Offset1. With no offset and Scale1 set to 1, Rate A for the full analog input range will be displayed as 0-100000, and 1/A will be displayed as 100000/A. Both the A and 1/A readings are multiplied by Scale1 and offset by Offset1. With Scale1 set to 1, A is displayed as 10000, and 1/A is displayed as 100. With Scale1 set to 2, A is displayed as 20000, and 1/A is displayed as 200. If square root extraction is applied to rate, the rate display A is replaced by \sqrt{A} , and 1/A is replaced by $1/\sqrt{A}$. 1/A does not apply to custom curves.




Scaling may also be done by using the coordinates of 2 points method, which automatically calculates scale and offset for the displayed value when the low and high input signals and the corresponding desired low and high displayed values are entered.




KEYSTROKES FOR SETUP

If the *MENU* > key does not work, see Section 9 “Enabling & Locking Out Menu Items.” Menus are dynamic. Menu items will only appear if appropriate for previously made menu selections. For example, Batch menu items will only appear if “Batch” was selected under “Rate.” Extended counter items will only appear if “Extended” was selected under “Config.”


 Press Menu	 Press Digit Select Key	 Press Value Select Key	
InPut Input	VF0-10 0-10V full-scale input	Basic	A_OnLy Rate for Channel A (Item #1).
	VF4-20 4-20 mA full-scale input		A_Atot Rate for Channel A (Item #1). Total for Channel A (Item #2).
	VF_0-1 0-1 mA full-scale input	Extended	bAtCH Batch control mode. Batch total (Item #1). Grand total or number of batches (Item #2). Fill rate (Item #3).
			1/A 1/Rate for Channel A (Item #1).
SEtUp Setup	000_0 Stored totals	0 Zero totals at power-on. 1 Restore totals at power-on.	
	000_0 Leading zeros	0 Blank leading zeros. 1 Display leading zeros.	
	000_0 Scale factor 1 setup	0 Input scale factor 1 and offset 1. 1 Use coordinates of 2 points method.	
	000_0 Operation of rear connector inputs 1 & 2. True = logic 1 (0V or tied to digital ground). False = 0 (5V or open).	0 1 = Meter Reset*, 2 = Function Reset* 1 1 = Meter Reset*, 2 = Meter Hold* 2 1 = Meter Reset*, 2 = Peak or Valley Display* 3 1 = Meter Reset*, 2 = External Gate* 4 1 = Function Reset*, 2 = Meter Hold* 5 1 = Valley Only Display, 2 = Peak Only Display 6 1 = Function Reset*, 2 = External Gate* 7 1 = Meter Hold*, Peak or Valley Display* 8 1 = Meter Hold*, 2 = External Gate* 9 1 = Peak or Valley Display, 2 = External Gate* A 1 = Meter Reset*, 2 = Display Blank* B 1 = Function Reset*, 2 = Display Blank* C 1 = Meter Hold*, 2 = Display Blank* D 1 = Peak or Valley Display, 2 = Display Blank* E 1 = Display Blank, 2 = External Gate* F 1 = Display Item #2*, 2 = Display Item #3* ----- With neither 1 nor 2, or both 1 & 2, display Item #1. 1 & 2 both at 0V for selections 5 , 7 , D = Function Reset* (erases all totals). 1 & 2 both at 0V for selections 0 , 1 , 2 , 3 , 4 , 6 , 8 , A , B , C , E = Meter Reset* (can restore totals).	

 Press Menu	 Press Digit Select Key	 Press Value Select Key
ConFiG Configuration	<u>0000</u> Display mode	<u>0</u> Normal, overload to exponential format <u>1</u> Normal, overload to 999999 <u>2</u> 1 right-hand dummy zero <u>3</u> 2 right-hand dummy zeros <u>4</u> Time display in seconds <u>5</u> Time display in HH.MM.SS format <u>6</u> Remote display (H, K, L commands) <u>7</u> Single-value remote display <u>8</u> Show 1 st string value, slaved to another meter <u>9</u> Show 2 nd string value, slaved to another meter <u>A</u> Show 3 rd string value, slaved to another meter <u>B</u> Show 4 th string value, slaved to another meter <u>C</u> Custom Start, Stop, Skip, Show
	<u>0000</u> Counter mode	<u>0</u> Basic counter <u>1</u> Extended counter <u>2</u> Extended counter, custom curve #1 selected <u>3</u> Extended counter, custom curve #2 selected
	<u>0000</u> Linearization mode	<u>0</u> Linear rate input. <u>1</u> Square root rate input.
	<u>0000</u> Rate cutoff enable for totalizing	<u>0</u> Do not totalize rate values below CutoffF value. (avoids totalizing small offsets from 0 rate value or negative rate values). <u>1</u> Totalize all rates (required for bidirectional flow).
dSPyno Display #	<u>01</u> PEAK key action	<u>0</u> Display Peak <u>1</u> Display Valley <u>2</u> Peak (1 st push), Valley (2 nd push)
	<u>01</u> Item to display after Meter Reset*	<u>1</u> Item #1* <u>2</u> Item #2* <u>3</u> Item #3*
CutoffF Totalizing cutoff*	<u>00000</u> <u>00000</u> <u>00000</u> <u>00000</u> <u>00000</u> Select digit to flash.	Select <u>0</u> thru <u>9</u> for flashing digits. In A_Atot or Batch modes, meter will not totalize rate values below this cutoff to avoid totalizing small offsets from zero.
GAtE t Gate time*	<u>000.00</u> <u>000.00</u> <u>000.00</u> <u>000.00</u> <u>000.00</u> Select digit to flash.	Select <u>0</u> thru <u>9</u> for flashing digit to set gate time* in seconds. Decimal point location is fixed for 10 ms resolution. This is time over which rate is measured.
ti_Out Timeout*	<u>000.00</u> <u>000.00</u> <u>000.00</u> <u>000.00</u> <u>000.00</u> Select digit to flash.	Select <u>0</u> thru <u>9</u> for flashing digit to set timeout* in seconds. Decimal point location is fixed for 10 ms resolution. This is time during which batch relay is de-energized at the end of a batch cycle.

 Press Menu	 Press Digit Select Key	 Press Value Select Key
bAtCH Batch setup	00000 & 00000	0 Not used with VF Batch. Set to 0.
	00000 Batch triggering	0 Use gate time* as delay between batches. 1 Use External Input B to start each new batch.
	00000 Definition of Item #2	0 Make Item #2 the Grand Total of all batches. 1 Make Item #2 the Total Number of batches.
	00000 Action after Meter Reset	0 Display "rEAdy." RESET key starts batching. 1 Start batching upon Meter Reset.
FiLteR Filtering	00000 Signal filtering	0 Adaptive moving average filter. Restarts filter for high actual changes in signal. 1 Conventional moving average filter without reset.
	00000 Peak & Valley filtering	0 Peak* or Valley* value from unfiltered signal. 1 Peak* or Valley* value from filtered signal.
	00000 Display filtering	0 Display value of unfiltered signal. 1 Display value of filtered signal.
	00000 Adaptive filter setup	0 Set adaptive filter for normal noise. 1 Set adaptive filter for presence of high transients.
	00000 Filter time constant	0 No filter 1 0.1 sec 2 0.2 sec 3 0.4 sec 4 0.8 sec 5 1.6 sec 6 3.2 sec 7 6.4 sec
dEC.Pt1 Decimal pt1	1.1111 Decimal point flashes.	1.1111 11.1111 111.111 1111.11 11111.1 111111. Press \wedge to shift the decimal point.
dEC.Pt2 Decimal pt2	2.22222 Decimal point flashes.	2.22222 22.2222 222.222 2222.22 22222.2 222222. Press \wedge to shift the decimal point.
Scale and Offset scaling method if selected under SEtuP		
SCALE1 Scale Factor 1	0.00000 0.00000 0.00000 0.00000 0.00000 0.00000 Select the digit to flash for the Scale Value, then press \gt one more time for the Scale Multiplier.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. This will set the Scale Value* from -9.99999 to 9.99999 with a fixed decimal point. Then press \wedge to select a value from 0.00001 to 100000 in decade steps for the Scale Multiplier. Scale Factor = Scale Value x Scale Multiplier.
OFFSt1 Offset 1	000000 000000 000000 000000 000000 000000 Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. Use dEC.Pt1 to set the decimal point.
SCALE2	Scale Factor 2.	Make the same Scale Factor 1.
OFFSt2	Offset 2.	Make the same as for Offset 1.

 Press Menu	 Press Digit Select Key	 Press Value Select Key
Coordinates of 2 points scaling method if selected under SEtuP		
Lo_In1 Low signal input 1.	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. Move decimal point location when flashing.
Lo_rd1 Reading at Lo In1.	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. Decimal point is fixed by dEC.Pt1 .
Hi_In2 High signal input 2.	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. Move decimal point location when flashing.
Hi_rd2 Reading at Hi In2.	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. Decimal point is fixed by dEC.Pt1 .
Special curve offset for square root or custom curve linearization if selected under ConFiG		
rd0_In	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. Decimal point is fixed by dEC.Pt1 .
Scale multiplier		
rESoLn Resolution	Flashing 6-digit number in decade steps from 0.00001 to 100000	Press ^ to select. This multiplier R appears with the Batch mode and can be applied to Grand Total to set its decimal point.
Quartz crystal time base calibration		
CALib	Time base calibration.	Do not change. See Calibration section of manual.
Option dependent menu items		
Source AL_SEt dEUn1b dEUn2b dEUn1h dEUn2h Menu items related to alarms . These will only appear if relay board is detected. If so, please see Section 13.		
An_SEt An_Lo An_Hi Menu items related to analog output . These will only appear if an analog output board is detected. If so, please see Section 14.		
SEr_1 SEr_2 SEr_3 SEr_4 Menu items related to serial communications . These will only appear if an RS232 or RS485 I/O board is detected. If so, please see Section 15.		
Menu lockout items		
Loc_1 Loc_2 Loc_3 Loc_4 Menu items used to enable or lock out (hide) other menu items. Loc menu items may be locked out by a hardware jumper. Please see Section 9.		

11 QUADRATURE SIGNAL CONDITIONER

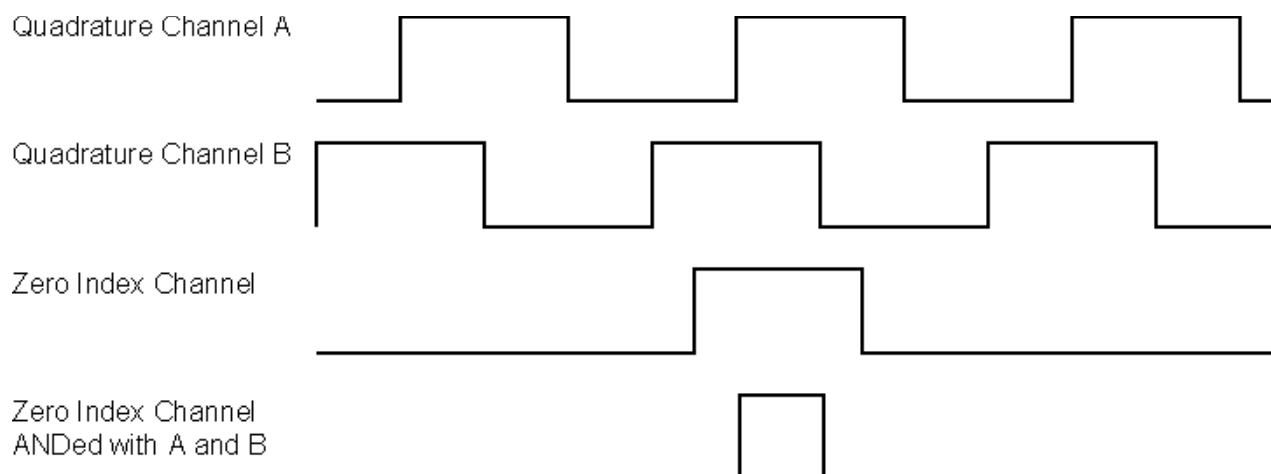

The quadrature signal conditioner board can be used for quadrature position (with Basic or Extended main board) or for quadrature rate (with Extended main board). Two quadrature signals, which are 90° out of phase, are applied to the Channel A and B inputs. Their phase relationship determines whether the count is up (+) or down (-). A zero index signal may be applied to Channel Z as a position reference.


Position in engineering units is determined by adding or subtracting transitions, as determined by the signal phase relationship, applying a programmable scale factor to the total, and adding programmable Offset1 to the scaled total. The display update rate is set by a gate time, which is programmed to 10 ms. When the scaled total reaches a programmable Preset, it is reset to Offset 1.

Rate in engineering units is determined by measuring Rate A and Rate B in transitions per second for Channels A and B, subtracting Rate B from Rate A, and applying a scale factor. Rate is measured over a gate time, which is programmable from 10 ms to 199.99 sec. Since one of the two channels may not be measuring any pulses over the gate time, a timeout from 10 ms to 199.99 sec is also programmable. The meter update rate will never be less than every timeout. Quadrature rate provides a high resolution, high accuracy display.

A zero index function is available to zero the counts in the event of a pulse on a separate zero index channel. This function utilizes the programmable Pulses* item. This is the number pulses between zero index marks x the edges per pulse (1, 2 or 4) x the scale factor. Since a wide zero index pulse could cause a count discrepancy in the region between transitions, the zero index pulse can be shaped by an AND combination with the A or B channels, as set by jumpers. Please see the diagram at the top of this page, which shows an AND combination of the zero index channel, Channel A and Channel B.

Please see further manual pages for the following features: relay output (48), analog output (51), serial communications (53), and transducer excitation output (57).

Jumper Settings

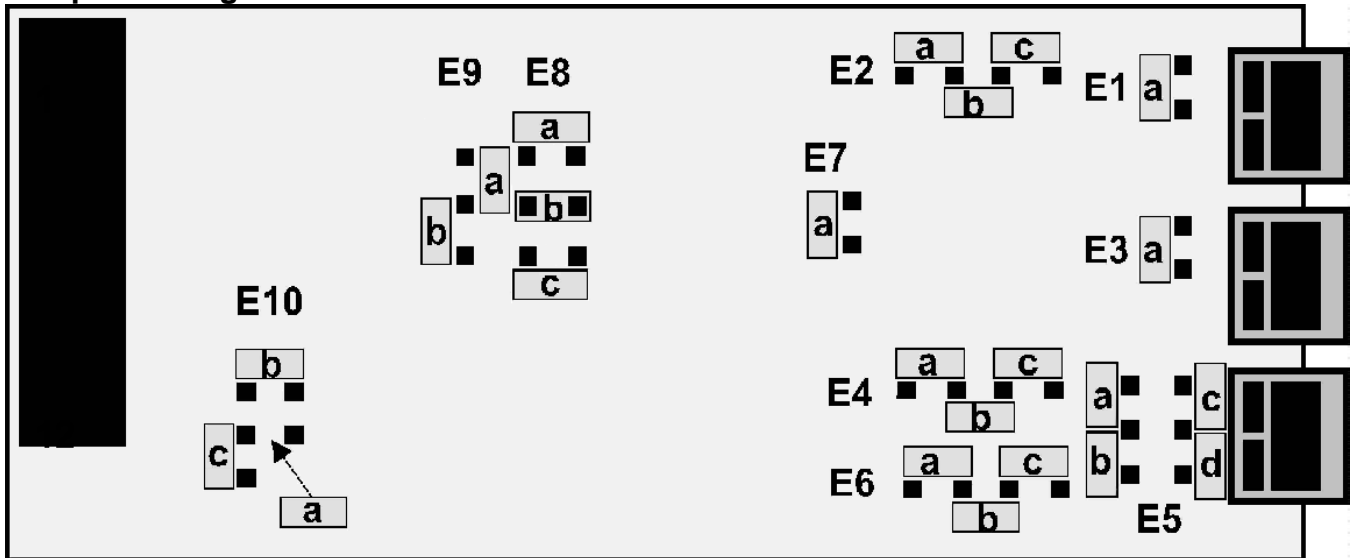

Note: Letters indicate jumper position. Jumpers are installed on pins adjacent to letters.

Input Type	E2	E4	E6	E5
Single-ended (signal & return)	a, c	a, c	a, c	c
Differential	b	b	b	c
Differential (with excitation and no zero index)	b	b	-	b, d
Input Termination (for differential inputs only)	E1	E3	E5	
For long cable runs	a	a	a	
For short cable runs	none	none	none	
Phase for Up Count	E7			
A positive, negative B transition (A leads B)	none			
A positive, positive B transition (B leads A)	a			
Count-by Options	E9			
X1 = positive edge of A input	none			
X2 = positive & negative edges of A input	a			
X4 = positive & negative edges of A & B inputs	b			
Zero Index Polarity	E8			
Positive	c			
Negative	none			
Zero Index ANDing	E10		E8	

Zero Index (no ANDing)	c	-
Zero Index AND /A	a	-
Zero Index AND /B	a	a
Zero Index AND A	a	b
Zero Index AND B	a	a, b
Zero Index AND /A AND /B	b	-
Zero Index AND /A AND B	b	a
Zero Index AND A AND /B	b	b
Zero Index AND A AND B	b	a, b

**PROGRAMMING EXAMPLE FOR QUADRATURE TOTAL:
DISPLAY DISTANCE TO 0.001 FT FROM A 1024 PULSE/REV QUADRATURE ENCODER**

Dig. No.	S	1	2	3	4	5	6	
InPut			q	u	A	d	r	t o t A L
SEtUP			0	0	1	0	0	
ConFiG				1	0	0	0	
dSPyno						0	1	
PULSES	0	1	0	2	4.			
GAteT			0	0	0.	1	0	
DecPt1		1	1	1.	1	1	1	
Lo In1		0	0	0	0	0	0	
Lo rd1		0	0	0.	0	0	0	
Hi In1		0	1	0	2	4.	0	
Hi rd1		0	0	1.	7	8	2	
CALib	-		0	0	0	0	0	Do Not Change Calib

Application: Display distance in feet with 3 decimal points using a 1024 pulse/revolution quadrature encoder tied to a roller with 1.782 ft circumference.

Solution: Set Input to “Quadrature Total.” Set Gate Time to 0.01 sec for fast display updates. Set DecPt1 to 3 places. Under Setup, select coordinates of 2 points scaling method. Set Hi In1 to 1024.0 (pulses) and the desired Hi Rd1 to 1.782 (feet).




KEYSTROKES FOR SETUP OF QUADRATURE TOTAL

If the *MENU* > key does not work, see Section 9 “Enabling & Locking Out Menu Items.”

Press Menu	Press Digit Select Key		Press Value Select Key	
InPut Input	quAdr Quadrature	Basic meter	totAL	Quadrature total (select for position)
		Extended	rAtE	Quadrature rate.
SEtUP Setup	00000	Stored totals	0	Zero all totals at power-on
			1	Restore totals at power-on. Set PULSES to 0.
	00000	Leading zeros	0	Blank leading zeros.
			1	Display leading zeros.
	00000	Scaling method	0	Input scale factor 1 and offset 1
			1	Use coordinates of 2 points method
	00000	Not applicable	0	Set to 0.

	<p>00000 Operation of rear connector inputs 1 & 2. True = logic 1 (0V or tied to digital ground). False = 0 (5V or open).</p>	<p>0 1 = Meter Reset*, 2 = Function Reset* 1 1 = Meter Reset*, 2 = Meter Hold* 2 1 = Meter Reset*, 2 = Peak or Valley Display* 3 1 = Meter Reset*, 2 = External Gate* 4 1 = Function Reset*, 2 = Meter Hold* 5 1 = Valley Only Display**, 2=Peak Only Display** 6 1 = Function Reset*, 2 = External Gate* 7 1 = Meter Hold**, Peak or Valley Display** 8 1 = Reset Total A**, 2 = Reset Total B** 9 1 = Force Alarm1, 2 = Force Alarm2 A 1 = Meter Reset*, 2 = Display Blank* B 1 = Function Reset*, 2 = Display Blank* C 1 = Meter Hold*, 2 = Display Blank*</p>
	<p>00000 Operation of rear connector inputs 1 & 2. True = logic 1 (0V or tied to digital ground). False = 0 (5V or open).</p>	<p>D 1 = Peak or Valley Display**, 2 = Display Blank** E 1 = Display Blank, 2 = External Gate* F 1 = Display Item #2, 2 = Display Item #3 With 1 and 2 at 5V or open, Display Item #1.</p> <p>-----</p> <p>* 1 & 2 both at 0V = Meter Reset (can restore totals). ** 1 & 2 both at 0V for selections 5, 7, 8, D = Function Reset* (erases all totals).</p>
ConFIG Configura- tion	<p>0000 Display mode</p>	<p>0 Normal, overload to exponential format 1 Normal, overload to 999999 Normally select 1, required for Preset function. See dual signal conditioner for other available modes.</p>
	<p>0000 Counter type</p>	<p>0 Basic counter (use for quadrature total) 1 Extended counter</p>
	<p>0000 Square root</p>	<p>0 Set to 0.</p>
	<p>0000 V-to-F batch</p>	<p>0 Set to 0.</p>
dSPyno Display	<p>00 Item #</p>	<p>0 Set to 0 (ignored for Quadrature Total).</p>
	<p>00 Response to PEAK pushbutton</p>	<p>0 Peak 1 Valley 2 Peak (1st push), Valley (2nd push)</p>
PULSES Zero index pulses*	<p>00000 00000 00000 00000 00000 Select digit to flash.</p>	<p>Select 0 thru 9 for flashing digit to set zero index pulses. This should pulses per revolution x edges per pulse (1, 2 or 4) x scale factor.</p>
GAtE_t Gate time*	<p>000.00 000.00 000.00 000.00 000.00 Select digit to flash.</p>	<p>Select 0 thru 9 for flashing digit to set the display update rate from 10 ms to 199.99 s.</p>

dEC.Pt1 Decimal pt1	1.11111 Decimal point flashes.	1.11111 11.1111 111.111 1111.11 11111.1 111111. Press \wedge to shift decimal point.
Scale and Offset scaling method if selected under SEtuP		
SCALE1 Scale Factor 1	0.00000 0.00000 0.00000 0.00000 0.00000 0.00000 Select the digit to flash for the Scale Value, then press \gt one more time for the Scale Multiplier.	Select -9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. This will set the Scale Value* from -9.99999 to 9.99999 with a fixed decimal point. Then press \wedge to select a value from 0.00001 to 100000 in decade steps for the Scale Multiplier. Scale Factor = Scale Value x Scale Multiplier.
OFFSt1 Offset 1	000000 000000 000000 000000 000000 000000 Select digit to flash.	Select -9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. dEC.Pt1 is used for decimal point.

 Press Menu	 Press Digit Select Key	 Press Value Select Key
Coordinates of 2 points scaling method if selected under SEtUP		
Lo_In1 Low signal input 1.	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. Move decimal point location when flashing.
Lo_rd1 Reading at Lo In1.	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. dEC.Pt1 is used for decimal point.
Hi_In1 High signal input 2.	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. Move decimal point location when flashing.
Hi_rd1 Reading at Hi In2.	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. Decimal point is fixed by dEC.Pt1 .
PrESet Preset*	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. dEC.Pt1 is used. When the meter counts up and reaches the Preset, it reverts to Offset1. When the meter counts down and reaches Offset1, it reverts to Preset. Set to 0 for no Preset.
CALib	Time base calibration	Not applicable to Total. Do not change value!
Option-dependent menu items		
Source AL_SEt dEUn1b dEUn2b dEUn1h dEUn2h Menu items related to alarms . These will only appear if a relay board is detected. If so, please see Section 13.		
An_SEt An_Lo An_Hi Menu items related to analog output . These will only appear if an analog output board is detected. If so, please see Section 14.		
_SEr_1 _SEr_2 _SEr_3 _SEr_4 Menu items related to serial communications . These will only appear if an RS232 or RS485 I/O board is detected. If so, please see Section 15.		
Menu lockout items		
_Loc_1 _Loc_2 _Loc_3 _Loc_4 Menu items used to enable or lock out (hide) other menu items. Loc menu items may be locked out by a hardware jumper. Please see Section 9.		

* See Glossary for explanation of item.

**PROGRAMMING EXAMPLE FOR QUADRATURE RATE:
 DISPLAY RATE TO 0.001 FT/SEC FROM A 1024 PULSE/REV QUADRATURE ENCODER**

Dig. No.	S	1	2	3	4	5	6
InPut			q	u	A	d	r
SEtuP			0	0	1	1	0
ConFIG				1	1	0	0
dSPyno						0	1
GATe t			0	0	0.	2	2
ti Out			0	0	1.	0	0
FILtEr			0	0	0	1	0
DecPt1		1	1	1.	1	1	1
DecPt2		2	2	2.	2	2	2
Lo In1		0	0	0	0	0	0
Lo rd1		0	0	0.	0	0	0
Hi In1		0	1	0	2	4.	0
Hi rd1		0	0	1.	7	8	2
Lo In2		0	0	0	0	0	0
Lo rd2		0	0	0.	0	0	0
Hi In2		0	1	0	2	4.	0
Hi rd2		0	0	1.	7	8	2
rESoLn							1
CALib	-		0	0	0	0	0




Do Not Change Calib




Application: Display rate in feet/sec with 3 decimal points using a 1024 pulse/revolution quadrature encoder tied to a roller with 1.782 ft circumference. Have 4 display updates per second.




Solution: Set Input to “Quadrature Total.” Set Gate Time to .22 sec so that the display update rate becomes .22 sec +30 ms +1 period. Set Time-out to 1 sec, so that pulse rates under 1 Hz are displayed as 0. Set both DecPt1 and DecPt2 to 3 places. Under Setup, select coordinates of 2 points scaling method. Set both Hi In1 and Hi In2 to 1024.0 (pulses/sec) and both the desired Hi Rd1 and Hi Rd2 to 1.782 (feet/sec). Note: the duplicate entries are required because the quadrature meter subtracts counterclockwise pulses from clockwise pulses.

KEYSTROKES FOR SETUP OF QUADRATURE RATE

If the *MENU* > key does not work, see Section 9 “Enabling & Locking Out Menu Items.”

 Press Menu	 Press Digit Select Key	 Press Value Select Key
InPut Input	quAdr Quadrature	Basic meter totAL Quadrature total
		Extended rAtE Quadrature rate
SEtuP Setup	00000 Not applicable	0 Set to zero.
	00000 Leading zeros	0 Blank leading zeros. 1 Display leading zeros.
	00000 Scaling Method 1	0 Input scale factor 1 and offset 1 1 Use coordinates of 2 points method
	00000 Scaling Method 2	Make the same as Scaling Method 1
	00000 Operation of rear connector inputs 1 & 2. True = logic 1 (0V or tied to digital ground). False = 0 (5V or open).	0 1 = Meter Reset*, 2 = Function Reset* 1 1 = Meter Reset*, 2 = Meter Hold* 2 1 = Meter Reset*, 2 = Peak or Valley Display* 3 1 = Meter Reset*, 2 = External Gate* 4 1 = Function Reset*, 2 = Meter Hold* 5 1 = Valley Only Display, 2 = Peak Only Display 6 1 = Function Reset*, 2 = External Gate* 7 1 = Meter Hold*, Peak or Valley Display* 8 1 = Meter Hold*, 2 = External Gate* 9 1 = Peak or Valley Display, 2 = External Gate* A 1 = Meter Reset*, 2 = Display Blank* B 1 = Function Reset*, 2 = Display Blank* C 1 = Meter Hold*, 2 = Display Blank* D 1 = Peak or Valley Display, 2 = Display Blank* E 1 = Display Blank, 2 = External Gate* F 1 = Display Item #2*, 2 = Display Item #3* <hr/> With neither 1 nor 2, or both 1 & 2, display Item #1. 1 & 2 both at 0V for selections 5 , 7 , D = Function Reset* (erases all totals). 1 & 2 both at 0V for selections 0 , 1 , 2 , 3 , 4 , 6 , 8 , A , B , C , E = Meter Reset* (can restore totals).
ConFIG Configura- tion	0000 Display mode	0 Normal, overload to exponential format 1 Normal, overload to 999999 Normally select 1 , required for Preset function. See dual signal conditioner for other available modes.
	0000 Counter mode	0 Basic counter 1 Extended counter (required for Quadrature Rate)
	0000 Not applicable	0 Set to 0.
	0000 Not applicable	0 Set to 0.

 Press Menu	 Press Digit Select Key	 Press Value Select Key
dSPyno Display #	01 PEAK key action 01 Item to display after Meter Reset	0 Display Peak 1 Display Valley 2 Peak (1 st push), Valley (2 nd push) 1 Item #1* (Quadrature Rate = Rate A - Rate B) 2 Item #2* (Rate A) 3 Item #3* (Rate B)
GAtE_t Gate time*	000.00 000.00 000.00 000.00 000.00 Select digit to flash.	Select 0 thru 9 for flashing digit to set gate time* in seconds. Decimal point location is fixed for 10 ms resolution.
ti_Out Time-out*	000.00 000.00 000.00 000.00 000.00 Select digit to flash.	Select 0 thru 9 for flashing digit to set time-out* in seconds. Decimal point location is fixed for 10 ms resolution.
FILtEr Filtering	00000 Signal filtering	0 Adaptive moving average filter. Restarts filter for high actual changes in signal. 1 Conventional moving average filter without reset.
	00000 Peak & Valley filtering	0 Peak* or Valley* value from unfiltered signal. 1 Peak* or Valley* value from filtered signal.
	00000 Display filtering	0 Display value of unfiltered signal. 1 Display value of filtered signal.
	00000 Adaptive filter setup	0 Set adaptive filter for normal noise. 1 Set adaptive filter for presence of high transients.
	00000 Filter time constant	0 No filter 1 0.1 sec 2 0.2 sec 3 0.4 sec 4 0.8 sec 5 1.6 sec 6 3.2 sec 7 6.4 sec
dEC.Pt1 Decimal pt1	1.11111 Decimal point flashes.	1.11111 11.1111 111.111 1111.11 11111.1 111111. Press \wedge to shift decimal point of reading.
dEC.Pt2 Decimal pt2	2.22222 Decimal point flashes.	Make the same as dEC.Pt1
Scale and Offset scaling method if selected under SEtuP		
SCALE1 Scale Factor 1	0.00000 0.00000 0.00000 0.00000 0.00000 0.00000 Select the digit to flash for the Scale Value, then press \gt one more time for the Scale Multiplier.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. This will set the Scale Value* from -9.99999 to 9.99999 with a fixed decimal point. Then press \wedge to select a value from 0.00001 to 100000 in decade steps for the Scale Multiplier. Scale Factor = Scale Value x Scale Multiplier.
OFFSt1 Offset 1	000000 000000 000000 000000 000000 000000 Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. Use dEC.Pt1 to set the decimal point.
SCALE2	Scale Factor 2	Make the same as SCALE1 .
OFFSt2	Offset 2	Make the same as OFFSt1 .

 Press Menu	 Press Digit Select Key	 Press Value Select Key
Coordinates of 2 points scaling method if selected under SEtUP		
Lo_In1 Low signal input 1.	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. Move decimal point location when flashing.
Lo_rd1 Reading at Lo In1.	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. Decimal point is fixed by dEC.Pt1 .
Hi_In1 High signal input 1.	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. Move decimal point location when flashing.
Hi_rd1 Reading at Hi In1.	<u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> <u>000000</u> Select digit to flash.	Select 9 thru 9 for flashing first digit and 0 thru 9 for other flashing digits. Decimal point is fixed by dEC.Pt1 .
Lo_In2	Low signal input 2.	Make the same as Lo_In1
Lo_rd2	Reading at Lo In2	Make the same as Lo_rd1
Hi_In2	High signal input 2	Make the same as Hi_In1
Hi_rd2	Reading at Hi In2.	Make the same as Hi_rd1
Other setup parameters		
rESoLn Reading multiplier	Flashing 6-digit number in decade steps from <u>0.00001</u> to <u>100000</u>	Press \wedge to select a decade multiplier R for the rate reading. Set to 1.
_CALib	Time base calibration	Do not change. See Calibration section of manual.
Option dependent menu items		
Source AL_SEt dEUn1b dEUn2b dEUn1h dEUn2h Menu items related to alarms if a relay board is detected. If so, please see Section 13.		
An_SEt An_Lo An_Hi Menu items related to analog output if an analog output board is detected. If so, please see Section 14.		
SEr_1 SEr_2 SEr_3 SEr_4 Menu items related to serial communications if a serial board is detected. If so, please see Section 15.		
Menu lockout items		
Loc_1 Loc_2 Loc_3 Loc_4 Menu items used to enable or lock out (hide) other menu items. Loc menu items may be locked out by a hardware jumper. Please see Section 9.		

12. SERIAL INPUT METER / REMOTE DISPLAY OPERATION

With a Basic counter main board and a serial interface board, the counter can operate as a 6-digit serial input meter (or remote display) to display serial data received from a computer or PLC, or act as a slave display to another meter, counter or timer with a serial output. A signal conditioner board is not required, but will not interfere with remote display operation if installed.

The serial I/O interface can be provided by any of the following:

- **RS232 board:** single RJ11 or RJ11 & USB connectors for point-to-point communications. *ASCII Protocol Serial Communications Manual* available on our website.
- **RS485 board:** two RJ11 or RJ11 & USB connectors for multipoint communications, with digital addressing of up to 31 devices. Jumper selectable 2-wire (half duplex) or 4-wire (full duplex). *ASCII Protocol Serial Communications Manual* available on our website.
- **Modbus RS485 board:** two RJ45 connectors for multipoint communications, with digital addressing of up to 247 devices. Jumper selectable half duplex (2-wire) or full duplex connection. *Modbus Protocol Serial Communications Manual* available on our website.

Slave display operation to the RS232 output of another meter requires that the jumper **h** be installed on the RS232 board of the slave meter. Also required is a **reversing phone cable**, where the wire colors of the two connectors are reversed from left to right. For more information, please see the Serial Communications Options section of this manual or the Jumper Settings sections of the *Custom ASCII Protocol Serial Communications Manual*.

With an optional relay output board (contact or solid state relays), the serial input meter can provide remote alarm or control capability. The meter can be programmed so that the relays respond to the displayed reading or to received control characters. For setup information, please see the Dual Relay Output Option section of this manual.

With the optional analog output board, the serial input meter can provide an isolated, scalable 4-20 mA, 0-20 mA or 0-10V analog output which tracks the displayed reading, thereby serving as a serial-to-analog converter. For setup information, please see the Analog Output Option section of this manual.

Front panel setup required for serial input meter (or remote display) operation is shown on the next page. Two items require special explanation:




- The first digit under **ConFig** item should be set to a value **6** thru **C**. If no signal conditioner board is detected, the meter defaults to setting **6**, where **H**, **L**, **K** commands are enabled. **H** means display the remote data only. **K** means that the received value is stored as Item #3, to become the source for alarm comparisons and analog output. **L** means both **H** and **K**. In slave mode, the remote meter can display any item of up to four data Items (or string values), such as the Sum of Rates A & B (Item #1), Rate A (Item #2), or Rate B (Item #3).
- A timeout **ti_Out** can be set to a value from 10 ms to 199.99 sec. This is how long a serial reading will be displayed in the absence of a new serial input. If timeout is set to 0, the display will persist indefinitely in the absence of a new input.

Additional programmable features of the serial input meter are detailed in the “Command Mode for Remote Display Operation of Counter / Timer” and “Data Formats” sections of the *Custom ASCII Protocol Serial Communications Manual*. In particular, Mode 12 (hex C), which is invoked by setting the first digit under *ConFIG* to C, allows extraction of data from an ASCII string that contains multiple data values or non-numeric characters. This mode can accommodate selected Start and Stop characters. Any number of characters between the Start character and the data can be masked OFF. Up to 8 display characters (including sign and decimal point) can be masked ON. Any number of characters between the last displayed character and the Stop character can be masked OFF.

Instrument Setup software is required to set up parameters for the Remote Display in Mode 12 (hex C). This software is downloadable from our website.

SELECTED FRONT PANEL SETUP ITEMS FOR SERIAL INPUT METER (not consecutive)

If the *MENU* > key does not work, see Section 9 “Enabling & Locking Out Menu Items.”




 Press Menu	 Press Digit Select Key	 Press Value Select Key
ConFIG Configuration	0000 Display mode	6 Remote display (H, K, L commands) 7 Single-value remote display 8 Show 1 st string value, slaved to another meter 9 Show 2 nd string value, slaved to another meter A Show 3 rd string value, slaved to another meter B Show 4 th string value, slaved to another meter C Custom Start, Stop, Skip, Show characters
ti_Out Time-out	000.00 000.00 000.00 000.00 000.00 Select digit to flash.	Select 0 thru 9 for flashing digit to set time-out in seconds. Decimal point location is fixed for 10 ms resolution.
Ser 1	000 Baud rate Fixed parameters: No parity, 8 data bits, 1 stop bit	0 300 baud 1 600 baud 2 1200 baud 3 2400 baud 4 4800 baud 5 9600 baud 6 19200 baud
Ser 2	0000 Meter address	Select 0 thru F for addresses 1 thru 15. Select 0. thru F. (with decimal point) for addresses 16 thru 31.
Ser 3	00000 RS485	0 Full duplex 1 Half duplex
Ser 4	000 Serial protocol	0 Custom ASCII 1 Modbus RTU 2 Modbus ASCII
	000 Parity	0 None 1 Odd 2 Even
Addr	000 000 000 Modbus address	158 Select 0 through 9 for flashing digit. Address range is 1 to 247.

13. DUAL & QUAD RELAY OUTPUT OPTIONS

An optional relay board may be installed in the meter main board at plug position P2, adjacent to the power supply board. Four board versions are available: 2 or 4 relays, contact or solid state. Once installed, the relay board is recognized by the meter software or PC-based Instrument Setup software, which will bring up the appropriate menu items for the type of board. These menu items will not be brought up if a relay board is not detected. Menu selections for relays 3 and 4 will not be brought up if the dual relay board is detected. All relay boards offer a choice of operating modes: normally off or on, latched or non-latched, hysteresis band, deviation band, alarm based on filtered or unfiltered signal, and selectable number of readings in alarm zone for alarm. The source compared to the setpoint may be the displayed item or a non-displayed item. Please see the Glossary at the end of this manual for an explanation of special terms.




VIEWING & CHANGING SETPOINTS







The < (Alarms) key can be used to step through and view setpoints while the meter continues to make conversions and performs setpoint control. If the > (Peak) key is pressed while a setpoint is displayed, conversion stops and the setpoint can be changed. After pressing < you have 30 seconds, or the meter reverts to the normal display. To view setpoints, menu item Loc1, digit 4, must have been set to 0. To change setpoints, menu item Loc4, digit 6, must have been set to 0.

 Press < Alarms	 Press Digit Select Key	 Press Value Select Key
3950.00 Press < (Alarms) to display Alarm 1 setpoint.	3950.00 Current setpoint 1 value blinks, and Alarm 1 LED indicator lights. Press > to select a digit, which will blink.	3050.00 To change setpoint 1 value, press ^ to change selected blinking digits.
3950.00 Press < (Alarms) to display Alarm 2 setpoint.	3950.00 Current setpoint 2 value blinks, and Alarm 2 LED indicator lights. Press > to select a digit, which will blink.	3050.00 To change setpoint 2 value, press ^ to change selected blinking digits.
3950.00 Press < (Alarms) to display Alarm 3 setpoint.	3950.00 Current setpoint 3 value blinks, and Alarm 3 LED indicator lights. Press > to select a digit, which will blink.	3050.00 To change setpoint 3 value, press ^ to change selected blinking digits.
3950.00 Press < (Alarms) to display Alarm 4 setpoint.	3950.00 Current setpoint 4 value blinks, and Alarm 4 LED indicator lights. Press > to select a digit, which will blink.	3050.00 To change setpoint 4 value, press ^ to change selected blinking digits.
3000.24 Press < (Alarms) again. Meter will reset and display the current reading.		

KEYSTROKES FOR SETUP

If the *MENU* > key does not work, see Section 9 “Enabling & Locking Out Menu Items.”

 Press Menu	 Press Digit Select Key	 Press Value Select Key	
Source Source to compare to setpoint	0000 Setpoint 1 compared to:	1 Filtered item 1 Item #1	2 Item #2 3 Item #3
	0000 Setpoint 2 compared to:	1 Filtered item 1 Item #1	2 Item #2 3 Item #3
	0000 Setpoint 3 compared to:	1 Filtered item 1 Item #1	2 Item #2 3 Item #3
	0000 Setpoint 4 compared to:	1 Filtered item 1 Item #1	2 Item #2 3 Item #3
AL SEt Alarm Setup for relays 1 & 2 if detected. Press > until <i>ALSEt</i> is displayed.	00000 Relay state when alarm is active	0 Relay 1 on 1 Relay 1 off 2 Relay 1 on 3 Relay 1 off	Relay 2 on Relay 2 on Relay 2 off Relay 2 off
	00000 Alarm latching or non-latching (auto reset) (see Glossary)	0 AL1 auto reset 1 AL1 latching 2 AL1 auto reset 3 AL1 latching	AL2 auto reset AL2 auto reset AL2 latching AL2 latching
	00000 Alarm operates at and above setpoint (active high) or at and below setpoint (active low). (see Glossary)	0 AL1 active high 1 AL1 active low 2 AL1 disabled 3 AL1 active high 4 AL1 active low 5 AL1 disabled 6 AL1 active high 7 AL1 active low 8 AL1 disabled	AL2 active high AL2 active high AL2 active high AL2 active low AL2 active low AL2 active low AL2 active low AL2 disabled AL2 disabled AL2 disabled
	00000 Hysteresis mode or band deviation mode (see Glossary)	0 AL1 band deviation 1 AL1 hysteresis 2 AL1 band deviation 3 AL1 hysteresis 4 No deviation or hysteresis on menu.	AL2 band deviation AL2 band deviation AL2 hysteresis AL2 hysteresis
	00000 Number of consecutive readings in alarm zone to cause an alarm	0 After 1 reading 1 After 2 readings 2 After 4 readings 3 After 8 readings	4 After 16 readings 5 After 32 readings 6 After 64 readings 7 After 128 readings

 Press Menu	 Press Digit Select Key	 Press Value Select Key																										
ALS 34 Alarm Setup for relays 3 & 4 if detected.	00000 Relay state when alarm is active.	<table border="0"> <tr><td>0</td><td>Relay 3 on</td><td>Relay 4 on</td></tr> <tr><td>1</td><td>Relay 3 off</td><td>Relay 4 on</td></tr> <tr><td>2</td><td>Relay 3 on</td><td>Relay 4 off</td></tr> <tr><td>3</td><td>Relay 3 off</td><td>Relay 4 off</td></tr> </table>	0	Relay 3 on	Relay 4 on	1	Relay 3 off	Relay 4 on	2	Relay 3 on	Relay 4 off	3	Relay 3 off	Relay 4 off														
	0	Relay 3 on	Relay 4 on																									
	1	Relay 3 off	Relay 4 on																									
	2	Relay 3 on	Relay 4 off																									
	3	Relay 3 off	Relay 4 off																									
00000 Alarm latching or non-latching (auto reset). (see Glossary)	<table border="0"> <tr><td>0</td><td>Alarm 3 auto reset</td><td>Alarm 4 auto reset</td></tr> <tr><td>1</td><td>Alarm 3 latching</td><td>Alarm 4 auto reset</td></tr> <tr><td>2</td><td>Alarm 3 auto reset</td><td>Alarm 4 latching</td></tr> <tr><td>3</td><td>Alarm 3 latching</td><td>Alarm 4 latching</td></tr> </table>	0	Alarm 3 auto reset	Alarm 4 auto reset	1	Alarm 3 latching	Alarm 4 auto reset	2	Alarm 3 auto reset	Alarm 4 latching	3	Alarm 3 latching	Alarm 4 latching															
0	Alarm 3 auto reset	Alarm 4 auto reset																										
1	Alarm 3 latching	Alarm 4 auto reset																										
2	Alarm 3 auto reset	Alarm 4 latching																										
3	Alarm 3 latching	Alarm 4 latching																										
00000 Alarm operates at and above setpoint (active high) or at and below setpoint (active low). (see Glossary)	<table border="0"> <tr><td>0</td><td>AL3 active high</td><td>AL4 active high</td></tr> <tr><td>1</td><td>AL3 active low</td><td>AL4 active high</td></tr> <tr><td>2</td><td>AL3 disabled</td><td>AL4 active high</td></tr> <tr><td>3</td><td>AL3 active high</td><td>AL4 active low</td></tr> <tr><td>4</td><td>AL3 active low</td><td>AL4 active low</td></tr> <tr><td>5</td><td>AL3 disabled</td><td>AL4 active low</td></tr> <tr><td>6</td><td>AL3 active high</td><td>AL4 disabled</td></tr> <tr><td>7</td><td>AL3 active low</td><td>AL4 disabled</td></tr> <tr><td>8</td><td>AL3 disabled</td><td>AL4 disabled</td></tr> </table>	0	AL3 active high	AL4 active high	1	AL3 active low	AL4 active high	2	AL3 disabled	AL4 active high	3	AL3 active high	AL4 active low	4	AL3 active low	AL4 active low	5	AL3 disabled	AL4 active low	6	AL3 active high	AL4 disabled	7	AL3 active low	AL4 disabled	8	AL3 disabled	AL4 disabled
0	AL3 active high	AL4 active high																										
1	AL3 active low	AL4 active high																										
2	AL3 disabled	AL4 active high																										
3	AL3 active high	AL4 active low																										
4	AL3 active low	AL4 active low																										
5	AL3 disabled	AL4 active low																										
6	AL3 active high	AL4 disabled																										
7	AL3 active low	AL4 disabled																										
8	AL3 disabled	AL4 disabled																										
00000 Hysteresis mode or band deviation mode (see Glossary)	<table border="0"> <tr><td>0</td><td>AL3 band deviation</td><td>AL4 band deviation</td></tr> <tr><td>1</td><td>AL3 hysteresis</td><td>AL4 band deviation</td></tr> <tr><td>2</td><td>AL3 band deviation</td><td>AL4 hysteresis</td></tr> <tr><td>3</td><td>AL3 hysteresis</td><td>AL4 hysteresis</td></tr> </table>	0	AL3 band deviation	AL4 band deviation	1	AL3 hysteresis	AL4 band deviation	2	AL3 band deviation	AL4 hysteresis	3	AL3 hysteresis	AL4 hysteresis															
0	AL3 band deviation	AL4 band deviation																										
1	AL3 hysteresis	AL4 band deviation																										
2	AL3 band deviation	AL4 hysteresis																										
3	AL3 hysteresis	AL4 hysteresis																										
00000 Number of consecutive readings in alarm zone to cause an alarm.	<table border="0"> <tr><td>0</td><td>After 1 reading</td><td>4 After 16 readings</td></tr> <tr><td>1</td><td>After 2 readings</td><td>5 After 32 readings</td></tr> <tr><td>2</td><td>After 4 readings</td><td>6 After 64 readings</td></tr> <tr><td>3</td><td>After 8 readings</td><td>7 After 128 reading</td></tr> </table>	0	After 1 reading	4 After 16 readings	1	After 2 readings	5 After 32 readings	2	After 4 readings	6 After 64 readings	3	After 8 readings	7 After 128 reading															
0	After 1 reading	4 After 16 readings																										
1	After 2 readings	5 After 32 readings																										
2	After 4 readings	6 After 64 readings																										
3	After 8 readings	7 After 128 reading																										
 Press Menu	 Press Digit Select Key	 Press Value Select Key																										
dEUn1H Alarm 1 hysteresis	0.00000 0.00000 0.00000	Select 9 thru 9 for flashing first digit, 0 thru 9 for other flashing digits. Alarms will activate above the setpoint by the value entered and deactivate below the setpoint by the value entered. See Glossary.																										
DEUn2H Alarm 2 hysteresis	0.00000 0.00000 0.00000																											
DEUn1b Alarm 1 band deviation	Select digit to flash																											
DEUn2b Alarm 2 band deviation																												
dEUn3H Alarm 3 hysteresis																												
DEUn4H Alarm 4 hysteresis																												
DEUn3b Alarm 3 band deviation																												
DEUn4b Alarm 4 band deviation																												



* See Glossary for explanation of item.

14. SINGLE & DUAL ANALOG OUTPUT OPTIONS

Two versions of an analog board may be installed in the meter at rear panel jack position J4, adjacent to the signal conditioner board. Once installed, this board is recognized by the meter, which will bring up the appropriate menu items for it. These will not be brought up if an analog output board is not installed.

A single analog output version can be configured for unipolar 4-20 mA current, 0-20 mA current or 0-10V voltage, or bipolar -10 to +10V voltage (with a 20V voltage swing). Unipolar or bipolar operation is selected by a jumper.

A dual analog output version can be configured for two unipolar outputs, which can each be 4-20 mA, 0-20 mA or 0-10V. Current or voltage output is selected at each connector.

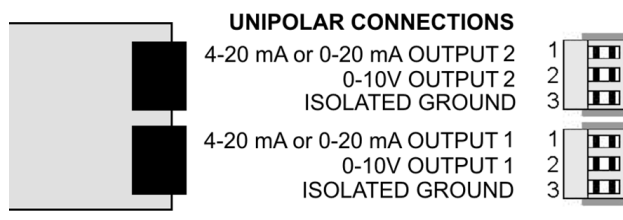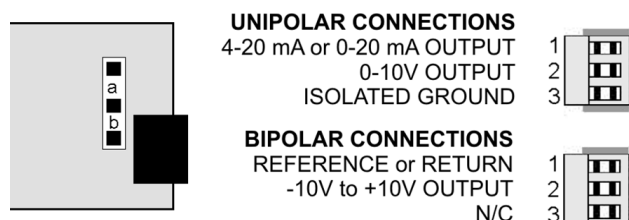

Unipolar current or voltage: Jumper **a**
 Bipolar -10 to +10 voltage: Jumper **b**

No jumpers, only selections at the connectors.

With either board, current or voltage output is selected at the connector and in the Menu. The low analog output (0 mA, 4 mA, 0V, or -10V) may be set to correspond to any low displayed reading **An_Lo**. The high analog output (20 mA, 0V or 10V) may be set to correspond to any high displayed reading **An_Hi**. The meter will then apply a straight line fit between these two end points to provide an analog output scaled to the meter reading. The decimal point location is fixed by the **dEC.Pt1** selection.




KEYSTROKES FOR SETUP OF SINGLE ANALOG OUTPUT BOARD

If the *MENU* > key does not work, see Section 9 “Enabling & Locking Out Menu Items.”

Press Menu	Press Digit Select Key	Press Value Select Key
An_SEt Analog Output Setup. Press > until <i>AnSEt</i> is displayed.	00 Calibration output selection.	0 0-20 mA current output 1 0-10V voltage output 2 4-20 mA current output 3 -10V to+10V voltage output
	00 Analog output source.	0 Filtered item 2 Item 2 1 Item 1 3 Item 3
An_Lo Low displayed value for -10V, 0V, 0 mA, or 4 mA	0.00000 0.00000 0.00000 0.00000 0.00000 0.00000 Select digit to flash	Select 0 thru 9 for flashing digit.
An_Hi High displayed value for 10V or 20 mA output	0.00000 0.00000 0.00000 0.00000 0.00000 0.00000 Select digit to flash	Select 0 thru 9 for flashing digit.

KEYSTROKES FOR SETUP OF DUAL ANALOG OUTPUT BOARD

If the *MENU* > key does not work, see Section 9 “Enabling & Locking Out Menu Items.”

 Press Menu	 Press Digit Select Key	 Press Value Select Key
An_SEt Analog Output Setup. Press > until <i>AnSEt</i> is displayed.	0000 Scaling of analog output 2	0 0-20 mA current output 1 0-10V voltage output 2 4-20 mA current output
	0000 Source of analog output 2	0 Filtered item 2 Item 2 1 Item 1 3 Item 3
	0000 Scaling of analog output 1	0 0-20 mA current output 1 0-10V voltage output 2 4-20 mA current output
	0000 Source of analog output 1	0 Filtered item 2 Item 2 1 Item 1 3 Item 3
An_Lo1 Low displayed value for 0V, 0 mA, or 4 mA output	0.00000 0.00000 0.00000 0.00000 0.00000 0.00000 Select digit to flash	Select 0 thru 9 for flashing digit.
An_Hi1 High displayed value for 10V or 20 mA output	0.00000 0.00000 0.00000 0.00000 0.00000 0.00000 Select digit to flash	Select 0 thru 9 for flashing digit. dEC.Pt1 selection.
An_Lo2 Low displayed value for 0V, 0 mA, or 4 mA output	0.00000 0.00000 0.00000 0.00000 0.00000 0.00000 Select digit to flash	Select 0 thru 9 for flashing digit.
An_Hi2 High displayed value for 10V or 20 mA output	0.00000 0.00000 0.00000 0.00000 0.00000 0.00000 Select digit to flash	Select 0 thru 9 for flashing digit.

15. SERIAL COMMUNICATIONS OPTIONS

A **serial communications board** may be connected to the meter main board at plug position P13 (middle position). Available boards are RS232, RS485 (with dual RJ11 connectors), RS485 Modbus (with dual RJ45 connectors), USB, USB-to-RS485 converter, Ethernet, and Ethernet-to-RS485 converter. The dual connectors of RS485 boards are wired in parallel to allow daisy chaining of addressable meters without use of a hub. Three serial communication protocols are selectable for all serial boards: Custom ASCII, Modbus RTU, and Modbus ASCII.

A **USB-to-RS485 converter board** or an **Ethernet-to-RS485 converter board** allows a meter to be interfaced to a computer and be the device server for a network of up to 31 other meters on an RS485 bus, while itself retaining all capabilities of a meter. The remote meters need to be equipped with our RS485 digital interface board with dual 6-pin RJ11 jacks, not our RS485 digital interface with dual 8-pin RJ45 jacks. The dual 6-pin RJ11 jacks on the RS485 board are wired in parallel to allow multiple meters to be daisy-chained using readily-available 6-wire data cables with no need for hand-wiring or an RS485 hub. The outer two wires are used for ground.






Use 6-wire, straight-through data cables, not 4-wire telephone cables or crossover cables, all the way from the device server to the last device on the RS485 bus. Connect ATX to ATX, BTX to BTX, etc., with no crossover as you go from device to device.

To connect a meter with a USB board to a computer, use a USB cable with Type A and Type B connectors. The computer will display “Found new Hardware” followed by “Welcome to the Found new Hardware Wizard.” Follow the instructions for software installation from a CD. When the installation is complete, use Device Manager to determine the com port. To get to Device Manger, go to the Windows Control Panel, click on System, click on the Hardware tab, then click on Device Manager. Go down the device list and click on Ports (COM & LPT) and USB serial port (com #). Note the com port # for use with communications to your meter, then exit Control Panel. If you later need to change the Com port, right-click on USB serial port (com #), then on Properties, Port settings, and Advanced. Change port to the desired number, click OK, then exit Control Panel.

To connect a meter with an Ethernet board to a computer, see our separate Ethernet Manual, which covers our Node Manager Software. This Windows-based application runs on a host computer and is used to configure our Ethernet Nodes. It automatically discovers all Nodes on a LAN or WAN, plus any devices connected to Server Nodes via an RS485 bus. It is used to configure each Node, such as setting communication parameters, naming the Node and associated devices, entering email addresses for alarm notification and data requests, selecting the Node's time zone for time-stamping of emails and streaming data, and upgrading firmware. Once configuration data has been stored in flash memory of all Nodes, Node Manager Software can be closed.



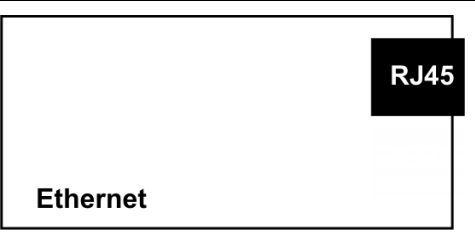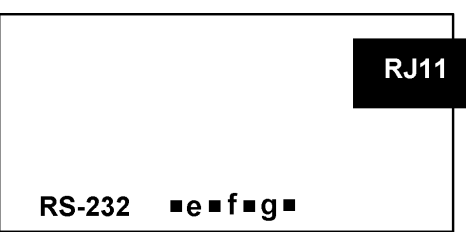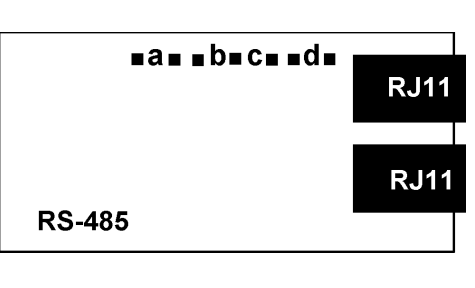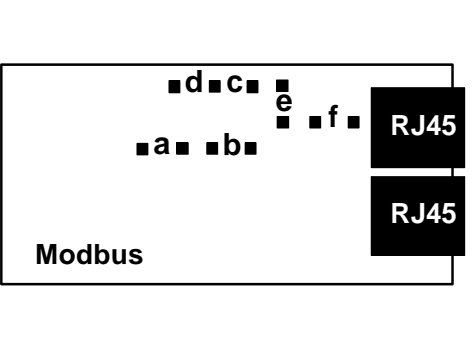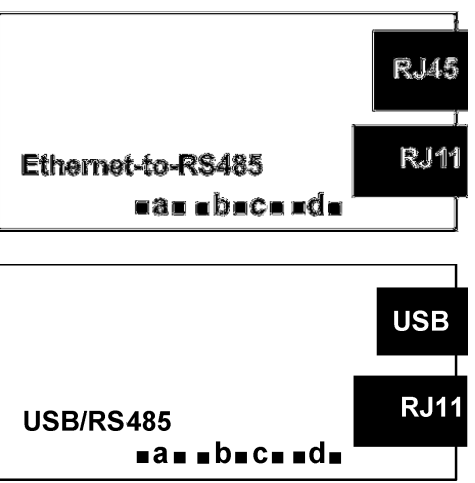

BOARD SETUP VIA JUMPERS






<p>Basic Ethernet Board No jumpers needed.</p>	
<p>RS232 Board e - Normal operation. f - Slave display to RS232 from another meter. g - Pull-up resistor on RTS line. Note: Board is shipped with jumpers e and g installed</p>	
<p>RS485 Board, Full Duplex Operation b & d - Installed on last meter in long cable run. RS485 Board, Half Duplex a & c - Installed for half duplex operation. d - Installed on last meter in line with long cable runs. Note: Board is shipped with no jumpers installed.</p>	
<p>RS485-Modbus Board, Full Duplex Operation b & e - Bias jumpers should be installed on 1 board. a & d - Installed on last meter in long cable run. RS485-Modbus Board, Half Duplex Operation b & e - bias jumpers installed on 1 board. c & f - installed for half duplex operation. a - installed on last meter in line with long cable runs. Note: Board is shipped with no jumpers installed.</p>	
<p>Ethernet-to-RS485 Converter Board & USB-to-RS485 Converter Board Full Duplex Operation No jumpers for short cable runs. Add b & d for long cable runs. Half Duplex Operation a + c for short cable runs. Add d for long cable runs.</p>	

KEYSTROKES FOR SETUP

If the *MENU* > key does not work, see Section 9 “Enabling & Locking Out Menu Items.”


 Press Menu	 Press Digit Select Key	 Press Value Select Key
Ser 1 Serial Setup 1. Press  until Ser 1 is displayed. <u>Fixed Parameters</u> No parity 8 data bits 1 stop bit	<u>000</u> Output filtering	<u>0</u> Send unfiltered signal <u>1</u> Send filtered signal
	<u>000</u> Baud rate	<u>0</u> 300 baud <u>4</u> 4800 baud <u>1</u> 600 baud <u>5</u> 9600 baud <u>2</u> 1200 baud <u>6</u> 19200 baud <u>3</u> 2400 baud
	<u>000</u> Digital output rate. rr = reading rate. rr depends on gate time and input frequency.	<u>0</u> Output at reading rate rr. <u>1</u> Output at rr/2 <u>5</u> Output at rr/32 <u>2</u> Output at rr/4 <u>6</u> Output at rr/64 <u>3</u> Output at rr/8 <u>7</u> Output at rr/128 <u>4</u> Output at rr/16 <u>8</u> Output at rr/256
Ser 2 Serial Setup 2	<u>0000</u> Line feed	<u>0</u> No LF after carriage return <u>1</u> LF after carriage return
	<u>0000</u> Alarm data with readings	<u>0</u> No alarm data <u>1</u> Alarm data with reading
	<u>0000</u> Output mode control	<u>0</u> Continuous data output <u>1</u> Data output on ASCII command only
	<u>0000</u> Meter address with Custom ASCII protocol*	Select <u>0</u> thru <u>F</u> for addresses 1 thru 15. Select <u>0.</u> thru <u>F.</u> (with decimal point) for addresses 16 thru 31.
Ser 3 Serial Setup 3	<u>00000</u> Half or full duplex	<u>0</u> Full duplex <u>1</u> Half duplex
	<u>00000</u> Recognition characters, start & stop characters. Special characters have to be downloaded via Instrument Setup software.	<u>0</u> * (asterisk) is recognition character. No start & stop characters. <u>1</u> Custom recognition character. No start & stop characters. <u>2</u> * (asterisk) is recognition character. Special start & stop characters. <u>3</u> Custom recognition characters. Special start & stop characters.
	<u>00000</u> RTS mode	<u>0</u> Normal RTS <u>1</u> Single transmission
	<u>00000</u> CR (LF) termination characters.	<u>0</u> Only at end of all items <u>1</u> At end of each item

 Press Menu	 Press Digit Select Key	 Press Value Select Key
	<u>00000</u> Data sent in continuous mode	<u>0</u> All Active Items <u>1</u> Item #1 only <u>2</u> Item #2 only (if active) <u>3</u> Item #3 only (if active) <u>4</u> Peak only <u>5</u> Displayed Item <u>6</u> Valley only <u>7</u> All Active Items + Peak + Valley
Ser 4 Serial Setup 4	<u>000</u> Modbus* ASCII gap timeout	<u>0</u> 1 sec <u>1</u> 3 sec <u>2</u> 5 sec <u>3</u> 10 sec
	<u>000</u> Serial protocol	<u>0</u> Custom ASCII* <u>1</u> Modbus* RTU <u>2</u> Modbus* ASCII
	<u>000</u> Parity	<u>0</u> None <u>1</u> Odd <u>2</u> Even
Addr Modbus Address	<u>000</u> <u>000</u> <u>000</u> Select digit to flash.	<u>158</u> Select <u>0</u> thru <u>9</u> for flashing digit. Address range is 1 to 247.

* See Glossary for explanation of item.

16. EXCITATION OUTPUTS & POWER SUPPLIES

Three isolated transducer excitation output levels are available from the power supply board. These are selectable via jumpers b, c, d, e, f in the upper right of the board, as illustrated. In addition, the board provides three jumper positions for special features. The same jumper locations apply to the universal power supply (95-240 Vac \pm 10% or 95-300 Vdc) and to the low voltage power supply (10-34 Vac or 10-48 Vdc, Micro-C & Mighty-1C only).

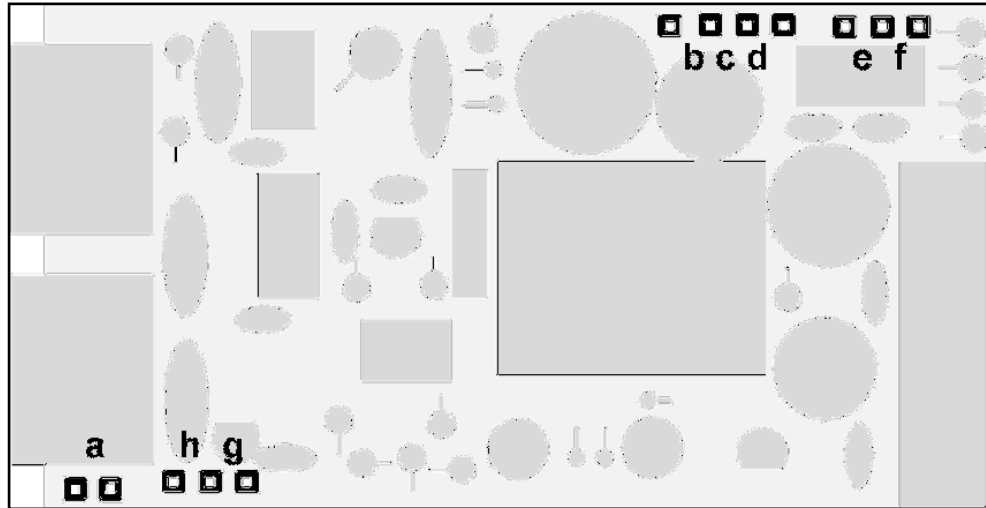

Excitation output	Jumper locations							
5 Vdc \pm 5%, 100 mA max	b, d, e	<table style="margin: auto; border-collapse: collapse;"> <tr> <td style="text-align: center;">b</td> <td style="text-align: center;">d</td> <td style="text-align: center;">e</td> </tr> <tr> <td style="text-align: center;">■</td> <td style="text-align: center;">■</td> <td style="text-align: center;">■</td> </tr> </table>	b	d	e	■	■	■
b	d	e						
■	■	■						
10 Vdc \pm 5%, 120 mA max	b, d, f	<table style="margin: auto; border-collapse: collapse;"> <tr> <td style="text-align: center;">b</td> <td style="text-align: center;">d</td> <td style="text-align: center;">f</td> </tr> <tr> <td style="text-align: center;">■</td> <td style="text-align: center;">■</td> <td style="text-align: center;">■</td> </tr> </table>	b	d	f	■	■	■
b	d	f						
■	■	■						
24 Vdc \pm 5%, 50 mA max	c	<table style="margin: auto; border-collapse: collapse;"> <tr> <td style="text-align: center;">c</td> </tr> <tr> <td style="text-align: center;">■</td> </tr> </table>	c	■				
c								
■								


SELECTION OF OTHER JUMPERS

- Jumper a-** Front panel menu lockout, locked when installed. (See Section 9)
- Jumper g-** Provides +5V power output at P1-4 when installed.
- Jumper h-** Connects "Digital Input B" to P1-4 when installed.

Note: The excitation power supply is floating with respect to meter ground. When powering transducers that have a common signal low and power supply return lead, jumper minus excitation to signal ground. Selection of Excitation Output 5V, 10V or 24V and the Menu Lockout are accomplished by jumpers on the P1 power supply. Unless specified at time of order, meters are shipped with 10Vdc Excitation Output selected.

MIGHTY-5C POWER SUPPLY

The Mighty-5C uses a switching power supply that operates from 95 to 240Vac. See the diagram below when connecting power. This power supply is in addition to and works in conjunction with the P1 power supply shown in Section 21.1. Signal Input and Excitation Outputs are connected to the Mighty-5C at P5. See Section 4 for connections.

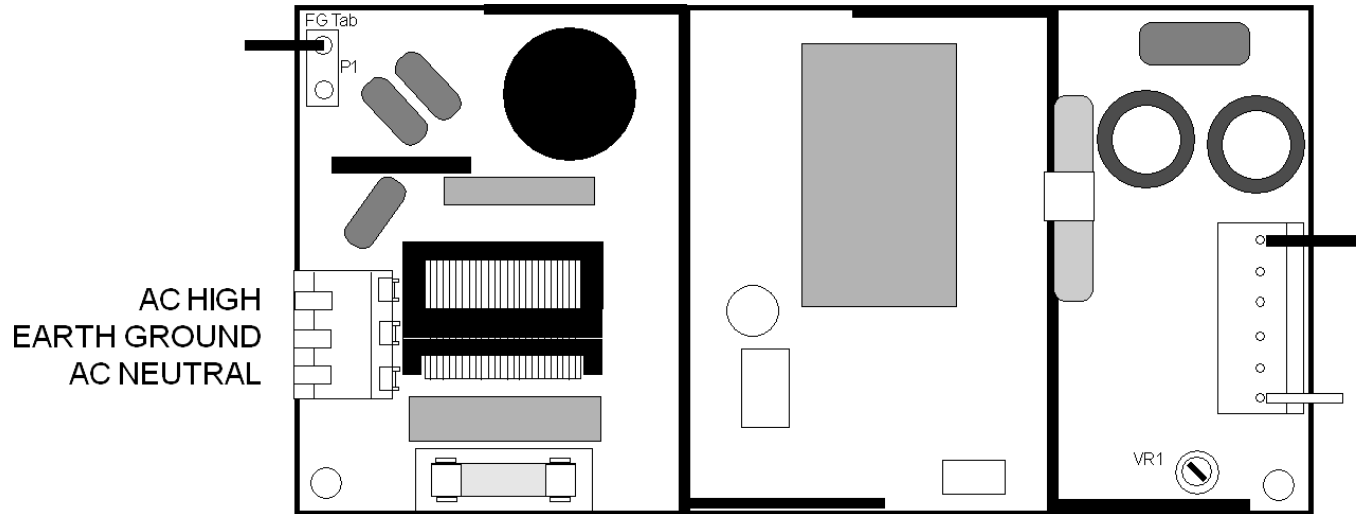

Might-5C Power Supply

17. DIGITAL CONTROL INPUTS

FUNCTION OF DIGITAL INPUTS

Meter Reset	Logical 0: The microcomputer reads and resets the meter to the values stored in nonvolatile memory. If totals are saved on power down, totals are reset to the saved value, otherwise totals are set to zero or to the offset value if offset is not zero.
Function Reset	Logical 0: All totals are reset to zero or to the offset value if offset is not zero, alarms are reset and peak display resets to minus overload.
Peak Display	Logical 0: The peak value of the filterable item is displayed. Logical 1: The present value the selected item is displayed.
Hold	Logical 0: The meter display and outputs are held at the last reading prior to the hold going low. Meter continues to totalize while meter is in hold. Logical 1: The display and outputs are updated normally.
External Gate	Logical 0: The gate time starts when input goes low and ends when gate time goes high. Logical 1: When external gate is selected, it overrides the internal gate. At power-on, the meter displays reset until the external gate input goes low and then high to complete a conversion. The new value will then be displayed until a new external gate occurs.
Display Blank	Logical 0: The display and indicator lights are blanked. Logical 1: The display and indicator lights are lit.
Display Item 2 & Item 3	Inputs A & B Logical 0 or 1: Item displayed. Input A Logical 0 & Input B Logical 1: Item 2 displayed. Input B Logical 0 & Input A Logical 1: Item 3 displayed.

18. INSTRUMENT SETUP VIA PC

Instrument Setup software is a PC program which is much easier to learn than front panel programming. It is of benefit whether or not the meter is connected to a PC. With the meter connected to a PC, it allows uploading, editing and downloading of setup data, execution of commands under computer control, listing, plotting and graphing of data, and computer prompted calibration. With the meter unconnected to a PC, it provides quick selection of jumper locations and a printable display of menu selections for front panel setup.

SOFTWARE INSTALLATION

Download *IS2*.exe* onto your PC from the web or the distribution CD. Double-click on the downloaded file to unzip it into a special directory, such as *c:\temp*. Within that directory, double-click on *setup.exe*, which will install the software on your PC.



PREREQUISITES FOR CONNECTED USE



- 1) PC with available RS232 com port.
- 2) Meter to be set up.
- 3) RS232 board in meter. This board can be used for setup, then be removed.
- 4) RJ11-to-DB9 RS232 cable to connect meter and PC (see Section 1, Ordering Guide).
- 5) *Instrument Setup* software.



ESTABLISHING COMMUNICATIONS

Connect the meter and PC. Apply power to the meter. Be sure that the meter is in Run Mode, not Setup Mode. To start the software from Windows, click on *Start => Programs => IS2 => IS2*. Click on *RS232 => Establish*. The program will temporarily set the selected Com port to the required baud rate, parity, data bits and stop bit. Once communications have been established, click on *Main Menu*. The software will sense the type of meter and installed boards, but it cannot sense jumpers positions nor set jumpers for you. If the computer is not connected to a meter, select *Counter/Timer* and *Series 2*.

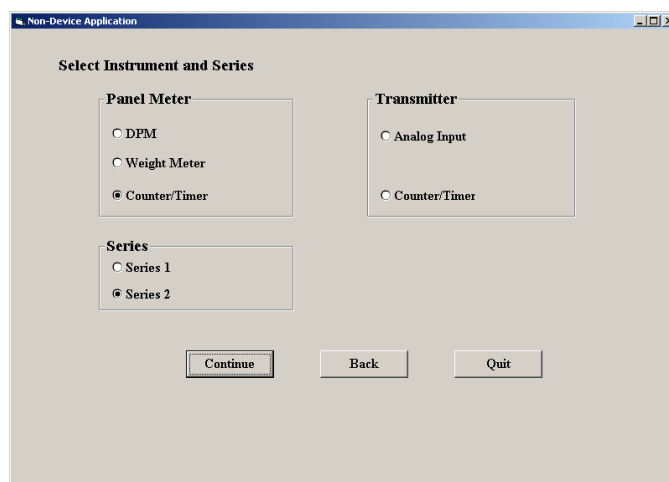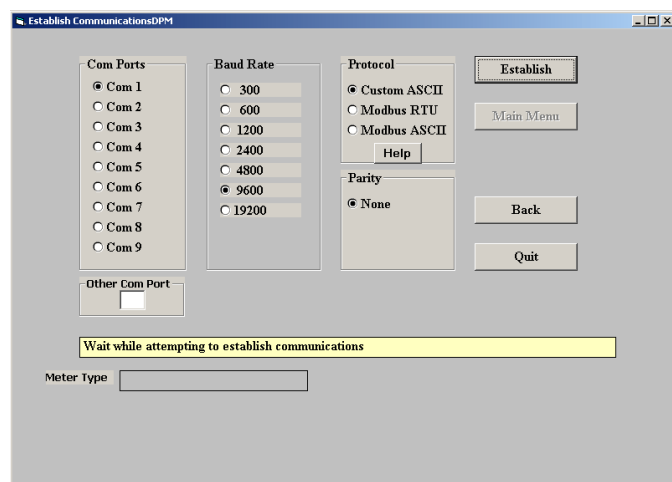

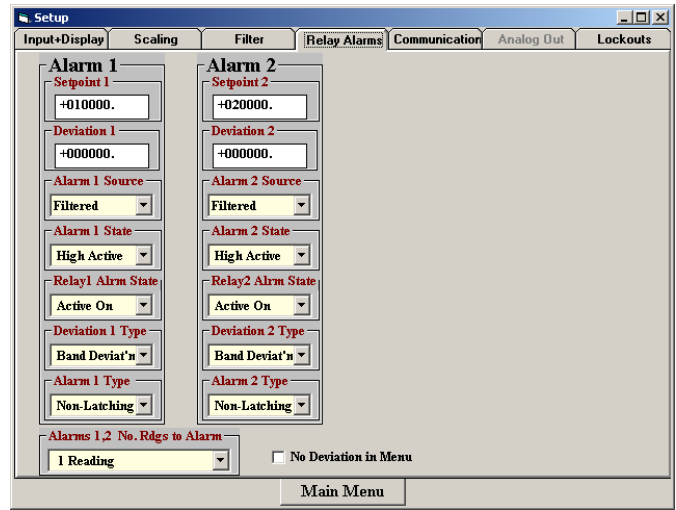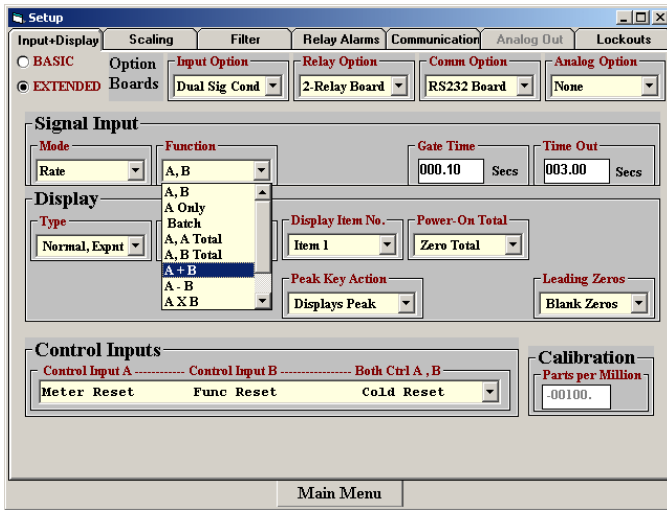


SETUP OF CONNECTED METER

A setup file can be retrieved from the meter (*Counter => Get Setup*), be edited (*View => Setup*), be saved to disk (*File => Save Setup*), be retrieved from disk (*File => Open Setup*), and be downloaded into one or multiple meters (*Counter => Put Setup*). Downloading of setup files from a PC can be a major time saving when multiple counters have to be set up in the same way.


You will find that *Instrument Setup* software is very user friendly, with separate tab-selectable windows for *Input+Display*, *Scaling*, *Filter*, *Relay Alarms*, *Communications*, *Analog Out*, and *Lockouts*. If the required hardware, such as the analog output board, is not sensed, the corresponding tab will be grayed out.

ADDITIONAL FEATURES WHEN CONNECTED

- **The Commands pull-down menu** allows you to perform Reset functions, to enter numerical values into the meter, and to retrieve numerical values from the meter (Items 1, 2, 3, Peak, Valley).

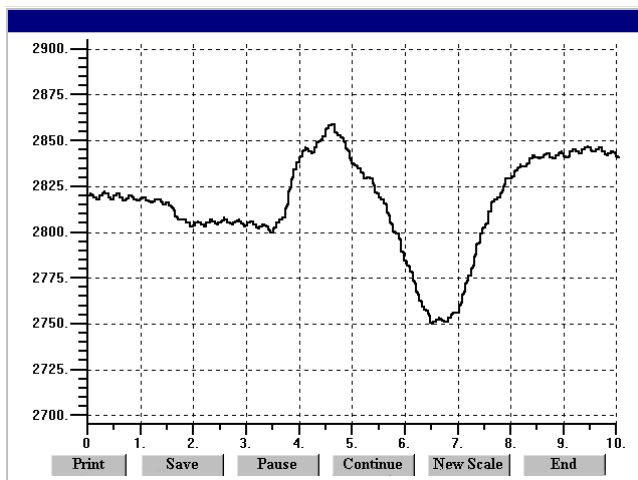

Plot

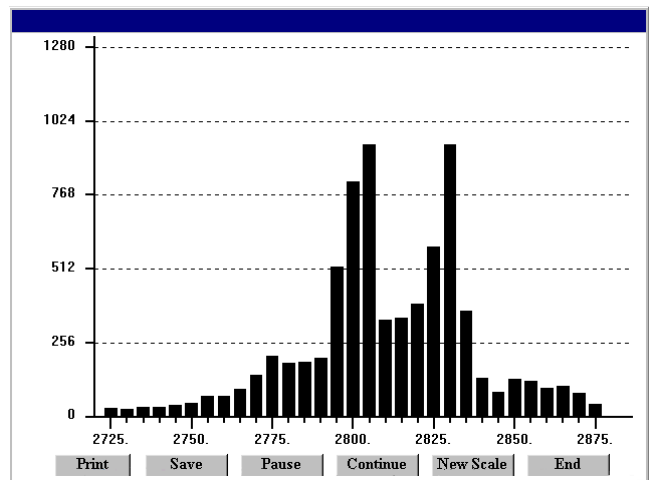

Graph

- **The Readings pull-down menu** provides three formats to display meter data on the PC monitor. Use the *Pause* and *Continue* buttons to control the timing of data collection, then

press *Print* for a hardcopy record on your PC printer.

- **List** presents the latest readings in a 20-row by 10-column table. Press *Pause* at any time to freeze the display. This is one method to capture peak readings.
 - **Plot** generates a plot of readings vs. time in seconds. It effectively turns the DPM-PC combination into a printing digital oscilloscope.
 - **Graph** generates a histogram, where the horizontal axis is the reading and the vertical axis is the number of occurrences of readings. The display continually resizes itself as the number of readings increases.
- **The Jumpers pull-down menu** shows board jumper corresponding to specific user selections.
 - **The Calibration pull-down menu** allows easy frequency calibration of the quartz crystal. Simply apply a known calibration frequency up to 1 MHz to Channel A of the dual channel signal conditioner board, type in the frequency value in Hz, and press *Enter*.

METER SETUP WITH AN UNCONNECTED PC

Instrument Setup software is also of benefit when the PC is not connected to a meter.

Upon launching the software, click on *None* for *Communications*, then on *Counter/Timer* and *Series 2*. Click on *File => Default Setup* to retrieve a default setup file from disk, or on *File => Open Setup* to retrieve a previously saved setup file from disk.

To enter new setup information, click on *View => Setup*, then make your screen selections as if you were connected to a meter. Tabs will be grayed out if you have not selected the required hardware under the *Input+Display* tab. When done, press on *Main Menu*, then on *View => Menu*. The selections made under *Setup* will now be shown in the form of the required front panel programming sequence, where each row corresponds to a menu item selected by the *>* key, and the seven data columns correspond to values entered via the *>* and *^* keys.

Click on any step in the sequence to bring up a detailed help window.


Click on *Print* for a hardcopy, which you can then use as an instruction sheet to program your meter via its front panel.

Click on *Main Menu => File => Save Setup As* to save your setup to disk and have an electronic record.

Dig. No.	S	1	2	3	4	5	6
InPut				r	A	t	E
SEtuP		0	0	0	0	0	0
ConFIG				0	1	0	0
dSPyno						0	1
GATe t			0	0	0.	1	0
ti Out			0	0	3.	0	0
FILtEr			0	0	0	1	1
SLOPE						0	1
DecPt1		1	1	1	1	1	1.
DecPt2		2	2	2	2	2	2.
SCALE1	+	1.	0	0	0	0	0
OFFSt1	+	0	0	0	0	0	0
SCALE2	+	1.	0	0	0	0	0
OFFSt2	+	0	0	0	0	0	0
SourcE				1	1		
AL SEt			0	0	0	0	0
dEUn1b	+	0	0	0	0	0	0
dEUn2b	+	0	0	0	0	0	0
SEr 1					0	5	0
SEr 2				0	0	1	1
SEr 3			0	0	0	0	1
SEr 4					0	1	0
Addr					0	0	1
CALib	-		0	0	1	0	0
Loc 1				0	0	0	0
Loc 2				0	0	0	0
Loc 3				0	0	0	0
Loc 4				0	0	0	0

19. CUSTOM CURVE LINEARIZATION

Curve.exe is a DOS-based, executable PC program used to set up an Extended meter* so that the readings have a user-defined, non-linear relationship with the input signal. The calculated linearizing parameters are downloaded into non-volatile memory of the meter. For example, it allows a meter to correct for non-linearity of nominally linear transducers, or to display volume from liquid level or from pressure at the bottom of an irregularly shaped tank. The curve fitting algorithm uses quadratic segments of varying length and curvature, and provides diagnostics to estimate curve fitting errors. The program is self-prompting, avoiding the need for a detailed printed manual. This manual section is only intended as an introduction and get-started guide.

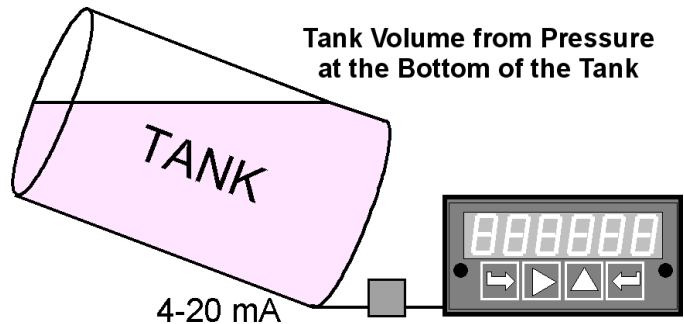

PREREQUISITES

- 1) PC-compatible computer with an available RS232 or USB port.
- 2) Extended meter*.
- 3) A serial communication board in the meter. This board can be removed following meter setup.
- 4) A suitable cable to connect the meter to a PC.
- 5) *Curve.exe* software (downloadable at no charge).



RJ11-to-DB9 RS-232 cable

GETTING STARTED

Download *curve.exe* into the same directory that will contain your data files, such as *c:\curves*. Set the meter to custom curve linearization. To do so, press the > key to get to **ConFG**, then set the fifth digit to **1**. This digit will only be displayed with an Extended meter*. Set the meter baud rate to 9600. To do so, press the > key to get to **Ser 1**, then set the entry to **050**. Set the meter address to 1. To do so, press the > key to get to **Ser 2**, then set the entry to **0011**. To execute the program from Windows, simply double-click on *curve.exe*. No software installation is required.

OPERATING MODES

The program will prompt you to enter your data in one of four modes. Pressing **R** (Enter) at any time returns you to the main menu.

- 1) **Text file entry mode**, with an X value in one column and a Y value in another. There can be additional columns, which are ignored. The file must have a DOS name of up to 8 characters and the extension **.RAW**. There can be from 5 to 180 rows. X is the input value and should be in the unit of measure for which the meter was set up, such as mV, V, mA or A. Y is the desired corresponding reading and can range from -99999 to 99999 with any decimal point.
- 2) **2-coordinate keyboard entry mode**, where an actual X input signal is applied, and the desired Y reading is entered from the keyboard.
- 3) **2-coordinate file entry mode**, where an actual X input signal is applied, and the

desired Y reading is provided from a file.

- 4) **Equation entry mode**, where the coefficients of a polynomial $Y = K1X^{P1} + K2X^{P2} + K3X^{P3} + \dots$ are entered. Up to 20 terms are allowed. And offset can be built into X.

REQUIRED USER INPUTS

- Select CTR
- You will be asked to supply the following:
LOW X-COORDINATE VALUE >
LOW INPUT MEASUREMENT VALUE >
HIGH X-COORDINATE VALUE >
HIGH INPUT MEASUREMENT VALUE >

This informs the computer of your signal conditioner jumper settings. Enter 0 and 0 for the two LOW values. For HIGH X, enter your signal conditioner jumper range in the same units of measure that you will be using in your *.RAW data input file. Enter **20** for 20 mA or **10** for 10V. For HIGH INPUT MEASUREMENT VALUE, enter **100000**,

You will be asked to select the position of the decimal point from 6=X.XXXXX, 5=XX.XXX, 4=XXX.XXX, 3=XXXX.XX, 2=XXXXX.X, 1=XXXXXX (for DPMs, the leading X is a blank). Specify the same position that you specified in the **dEc.Pt1** decimal point menu selection.

20. METER CALIBRATION

All ranges of the meter have been digitally calibrated at the factory prior to shipment using computers and calibration equipment certified to NIST standards. If recalibration is required, the meter may be returned to the factory or to any authorized distributor.

For frequency and rate measurements with the dual-channel signal conditioner, a calibration correction to the quartz crystal oscillator is stored in EEPROM on the main board. Calibration constants are also stored in EEPROM in the process receiver & totalizer signal conditioner board and in the analog output board. As a result, these two boards can be mixed and interchanged without requiring recalibration.

For frequency calibration using the dual-channel signal conditioner board, calibration may be performed in the field as follows using the front panel pushbuttons:


1. Set *InPut* to *rAtE* and *A only*.
2. Enter 0 in *CALib* to set initial correction to 0 PPM.
3. Set *SCALE* to -9.99999
4. Set *OFFSt1* to 999999
5. Apply a 100 kHz reference signal to channel A.
6. Enter the displayed reading in *CALib*.

For calibration of the process receiver & totalizer signal conditioner board or analog output board, an RS-232 board must be installed in the meter for serial communication with a PC. This board may be removed upon completion of calibration. Calibration software and step-by-step instructions are available from the factory.

21. MECHANICAL ASSEMBLY & PANEL MOUNTING, MICRO-C


REMOVING THE REAR PANEL

To remove the rear panel, first remove any connectors that are installed. Press down on both rear panel retaining tab releases and pull the top of the rear panel away from the case. The bottom of the rear panel will now lift out.

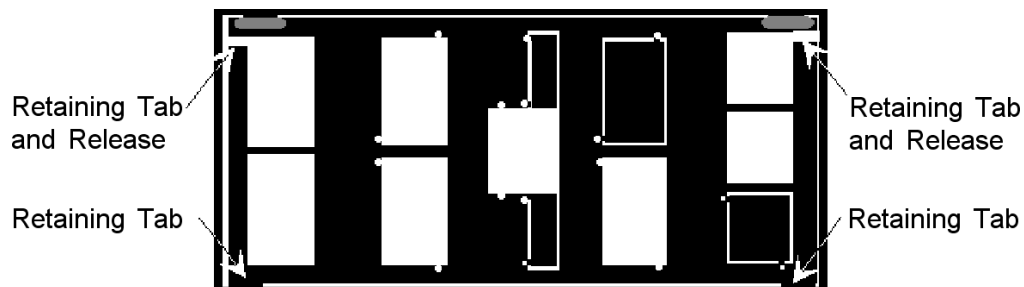

REMOVING THE METER FROM THE CASE

After removing the rear panel, the meter can be taken out of the case by carefully grasping the power supply board and signal conditioner board at the connectors and sliding the unit out the back of the case.

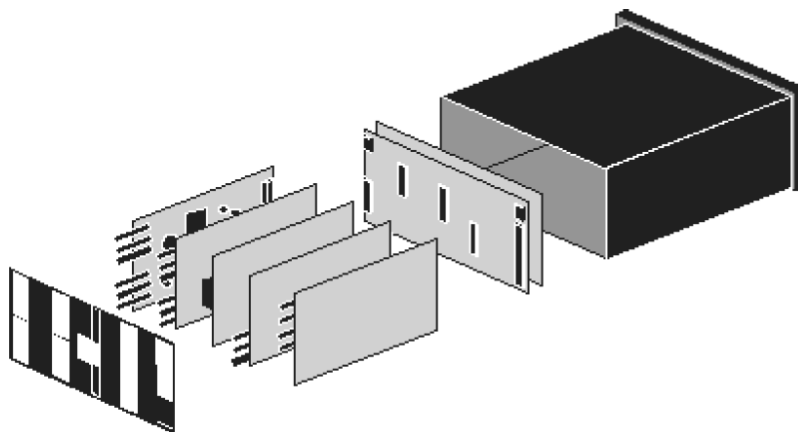


REASSEMBLING THE METER

Reverse the preceding procedures to reinstall the meter in the case. After the meter is in the case, insert the bottom tabs on the rear panel into the case first. Care must be taken to ensure the printed circuit boards are properly aligned by the board retaining pins on the inside of the rear panel.


PANEL MOUNTING THE MICRO-C

Ensure the O-ring is in place. Turn the two mounting screws counterclockwise until the space between the mounting pawl and the bezel is greater than the panel thickness. Insert the meter in the panel cutout. Turn the mounting screws clockwise until the meter is securely mounted in the panel. Do not over tighten the mounting screws.

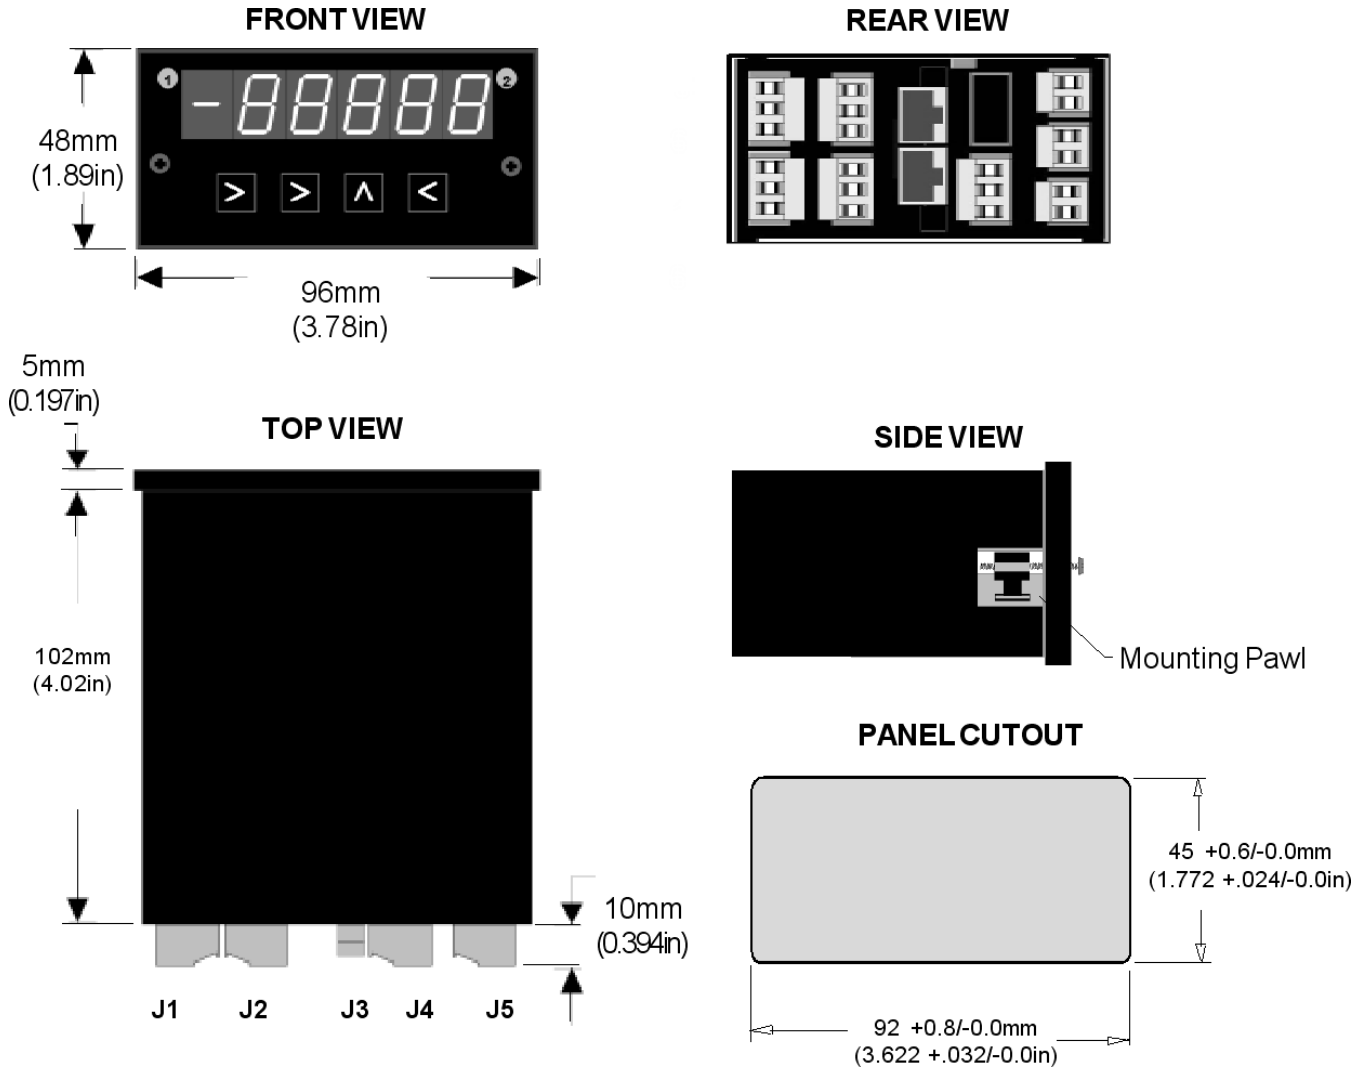

CONNECTORS, ALL MODELS


All models of the Micro Series uses UL/VDE rated screw terminals.

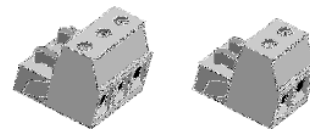

22. MECHANICAL ASSEMBLY & PANEL MOUNTING, MIGHTY-1C


REMOVING THE REAR PANEL

To remove the rear panel, first remove any connectors that are installed. Remove the 6 screws holding the back plate in place and pull the rear panel away from the case.

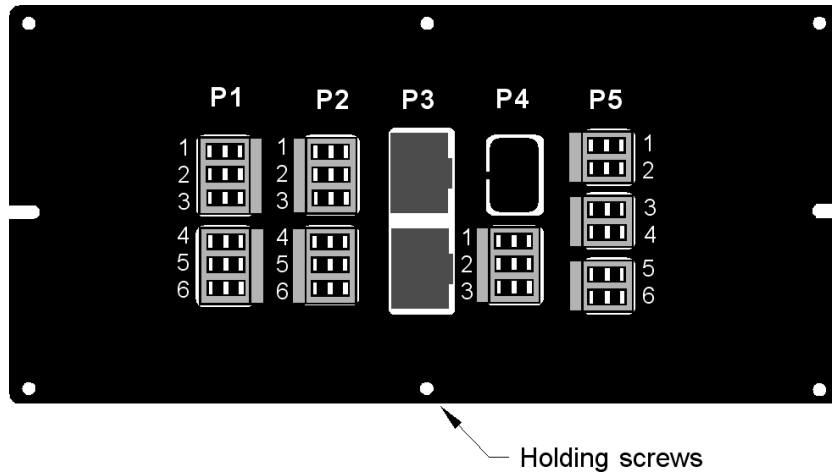

REMOVING THE METER FROM THE CASE

After removing the rear panel, the meter can be taken out of the case by carefully grasping the power supply board and signal conditioner board at the connectors and sliding the unit out the back of the case.

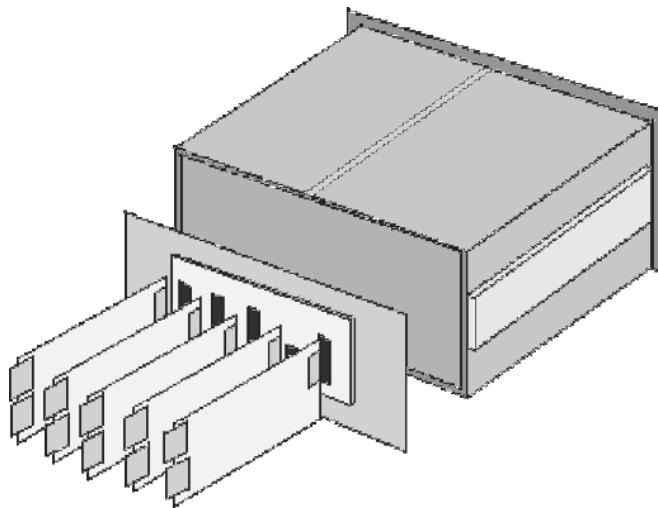


REASSEMBLING THE METER

Reverse the preceding procedures to reinstall the meter in the case. After the meter is in the case, align the board with the back plate holes and install and tighten the six back plate screws.

PANEL MOUNTING, MIGHTY-1C


The Mighty-1C is mounted to the panel by two sliding metal plates located on each side of the case. To mount the Mighty-1C into a panel, remove the two screws from the rear of the panel that hold the sliding plates. Remove the two plates. Slide the Mighty-1C into the panel cutout, replace the two sliding plates and their holding screws. Tighten the holding screws until the plates are firmly held against the rear of the panel.

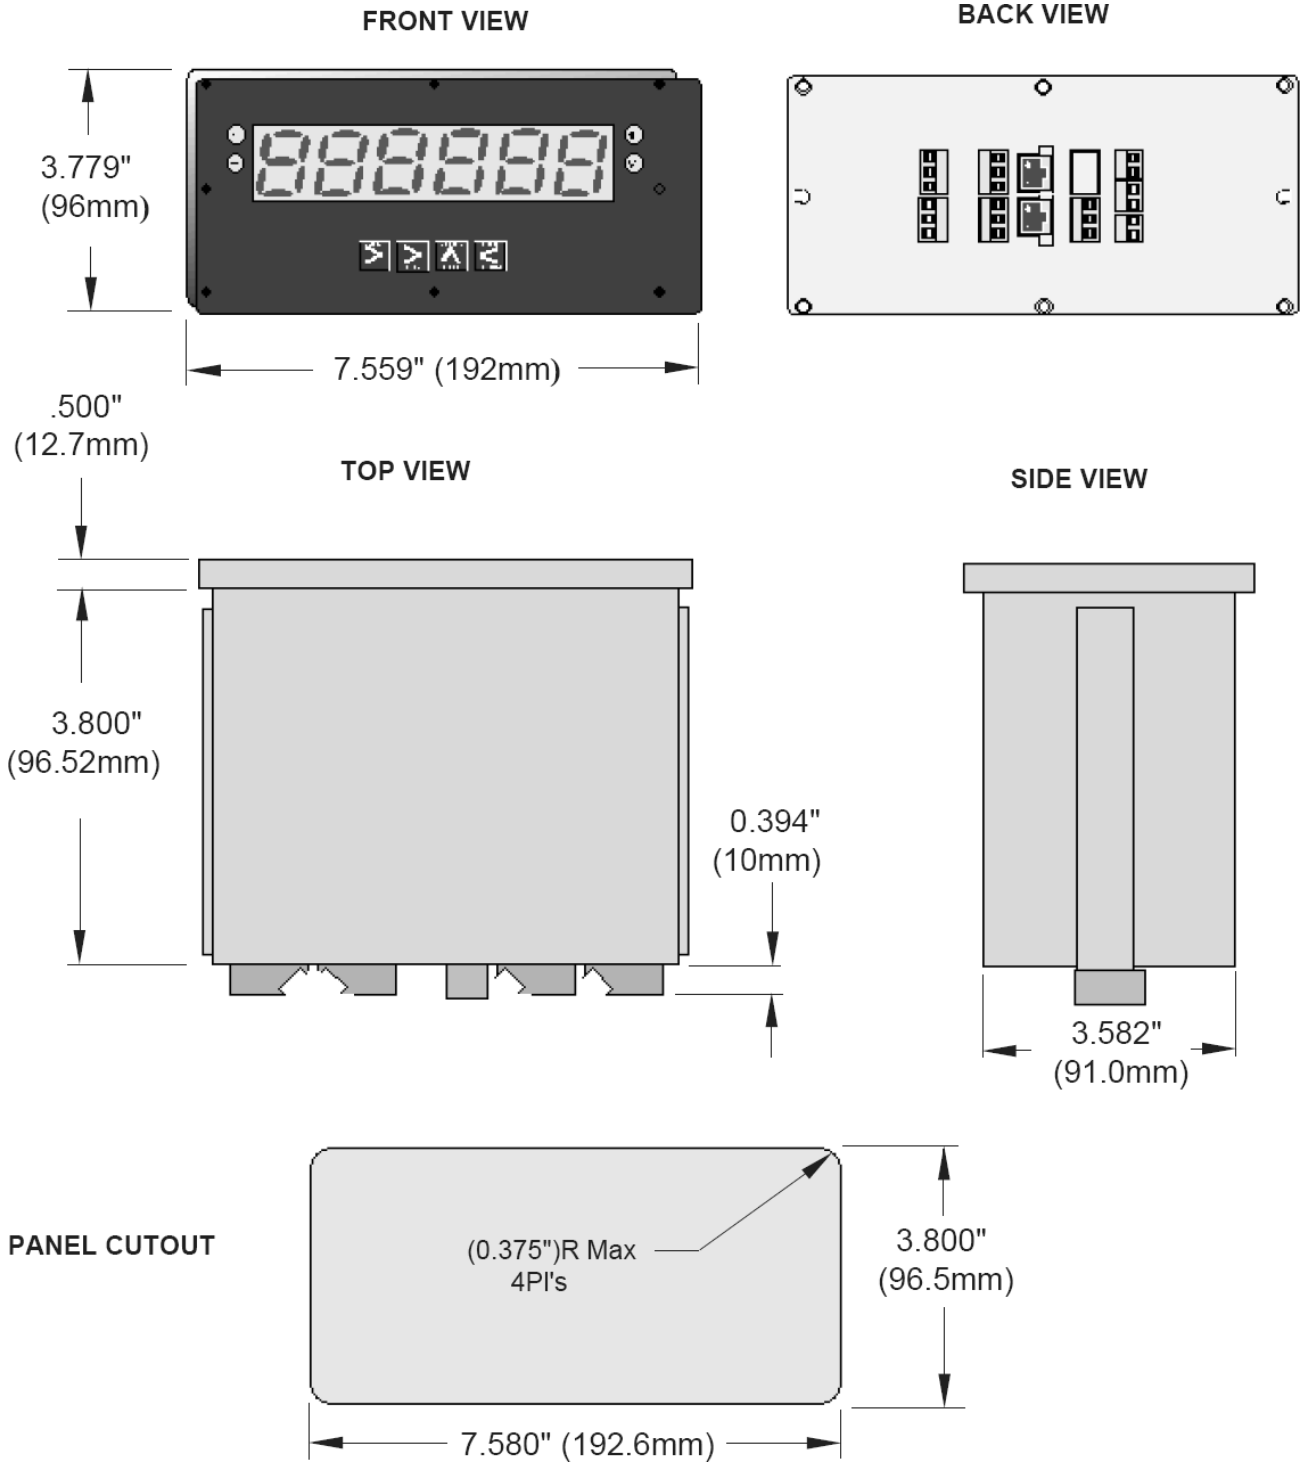

23. MECHANICAL ASSEMBLY & MOUNTING, MIGHTY-5C


OPENING THE CASE

To remove the display board assembly from the case, loosen the outer nut on the cable clamp located on the left side of the case so that power and signal cables are free to move. Remove the (16) rear panel screws and remove the rear panel. Remove the (16) 10-32 nuts using a 3/8" nut driver. Lift the entire display board assembly with all option boards from the enclosure while sliding all wiring through the cable clamp.

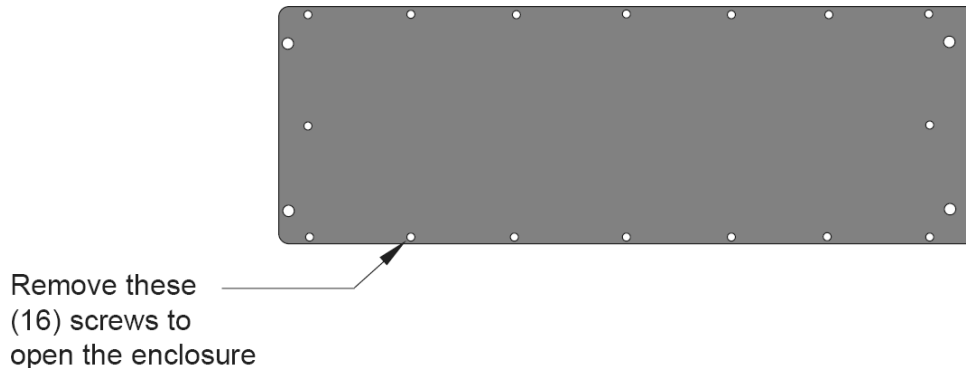

ACCESSING THE I/O CONNECTORS

After removing the display board assembly, all plug-in boards and their I/O connectors are accessible. Boards may be added or deleted by first removing the plug-in I/O connectors and then the (4) screws securing the module hold-down board.

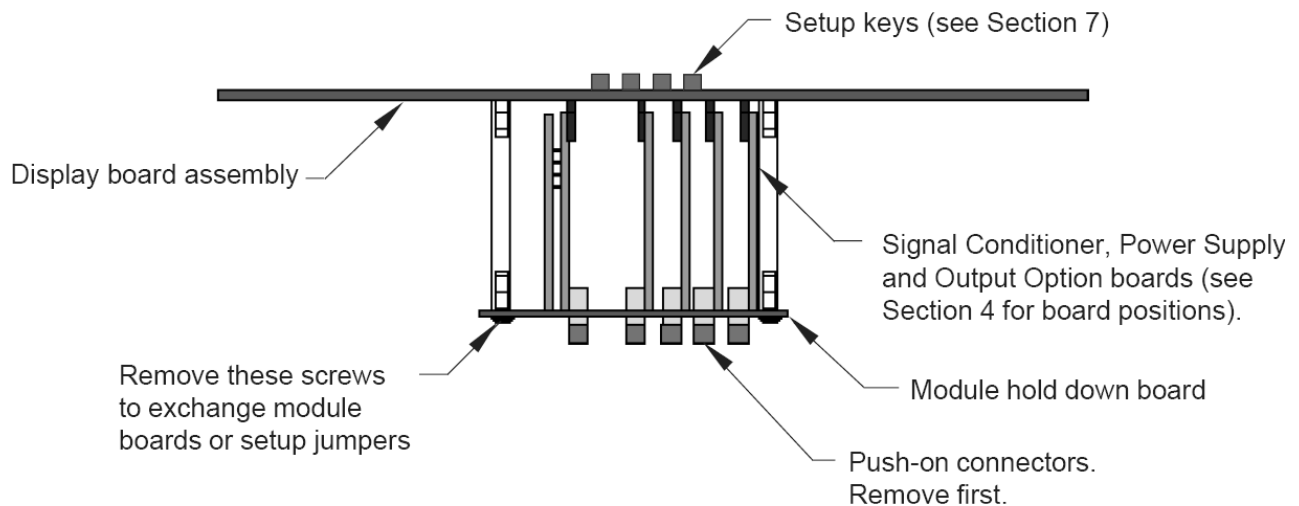


REASSEMBLING THE DISPLAY

Reverse the preceding procedures to reassemble the case. First install the display board assembly and the (16) 10-32 hex nuts (do not over tighten). Next install the back panel with the gasket in plane with the (16) 6-32 screws. Feed wiring through the cable clamp, and tighten the outer nut.


MOUNTING THE MIGHTY-5C

Depending on which mounting option was purchased, Mighty-5 displays may be mounted using the bale or the rear panel mounting holes.


FRONT VIEW (SURFACE MOUNT OPTION)

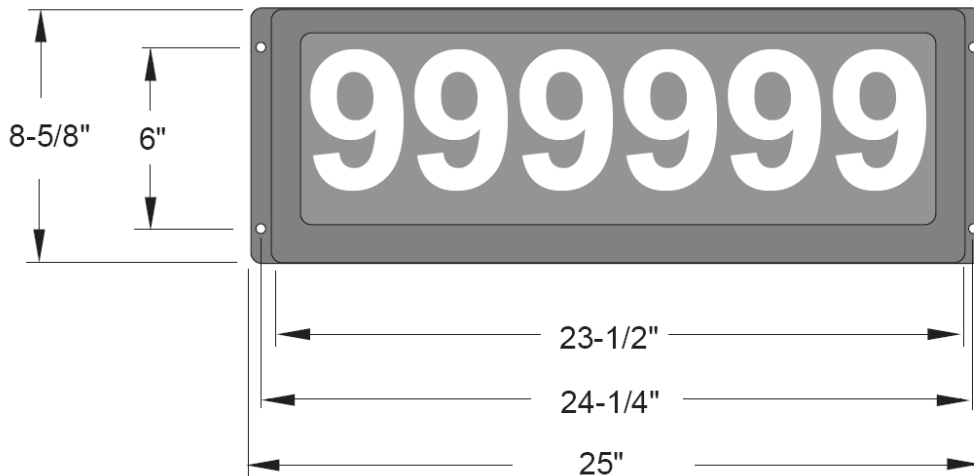


FRONT VIEW (BALE MOUNT)

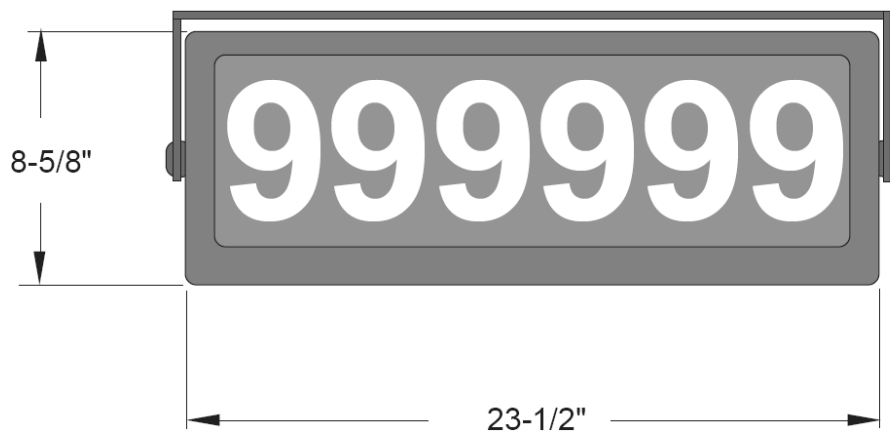

SIDE VIEW

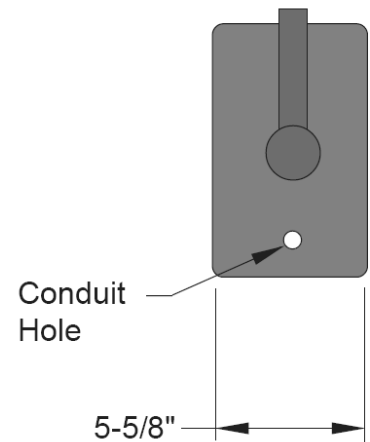

REAR VIEW (SURFACE MOUNT OPTION SHOWN)

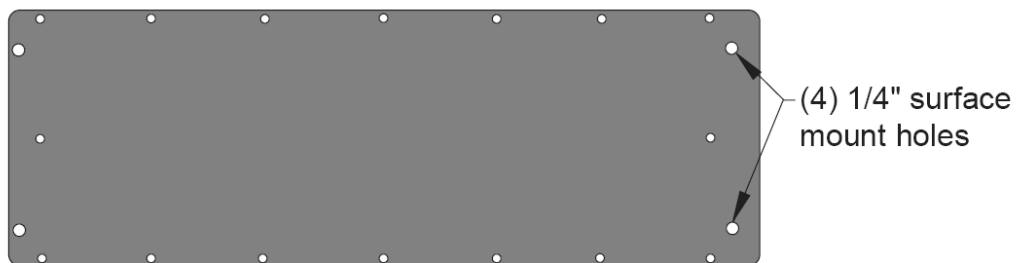

24. SPECIFICATIONS, MICRO-C, MIGHTY-1C, MIGHTY-5C

DISPLAY

Type, Micro-C..... 6 LED digits, 7-segment, 14.2 mm (0.56") high digits & 4 LED indicators
Type, Micro-1C..... 6 LED digits, 7-segment, 25.4 mm (1.0") high digits & 4 LED indicators
Type, Micro-5C..... 6 LED digits, 7-segment, 127 mm (5.0") high digits & 4 LED indicators
Digit Color..... Red or green for Micro-C, red for Mighty-1C & Mighty-5C
Display Range..... -999999 to +999999

CONVERSION (FREQUENCY INPUT)

Conversion Technique 1/period
Conversion Rate..... Gate Time + 30 ms + 2 signal periods (max)
Gate Time..... 0 to 199.99 sec (selectable)
Time Before Zero Output (Time-Out) 0 to 199.99 sec (selectable)
Output & Display Update Rate Same as conversion rate
Time Base Accuracy Calibrated to ± 2 ppm

INPUT ISOLATION

CMV from DC to 60 Hz..... Withstand 250Vac
Dielectric strength..... 3.5 kV ac for 5 sec, 2.3 kV ac for 1 min

DUAL CHANNEL SIGNAL CONDITIONER

Accuracy at 25°C..... ± 2 ppm
Tempco ± 1 ppm/degree C
Long-Term Drift of Crystal ± 5 ppm/year
Signal Types..... AC, NPN, PNP transistor outputs, contact closures, magnetic pickups
Max Pulse Rate 1 MHz on Channel A, 250 kHz on Channel B
Channel Isolation..... Channel A & channel B share common ground
Low Pass Filter..... 250 Hz or 30kHz (selectable)
Hysteresis..... 15 mV to 2.2 Vp-p (selectable)
Trigger level..... ± 15 mV to ± 1.7 V (selectable)
Debounce Circuitry..... 0, 3, 50 ms (selectable)

PROCESS RECEIVER & TOTALIZER SIGNAL CONDITIONER

Signal Levels..... 0-1 mA, 4-20 mA, 0-10 V (selectable)
Accuracy at 25°C..... $\pm 0.025\%$
Span Tempco $\pm 0.003\%$ of reading /°C
Zero Tempco $\pm 0.003\%$ of full scale /°C

QUADRATURE SIGNAL CONDITIONER

Signal Type Differential or single-ended quadrature
Transitions Monitored..... x1, x2 or x4
Max Pulse Rate 250 kHz at x1, 125 kHz at x2, 62.5 kHz at x4
Maximum Differential Signal Amplitude..... 14V
Conversion Technique for Rate..... 1/period
Conversion Time for Rate Gate time + 30 ms + 0-2 signal periods
Time Before Zero Output for Rate 0 to 199.99 sec (selectable)

ANALOG OUTPUT OPTION

Power to Analog Output Option.....	Powered by meter
Output Levels, Single Analog Output Option.....	0-20 mA, 4-20 mA, 0-10V, -10 to +10V
Output Levels, Dual Analog Output Option	0-20 mA, 4-20 mA, 0-10V
Voltage Compliance, 0-20 mA Output	12V (0-600 Ohm load)
Current Compliance, 0-10V Output	2 mA (5 kOhm or higher load)
Accuracy	Meter input accuracy $\pm 0.02\%$ of full scale analog output
Resolution	16 bit (1 part in 65,536)
Response Time	meter update rate
Scaling of Reading for Zero Output.....	-999,999 to +999,999
Scaling of Reading for Full Scale Output.....	-999,999 to +999,999
Isolation rating between signal common and analog output.....	250V ac
Insulation dielectric strength between signal common and analog output.....	3.5 kV ac for 5 sec, 2.3 kV ac for 1 min

Serial Interface Option (USB, RS232, RS485, RS485-Modbus boards)

Output Types.....	RS232, RS485, RS485-Modbus, USB
.....	USB-to-RS485 converter, Ethernet, Ethernet-to-RS485 converter
Power to Interface Option.....	Powered by meter
RS485 Wiring	Half or full duplex
Baud Rates.....	300, 600, 1200, 2400, 4800, 9600, 19200
Serial Protocols	Custom ASCII, Modbus RTU, Modbus ASCII (selectable)
Signal Levels.....	Meet RS232, RS485, USB, Ethernet standards
Isolation rating between signal common and serial I/O	250V ac
Insulation dielectric strength between signal common and serial I/O	3.5 kV ac for 5 sec, 2.3 kV ac for 1 min

Option Board Connectors:

RS232	Single RJ11 jack
RS485	Two RJ11 jacks (for daisy chaining with 6-wire data cables)
RS485 Modbus.....	Two RJ45 jacks (for daisy chaining with 8-wire data cables)
USB.....	USB type B plug
USB-to-RS485 converter.....	USB type B plug plus RJ11 jack to RS485 bus
Ethernet.....	Single RJ45 to Ethernet
Ethernet-to-RS485 converter.....	RJ45 jack to Ethernet plus RJ11 jack to RS485 bus

ENVIRONMENTAL

Operating Temperature	0°C to 55°C
Storage Temperature	-40°C to 85°C
Relative Humidity	95% from 0°C to 40°C, non-condensing
Case.....	NEMA-4X from front when panel mounted
Shock	10 G at 1 kHz, applied in X, Y, Z axes
Vibration	15 Hz to 150 Hz, 1 mm to 2 mm amplitude, 20 G max


25. GLOSSARY OF TERMS

Adaptive filter threshold

A threshold which causes an adaptive moving average filter to be reset to the latest reading when the accumulated difference between individual readings and the filtered reading exceeds that threshold. Adaptive moving average filtering allows a meter to respond rapidly to actual changes in signal while filtering out normal noise. The accumulated difference is also reset to zero when the latest reading has a different polarity than the filtered reading. A low adaptive filter threshold is normally selected. A high filter threshold should be selected if the signal has large transients.


Alarm, latched

An alarm which stays actuated until reset. Latched alarms can shut down machinery or a process when an operating limit has been exceeded, or maintain an alarm condition until acknowledged by an operator.

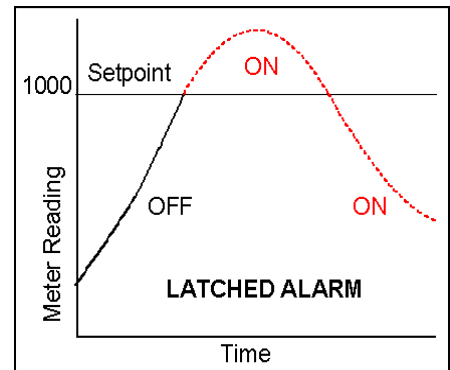

Alarm, non-latched

An alarm which changes state automatically when the reading rises above a specified limit and changes back automatically when the reading falls below a limit.

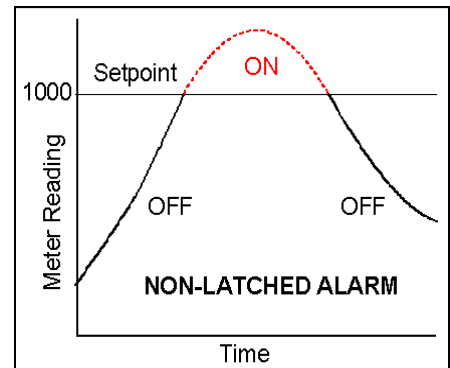

Autofilter

A selectable digital filter mode which automatically selects an appropriate moving average filter time constant for the encountered noise condition.

Batch control An operating mode of the Extended counter with relay board, where the counter is used to control repetitive fill operations by counting up from zero to a preset, or counting down from a preset to zero.

Calculated total

While most totals are based on direct pulse counts, certain totals are calculated as running totals based on displayed rate (e.g., Total A, Rate A). The totalizing process assumes that rate is displayed in units per second, such as 300 gallons per second, allowing a scale factor of 1 to be used. If the rate is not in units per second, a different scale factor has to be applied.

Coordinates of 2 points method

A scaling method where the coordinates of 2 points are entered. For a pulse rate input, the first entered point would be low frequency in Hz and low desired reading. The second entered point would be high frequency in Hz and high desired reading.

Counts The reading displayed on the meter ignoring the decimal point.

Custom ASCII protocol

A simplified, short protocol for use with panel meters, counters and timers. It allows 31 digital addresses. Not an industry-standard protocol, like the more complex *Modbus protocol*, which is also offered with these instruments.

Custom curve


A user-specified nonlinear relationship between the input signal and displayed reading. Custom curve linearization is available with the *Extended counter*. One way to supply the data is via a text file with up to 180 data points, which is processed on a PC using furnished software and is then downloaded into EEPROM via serial communications.

Cutoff

A programmable threshold in units of flow applicable to Total and Batch Control with the process receiver and totalizer signal conditioner. Flow rates below the cutoff, deemed to be zero offset errors, will not be totalized. Otherwise, small zero offset errors could result in a large error if accumulated over a long time.

Deviation band

A band in counts which controls relay action symmetrically around a *setpoint*. The relay actuates when the reading falls within the deviation band, and de-actuates when the reading falls (e.g., 50 counts) is set up around both sides of the setpoint to create a deviation band (e.g., 100 counts). Setting up a passband around a setpoint is often used for component testing. Deviation limits are programmed by entering menu item *dEU1b* for Alarm 1 and *dEU2b* for Alarm 2. The deviation band will be equal to two limits.

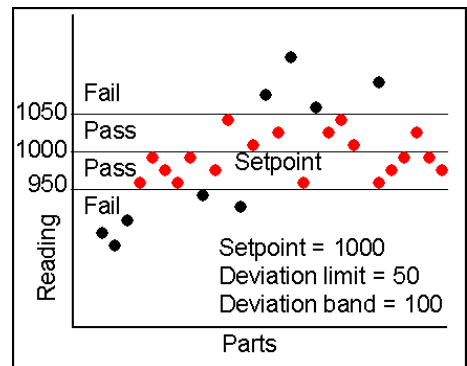

Duty cycle

ON or OFF period of square waves as a percentage of total period over a *gate time* which is selectable from 10 ms to 199.99 sec. With the dual input signal conditioner, the same signal is applied to Channels A and B. Duty cycle can then be read out with resolution to 0.01%.

Extended counter

A counter with an enhanced microcomputer main board that provides added capabilities, such as *custom curve* linearization of nonlinear inputs and display of rate of change from successive readings.

Frequency

Rate in cycles per second or Hertz (Hz). In rate meter mode, a scale factor of 1 and offset of 0 cause a display directly in Hertz with resolution of 1 Hz. To increase or decrease resolution, increase or decrease the scale factor.

Gate Time


A user-specified time interval from 10 ms to 199.99 sec over which the meter measures frequency. The meter times an integral number of signal periods over the gate time, and then taking the inverse of period. The display update rate of the meter is gate time + 1 period + 30 ms. Selecting a longer gate time produces a more stable reading as more cycles are averaged, but slows

down the update rate. At very low frequencies, the update rate of the meter is controlled by the period. In totalizing mode, the gate is always open, but the gate time setting still determines the update rate of the meter. See also *Time-out* or *Time before zero output*.

Jumper A push-on component which provides a short between two adjacent posts on a circuit board. Jumpers are used to configure the circuit board, for example for different signal ranges. Jumper positions are not sensed by the meter software.

Hysteresis band

A band in counts which controls relay action symmetrically around a setpoint. The relay closes (or opens) when the reading goes above the setpoint plus one hysteresis limit, and opens (or closes) when the reading falls below the setpoint less one hysteresis limit. A narrow hysteresis band is often used to minimize relay chatter around a setpoint due to electrical noise or signal feedback caused by load switching. A wide hysteresis band can be used for control applications. Hysteresis limits are programmed by entering menu item dEU1H for Alarm 1 and dEU2H for Alarm 2. The hysteresis band will be equal to two hysteresis limits.

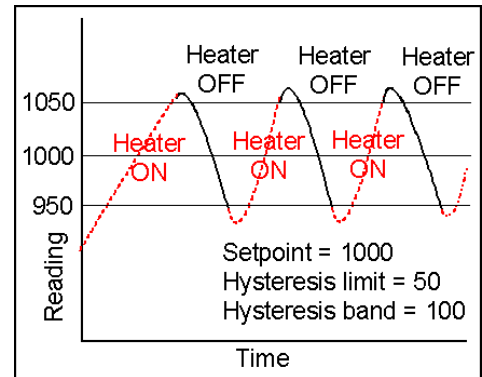

Item # Also called Display Item. A numerical value in the meter available for display under control of a front panel key or serial communications. For example, in the A+B totalizer mode, the sum of A+B is Item #1, Total A is Item #2, and Total B is Item #3. When the meter is reset, Item #1 is always displayed. To view another Item, press the *RESET* key. For Item 1, the yellow View "V" LED is unlit. For Item 2, the "V" LED is lit. For Item 3 the "V" LED flashes.

Menu mode Meter programming mode used for input and range selection, setup, and configuration. Entered into from the Run mode by pressing the MENU key. The Menu mode can be locked out completely by a jumper on the power supply board.

Meter Hold A rear panel input which freezes the meter display and all meter outputs while that input is tied to logic ground by a switch or is held at 0V (logic level true). The meter will resume operation when the input is disconnected or is held at +5V (logic level false).

Modbus An industry-standard serial communications protocol which allows devices by different manufacturers to be digitally addressed by a PC on the same communication line, with up to 247 digital addresses. More complex than the *Custom ASCII* protocol, which is also supported by these meters.

Moving average filter

A digital filter mode which displays a moving average of readings. Eight moving average modes are selectable with the following equivalent RC time constants: no filter, 0.1 sec, 0.2 sec, 0.4 sec, 0.8 sec, 1.6 sec, 3.2 sec, 6.4 sec.

Multiplier	A constant multiplier from 0.00001 to 100000 (in decade steps) that is combined with a <i>scale factor</i> from 0.00000 to 9.99999 (fixed decimal point and settable digits) to go from frequency in Hz to rate in engineering units such as gallons per minute or from pulse counts to total in engineering units, such as gallons. The combination of a 6-digit scale factor with a multiplier provides more dynamic range with no loss of resolution than could be achieved with a 6-digit scale factor only.
Offset	A constant adder to the displayed reading. This may be any value from -999,999 to 999,99. The offset may be used as a preset in the totalize mode, where the total can be counted down from the preset to zero.
Peak display	The maximum (or most positive) reading since that value was last reset. Reset can be via the meter front panel, an external input, or a software command. The displayed value can reflect the filtered or unfiltered readings.
Period	The time of one complete cycle of the input frequency. A scale factor of 1 and multiplier of 1 produce a display in microseconds.
Phase angle	The lead or lag in degrees between two AC signals of the same frequency. With the signals applied to Channels A and B of the dual input signal conditioner, phase angle can be displayed from -180° to +180° with resolution to 0.01°.
Process signal	An analog signal whose display requires setup of <i>scale</i> and <i>offset</i> for display in engineering units (such as psi). The process receiver & totalizer signal conditioner accepts 0-1 mA, 4-20 mA or 0-10 V process signals.
Quadrature	A quadrature encoder generates 2 signals that are 90° out of phase based on the position of a rotor or linear scale. The phase relationship of these signals depends on the direction of rotation of the encoder. The meter counts up or down depending on the phase. Quadrature is used for very accurate determination of length or position.
Rate	Same as frequency, except that a <i>scale factor</i> and <i>multiplier</i> have been applied to convert the reading in Hz to a reading in engineering units, such as revolutions per minute or gallons per hour.
Remote Display	A display mode which allows the meter to serve as a 6-digit remote display when connected to a computer or other meter via a serial communications link. A serial communications option board is required in the meter.
Reset	Two types of Reset are applicable to counter/timer operation: <ul style="list-style-type: none"> ▪ Peak and Valley Reset. Achieved by simultaneously pressing the <i>RESET</i> and <i>PEAK</i> keys. ▪ Latched Alarm Reset. Achieved by simultaneously pressing the <i>RESET</i> and <i>ALARMS</i> keys.
Resolution	A menu item which controls the resolution of arithmetic functions (A+B, A-B, AxB, A/B, A/B-1) of Grand Total in batch mode. It multiplies the displayed value

by a factor of 0.00001 to 100,000 in decade steps. The decimal point then has to be moved appropriately.

RS485 half duplex

Serial communications implemented with two wires, allowing data transmission in both directions, but not simultaneously.

RS485 full duplex

Serial communications implemented with four wires, allowing data transmission in two directions simultaneously.

Scale factor A constant multiplier used to go from a raw reading in pulses per second or total pulses to a reading in engineering units. The scale factor consists of a scale value from 0.00000 to 9.99999 (fixed decimal point, settable digits) and a scale multiplier from 0.00001 to 100000 (in decade steps)..

Scaling, coordinates of 2 points method

A scaling method where four numbers are entered manually: low input, desired reading at low input; high input, and desired reading at high input. The meter then applies a straight line fit. The decimal point is set by the separate *dEC.Pt1* menu item.

Scaling, scale and offset method

A scaling method where *scale* and *offset* are entered manually.

Setpoint

A value compared to the reading to determine the state of a relay. Used interchangeably with “alarm setpoint.” The relay action can be by *latching* or *non-latching*, utilize a *hysteresis band*, or a *deviation band*. Hysteresis bands and deviation bands are specified by two symmetrical limits around the *setpoint*.

Stopwatch mode

A timing operating mode for single events. Stopwatch A-to-A measures time between the same positive (or negative) edge of start and stop pulses applied to Channel A. Stopwatch A-to-B measures time between a start pulse on Channel A and a stop pulse on Channel B.

Time interval mode

An timing mode for the average duration of repetitive events over a programmed gate time. Time may be measured from the leading or trailing edge of pulses applied to Channel A to the leading or trailing edge of pulses applied to Channel B.

Time-out (or time before zero output)

The time the meter waits for a signal to start or end a conversion. If pulses are not received before the time-out ends, the meter reads zero. The longer the time-out, the lower the minimum frequency the meter can display. This term is also used for the programmable time that the batch relay stays de-energized at the end of a batch cycle.

26. WARRANTY

Electro-Numerics, Inc. warrants these products to be free of defects in materials and workmanship for two years from the date of shipment to the original customer. This warranty may be considered as unconditional provided that, in the opinion of Electro-Numerics, the equipment has not been mechanically, environmentally, or electrically abused and has been installed, maintained and operated within the limits of rated or normal usage. Defective products must be sent, transportation charges prepaid, with notice of the defect, to our plant in Temecula CA.

This warranty is limited, at the option of Electro-Numerics, Inc. to repair, replacement, or an appropriate credit adjustment not to exceed the original equipment sales price. All warranty freight charges are F.O.B. our plant, Temecula, CA.

Electro-Numerics assumes no responsibility in connection with the sale of its products beyond that stated above and is not responsible for any incidental or consequential loss or damage which might result from a failure of any Electro-Numerics, Inc. product.

27. REPAIR POLICY

Direct all warranty and out-of-warranty requests/inquiries to Electro-Numerics, Inc., Customer Service Repair Dept., Tel: 800-854-8530 (USA) or 951-699-2437, by Fax to: 951-695-7246 or by email to sales@electronumerics.com. Repair work will be handled at the factory or an authorized service center. All items sent in for service are subject to a minimum evaluation charge of \$65 in the event that the product is found to be out-of-warranty or, if under warranty, not in need of additional service. Out-of-warranty service and repair charges will be quoted on a case-by-case basis. All repaired products will be shipped FOB, Temecula, CA.

28. ELECTRO-NUMERICS, INC. PRODUCTS

Electro-Numerics family of Digital Panel Meters and Large Digit Indicators are high quality, accurate, solid state instruments designed for years of trouble-free operation. Over 30 years of digital instrumentation experience has resulted in a series of displays recognized in the field as reliable, well designed instruments. From our compact sized DPM's with 0.6" LEDs, to our Large Digit indicators with 1", 2-1/4", 4" and 5" LEDs or 4", 6" and 9" tall electromagnetic digits, we cover most applications in process measurement and display.

In addition to our digital display products, Electro-Numerics also manufactures magnetic components including magnetic (VR) sensors, coils, transformers, ballasts and plug-in power supplies. Please see www.electronumerics.com.



ELECTRO-NUMERICS, INC.

42213 Sarah Way, Temecula CA 92590 U.S.A.

Tel: 800-854-8530 (U.S.A) or 951-699-2437

Fax: 951-695-7246, Email: sales@electronumerics.com

URL: www.electronumerics.com